



Manuals.plus /

- › AskCat /
- › AskCat Baby Bouncer Instruction Manual

AskCat Baby Bouncer

AskCat Baby Bouncer Instruction Manual

Model: Baby Bouncer

INTRODUCTION

This instruction manual provides essential information for the safe and proper use, assembly, and maintenance of your AskCat Baby Bouncer. Please read this manual thoroughly before use and retain it for future reference. The AskCat Baby Bouncer is designed to provide a comfortable and engaging space for infants aged 0-6 months, supporting weights from 6 to 20 lbs. It features soothing vibrations, gentle music, and engaging toys to aid in your baby's development and relaxation.

SAFETY INFORMATION

WARNING: Always ensure your baby is securely fastened in the harness. Never leave your child unattended in the bouncer. Do not use the bouncer if any parts are damaged or missing. Keep away from open flames and heat sources. Always place the bouncer on a flat, stable surface. This product is not intended for prolonged sleep. Discontinue use when the child can sit up unassisted or reaches the maximum weight limit of 20 lbs, whichever comes first.



Figure 1: The AskCat Baby Bouncer, highlighting the secure harness and toy bar for infant engagement.

PARTS LIST

Before assembly, ensure all parts are present and undamaged:

- Bouncer Frame (main support structure)
- Fabric Seat Cover (plush seating area)
- Harness System (adjustable safety straps)
- Toy Bar (removable arch with hanging toys)
- Head Support Cushion (removable for smaller infants)
- Vibration Unit (battery-operated, located under the seat)



Figure 2: All components of the bouncer assembled, ready for use.

SETUP AND ASSEMBLY

Follow these steps to assemble your AskCat Baby Bouncer:

1. **Unfold the Frame:** Carefully unfold the bouncer frame until it locks securely into place. Ensure all locking mechanisms are engaged.
2. **Attach the Fabric Seat:** Slide the fabric seat cover onto the frame, ensuring the elastic edges fit snugly around the frame's perimeter. Secure any clips or loops as indicated.
3. **Install the Harness:** Thread the harness straps through the designated slots in the fabric seat. Adjust the straps so they are snug but not too tight, allowing for comfortable movement.
4. **Attach Head Support (Optional):** For newborns and smaller infants, attach the head support cushion using the Velcro fasteners. This provides additional comfort and stability.
5. **Install Toy Bar:** Insert the ends of the toy bar into the designated slots on the bouncer frame until they click into place. Ensure it is firmly attached. The toy bar is designed to be easily removable for convenience.

6. **Insert Batteries:** Locate the battery compartment on the underside of the bouncer. Insert 2 x "AA" 1.5V batteries (not included) for the vibration and music features. Ensure correct polarity.



**Requires 2 x "AA" 1.5 Batteries
(Not Included)**

Figure 3: Location of the battery compartment for the vibration and music unit.

senses. Encourage your baby to reach for and interact with them.

- **Portability:** The bouncer's lightweight and foldable design allows for easy movement between rooms or for transport during outings. Always remove your baby before moving the bouncer.



Figure 5: A parent engaging with a baby in the bouncer, showcasing the interactive toy bar.

MAINTENANCE AND CARE

Proper care ensures the longevity and hygiene of your bouncer:

- **Cleaning the Fabric Seat:** The fabric seat cover is machine washable or hand washable. Remove it from the frame by detaching the Velcro fasteners and unthreading the harness. Wash with mild detergent on a gentle cycle or by hand. Air dry thoroughly before reattaching.
- **Cleaning the Frame and Toys:** Wipe down the bouncer frame, plastic components, and toys with a damp cloth and mild soap. Rinse thoroughly and dry completely. Do not immerse the vibration unit in water.
- **Battery Replacement:** Replace batteries when the vibration or music features weaken or stop functioning. Always use new "AA" 1.5V batteries and dispose of old batteries responsibly.

- **Storage:** When not in use, fold the bouncer for compact storage. Store in a clean, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Vibration/Music not working	Batteries are dead or incorrectly installed.	Replace batteries with new "AA" 1.5V batteries, ensuring correct polarity.
Bouncer feels unstable	Frame not fully locked or placed on an uneven surface.	Ensure the frame is fully unfolded and locked. Place the bouncer on a flat, stable surface.
Toy bar detaches easily	Not properly secured in slots.	Re-insert the toy bar firmly into the slots until it clicks into place.

SPECIFICATIONS

Brand: AskCat

Model: Baby Bouncer

Product Dimensions: 21.26 x 19.29 x 16.14 inches

Item Weight: 3.75 pounds

Maximum Weight Recommendation: 20 lbs

Recommended Age: 0-6 Months

Material Type: Plastic, Metal, Cotton

Care Instructions: Machine Washable, Hand Washable

Batteries Required: No (for bouncer operation, but 2 "AA" 1.5V for vibration/music unit)

Portability: Yes

WARRANTY AND SUPPORT

AskCat is committed to providing high-quality products and excellent customer service. We offer comprehensive after-sales service to ensure your satisfaction and peace of mind. For any product inquiries, issues, or support needs, please contact our professional customer service team. We are ready to assist you and promise quality assurance, offering replacement or refund services if necessary. Please refer to your purchase documentation for specific warranty details. For further assistance, visit the official AskCat store: [AskCat Store on Amazon](#)