

## AskCat Baby Swing Blue

# AskCat Baby Bouncer Soothing Infant Seat Instruction Manual

Model: Baby Swing Blue

## IMPORTANT SAFETY INFORMATION

---

Please read all instructions before assembly and use of the AskCat Baby Bouncer. Keep this manual for future reference.

- **Age and Weight Limit:** This baby bouncer is designed for infants aged 0-6 months and supports a weight range of 6-20 pounds (2.7-9 kg). Do not use for children outside this range.
- **Floor Use Only:** Always place the bouncer on a flat, level, and stable floor surface. Never place it on elevated surfaces such as tables, counters, or beds, as this poses a fall hazard.
- **Secure Placement:** The bouncer is equipped with rubber slip-proof feet to ensure stability. Verify that the feet are firmly gripping the floor before placing your baby in the bouncer.
- **Safety Harness:** Always secure your baby with the 3-point adjustable safety harness. Ensure the harness is snug but comfortable. The harness features a protective cover over the snaps to prevent accidental pinching of your baby's fingers.
- **Supervision:** Never leave your child unattended in the bouncer. Constant supervision is required.
- **Toy Bar Safety:** The removable toy bar and hanging toys are for entertainment and development. Ensure they are securely attached when in use. Regularly inspect toys for any signs of wear or damage.
- **Battery Safety:** If using the vibration and music features, ensure batteries are inserted correctly. Do not mix old and new batteries. Remove batteries if the bouncer will not be used for an extended period.
- **CPSIA Certified:** This product is CPSIA certified for safety.

## PRODUCT OVERVIEW

---

The AskCat Baby Bouncer is a multi-functional soothing infant seat designed for comfort, safety, and

entertainment. It features gentle vibrations, calming melodies, and an engaging toy bar to stimulate your baby's senses.



Figure 1: AskCat Baby Bouncer - Space Astronaut Theme

### Key Features:

- **Soothing Vibration & Calming Melodies:** Helps relax and comfort your baby. (Requires 2 x AA 1.5V batteries, not included).
- **Portable & Foldable Design:** Lightweight and easy to transport for indoor and outdoor use.
- **Animal-Themed Toy Dolls:** Engaging toys that aid in visual and tactile development.
- **Comfortable & Secure Seating:** Plush seat with a 3-point adjustable safety harness.
- **Durable Construction:** Made from plastic, metal, and cotton materials.



Figure 2: Baby-Friendly Features: Washable, Max Weight 20 lbs, Max Age 6 Months.

## SETUP AND ASSEMBLY

The AskCat Baby Bouncer requires minimal assembly. Follow these steps to set up your bouncer:

1. **Unpack Components:** Carefully remove all parts from the packaging. Ensure all components are present: bouncer frame, fabric seat, and toy bar.
2. **Assemble Frame:** Connect the frame pieces as per the included diagram. Ensure all connections click securely into place. The frame is designed for stability on flat surfaces.
3. **Attach Fabric Seat:** Drape the fabric seat over the assembled frame, ensuring it is properly aligned and secured to all attachment points.
4. **Install Batteries (Optional):** Locate the battery compartment for the vibration and music unit (typically on the underside of the bouncer). Insert 2 x AA 1.5V batteries, observing polarity. Close the compartment securely.
5. **Attach Toy Bar:** Slide the removable toy bar into the designated slots on each side of the bouncer frame until it clicks into place. The toy bar is adjustable and can be moved out of the way or positioned closer to the baby.



Figure 3: Assembly Overview of the AskCat Baby Bouncer.



Figure 4: Battery Compartment for Vibration and Music Unit.

### Assembly and Features Demonstration Video:

Your browser does not support the video tag.

Video 1: A detailed demonstration of the AskCat Baby Bouncer's assembly, safety harness usage, vibration, music features, and toy bar adjustability. The video highlights the non-slip feet and the protective cover on the harness snaps.

### OPERATING INSTRUCTIONS

1. **Placing Your Baby:** Gently place your baby into the bouncer seat. Ensure their head is comfortably supported.
2. **Securing the Harness:** Bring the harness straps over your baby's shoulders and between their legs. Connect the buckles securely. Adjust the straps to ensure a snug fit, preventing your baby from slipping out. The protective cover over the snaps helps prevent pinching.
3. **Activating Vibration and Music:** Locate the control unit (usually at the front base of the bouncer). Press the power button to activate the soothing vibration. Press the music button to play calming melodies. You can turn these features on or off independently.
4. **Adjusting Toy Bar:** The toy bar can be rotated or removed to allow for easy access to your baby or to change the play angle. The hanging toys are also adjustable.

5. **Bouncing Motion:** The bouncer is designed to gently bounce with your baby's natural movements or with a gentle push from a caregiver.



**Requires 2 x "AA" 1.5 Batteries  
(Not Included)**

Figure 5: Control Panel for Soothing Vibrations and Calming Melodies.



Figure 6: Secure 3-Point Harness System.

## MAINTENANCE

Proper maintenance ensures the longevity and hygiene of your AskCat Baby Bouncer.

- **Cleaning the Fabric Seat:** The fabric seat is both machine washable and hand washable. For machine washing, use a gentle cycle with cold water and mild detergent. Air dry or tumble dry on low heat. Do not bleach.
- **Cleaning the Frame:** Wipe down the plastic and metal parts of the frame with a damp cloth and mild soap. Rinse thoroughly and dry completely before storage or next use.
- **Toy Cleaning:** Wipe toys with a damp cloth and mild soap. Do not immerse electronic components in water.
- **Storage:** When not in use, the bouncer can be folded for compact storage. Store in a clean, dry place away from direct sunlight.

## TROUBLESHOOTING

Problem	Possible Cause / Solution
---------	---------------------------

Problem	Possible Cause / Solution
Vibration/Music not working	<ul style="list-style-type: none"> <li>Batteries are dead or incorrectly installed. Replace with fresh AA batteries, ensuring correct polarity.</li> <li>Power switch is off. Ensure the power switch on the control unit is in the "ON" position.</li> </ul>
Bouncer slides on floor	<ul style="list-style-type: none"> <li>Rubber feet are dirty or worn. Clean the rubber feet. If worn, contact customer support for replacement parts.</li> <li>Surface is too slippery. Ensure the bouncer is placed on a non-slip surface.</li> </ul>
Harness is difficult to buckle/unbuckle	<ul style="list-style-type: none"> <li>Buckle mechanism may be obstructed. Check for any debris or fabric caught in the buckle.</li> <li>Ensure the protective cover is properly aligned when buckling.</li> </ul>

## SPECIFICATIONS

Attribute	Detail
Product Dimensions	21.26"D x 19.29"W x 16.14"H
Item Model Number	Baby Swing Blue
Maximum Weight Recommendation	20 Pounds (9 kg)
Recommended Age	0-6 Months
Material Type	Plastic, Metal, Cotton
Care Instructions	Machine Washable, Hand Washable
Batteries Required	Yes (2 x AA 1.5V, not included for vibration/music)
Is Portable	Yes
Item Weight	3.75 pounds (1.7 kg)
Country of Origin	China

## WARRANTY AND SUPPORT

AskCat provides comprehensive after-sales service to ensure your satisfaction and peace of mind. Our professional customer service team is always ready to assist with any product inquiries or issues.

- Quality Assurance:** We promise quality assurance for our products.
- Replacement or Refund:** We offer replacement or refund services if necessary, ensuring a worry-

free shopping experience.

- For support, please visit the [AskCat Store on Amazon](#) or contact customer service through your purchase platform.