



Manuals.plus /

› AskCat /

› SG2302 Portable Baby Swing for Newborn, Baby Rocker for Infants, Baby Bouncer Seat Folds Easy with Adaptable Speed, 0-6 Months 6-20 lbs Indoor & Outdoor Use Grey

AskCat Baby Swing Grey

AskCat SG2302 Portable Baby Swing User Manual

Model: SG2302 / Baby Swing Grey

INTRODUCTION

Thank you for choosing the AskCat SG2302 Portable Baby Swing. This baby swing is designed to provide a safe, comfortable, and soothing environment for your newborn and infant. It features adaptable speed settings and a foldable design for easy indoor and outdoor use. This manual provides important information on assembly, operation, maintenance, and safety precautions to ensure proper use of your baby swing.



Image: The AskCat SG2302 Portable Baby Swing in grey, featuring a sturdy frame, comfortable seat, and overhead toy bar.

IMPORTANT SAFETY INFORMATION

Please read all instructions before assembly and use of the baby swing. Keep this manual for future reference. Failure to follow these warnings and instructions could result in serious injury or death.

- **WARNING:** Never leave child unattended.
- **WARNING:** This product is intended for infants from 0-6 months and weighing between 6-20 lbs (3-9 kg). Do not use for children who can sit up unassisted or attempt to climb out.
- **WARNING:** Always use the restraint system. Adjust to fit snugly.
- **WARNING:** Do not use this product if it is damaged or broken.
- **WARNING:** Do not move or lift the product with the child in it.
- **WARNING:** Suffocation Hazard: Never use the swing on a soft surface (bed, sofa, cushion), as the swing can tip over and cause suffocation.

- **WARNING:** Entanglement Hazard: Keep cords and strings away from the child.
- Ensure the swing is placed on a flat, level surface.
- Keep away from heat sources, open flames, and direct sunlight.
- Only use accessories and replacement parts approved by the manufacturer.

PARTS LIST

Before assembly, ensure all parts are present and undamaged. If any parts are missing or damaged, do not use the product and contact customer service.

- Main Frame (Metal)
- Seat Unit with Harness (Plastic, Fabric)
- Overhead Toy Bar with Toys
- Control Unit
- Power Adapter (if included, or specify battery requirement)
- Instruction Manual

SETUP AND ASSEMBLY

Assembly is required for this product. Please follow these steps carefully.

1. **Unpack Components:** Carefully remove all parts from the packaging.
2. **Assemble Frame:** Connect the metal frame components as indicated in the diagrams. Ensure all connections click securely into place.
3. **Attach Seat Unit:** Secure the seat unit to the assembled frame. Verify that the seat is firmly attached and cannot be easily dislodged.
4. **Install Toy Bar:** Attach the overhead toy bar to the designated slots on the frame.
5. **Insert Batteries:** The swing requires 4 x "AA" 1.5V batteries (not included) for operation. Locate the battery compartment on the control unit, insert batteries with correct polarity, and close the cover.



**Requires 4 x "AA" 1.5 Batteries
(Not Included)**

Image: Close-up view of the control unit showing the battery compartment, which requires 4 "AA" 1.5V batteries (not included).

6. **Check Stability:** Before placing a child in the swing, gently push and pull on the frame to ensure it is stable and all connections are secure.

OPERATING INSTRUCTIONS

Familiarize yourself with the control unit and its functions.



Image: A parent gently interacting with an infant seated comfortably in the AskCat Portable Baby Swing, demonstrating typical use.

Placing Your Child in the Swing:

1. Ensure the swing is stationary and on a flat surface.
2. Unbuckle the harness.
3. Carefully place your child in the seat.
4. Fasten the harness securely, ensuring it is snug but not too tight. Adjust shoulder straps as needed.

Using the Control Unit:

- **Power Button:** Press to turn the swing ON or OFF.
- **Speed Adjustment:** Use the speed buttons to select your desired swing speed. The swing offers adaptable speed settings to suit your child's preference.
- **Timer Function:** (If applicable) Some models may include a timer. Refer to the control unit markings for specific timer options.

- **Melody/Sound:** (If applicable) Press the music button to play soothing melodies. Press again to cycle through sounds or turn off.



Image: A baby comfortably seated and smiling in the AskCat Portable Baby Swing, showcasing the product in use.

Folding for Storage/Portability:

The swing is designed to fold easily for storage or transport. Locate the folding mechanisms on the frame (usually buttons or levers) and follow the instructions to collapse the swing. Ensure it is fully locked in the folded position before moving.

MAINTENANCE AND CARE

- **Cleaning Fabric:** The seat pad and head support can typically be removed for cleaning. Refer to the care label on the fabric for specific washing instructions (e.g., machine wash cold, gentle cycle, no bleach, tumble dry low).
- **Cleaning Frame:** Wipe the metal and plastic parts of the frame with a damp cloth and mild soap. Do not use abrasive cleaners or solvents.

- **Battery Care:** Remove batteries if the swing will not be used for an extended period. Do not mix old and new batteries, or different types of batteries.
- **Storage:** Store the swing in a clean, dry place away from direct sunlight and extreme temperatures.
- **Regular Checks:** Periodically check all screws, bolts, and fasteners to ensure they are tight and secure. Inspect the fabric for tears or damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Swing does not turn on.	Batteries are dead or incorrectly installed.	Replace batteries with new ones, ensuring correct polarity.
Swing motion is weak or inconsistent.	Low battery power; child's weight exceeds limit.	Replace batteries. Ensure child's weight is within 6-20 lbs (3-9 kg).
Unusual noises during operation.	Loose connections; foreign object obstructing mechanism.	Check all assembly points for tightness. Inspect for any obstructions. Discontinue use if noise persists.
Swing is unstable.	Not assembled correctly; placed on uneven surface.	Re-check all assembly steps. Ensure swing is on a flat, level surface.

SPECIFICATIONS

- **Model:** SG2302 / Baby Swing Grey
- **Brand:** AskCat
- **Color:** Grey
- **Material:** Plastic, Metal
- **Frame Material:** Metal
- **Finish Type:** Grey
- **Recommended Age:** 0-6 Months
- **Weight Capacity:** 6-20 lbs (3-9 kg)
- **Item Weight:** 3 kg 920 g (approx. 8.64 lbs)
- **Item Dimensions (LxWxH):** 55.5 x 62.5 x 71.5 Centimeters (approx. 21.8 x 24.6 x 28.1 inches)
- **Assembly Required:** Yes
- **Power Source:** 4 x "AA" 1.5V Batteries (not included)
- **UPC:** 762239397114
- **ASIN:** B0CG1NVDWH

Max Age: 9 mos

**Weight Range
6-20 lb/3-9kg**



Image: Diagram illustrating the dimensions of the AskCat Portable Baby Swing: 21.8 inches wide, 24.6 inches deep, and 28.1 inches high, with a maximum age of 9 months and weight range of 6-20 lbs (3-9 kg).

WARRANTY AND SUPPORT

For warranty information, product support, or to purchase replacement parts, please contact AskCat customer service. Keep your purchase receipt as proof of purchase.

Contact information may be found on the product packaging or the official AskCat website.

