

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Generico](#) /

› [Generico Hopestar H27 Mini Wireless Bluetooth Speaker User Manual](#)

Generico H27

Generico Hopestar H27 Mini Wireless Bluetooth Speaker User Manual

Model: H27 | Brand: Generico

INTRODUCTION

Thank you for choosing the Generico Hopestar H27 Mini Wireless Bluetooth Speaker. This portable speaker is designed to deliver high-quality audio with the convenience of wireless connectivity. Featuring Bluetooth technology and FM radio capabilities, it is suitable for various audio playback needs. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your device to ensure optimal performance and longevity.

WHAT'S IN THE BOX

Upon unboxing, please ensure all items listed below are present:

- Generico Hopestar H27 Mini Wireless Bluetooth Speaker
- USB charging cable
- User Manual (this document)

PRODUCT OVERVIEW

Familiarize yourself with the key components and controls of your Hopestar H27 speaker.



Figure 1: Front view of the Hopestar H27 speaker, highlighting the control panel on top and the textured speaker grille. The speaker is grey with silver accents on the passive radiators.



Figure 2: Exploded view illustrating the internal structure of the Hopestar H27 speaker, including the main drivers and the passive radiators on each end, demonstrating its robust design.

Control Panel (Top View)

- **Power Button:** Press and hold to turn the speaker on or off.
- **Mode Button (M):** Short press to switch between Bluetooth, FM Radio, and other input modes.
- **Volume Down / Previous Track (<):** Short press for previous track, long press to decrease volume.
- **Play/Pause Button (▶ ||):** Short press to play or pause audio. During a call, press to answer/end.
- **Volume Up / Next Track (>):** Short press for next track, long press to increase volume.
- **Bluetooth Button ():** Short press to disconnect/reconnect Bluetooth, long press to enter pairing mode.

Ports (Rear/Side View)

- **USB Charging Port:** For charging the speaker's internal battery.
- **AUX Input:** For connecting external audio devices via a 3.5mm audio cable (not included).
- **TF Card Slot:** For playing music directly from a MicroSD/TF card.

SETUP

1. Initial Charging

Before first use, fully charge the speaker. Connect the supplied USB charging cable to the speaker's USB charging port

and the other end to a USB power adapter (e.g., phone charger, computer USB port). The charging indicator light will illuminate during charging and turn off when fully charged.

2. Powering On/Off

- **To Power On:** Press and hold the Power Button () for approximately 3 seconds until you hear an audible prompt.
- **To Power Off:** Press and hold the Power Button () for approximately 3 seconds until you hear an audible prompt.

OPERATING INSTRUCTIONS

Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth mode. If not, short press the 'M' (Mode) button until you hear the Bluetooth pairing prompt. The Bluetooth indicator light will flash rapidly.
2. On your device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
3. Select "HOPESTAR H27" from the list of found devices.
4. Once paired, the speaker will emit a confirmation sound, and the Bluetooth indicator light will stop flashing and remain solid.
5. You can now play audio from your device through the speaker.

FM Radio Operation

1. Power on the speaker.
2. Press the 'M' (Mode) button repeatedly until you enter FM radio mode.
3. To auto-scan and save available stations, long press the Play/Pause button (▶ ||). The speaker will scan and store stations automatically.
4. Use the 'Previous Track' (<) and 'Next Track' (>) buttons to navigate between saved FM stations.

Playing from USB Drive / TF Card

Insert a USB flash drive or a TF (MicroSD) card with MP3 audio files into the respective port. The speaker will automatically switch to the corresponding mode and begin playing music. Use the Play/Pause, Previous Track, and Next Track buttons for control.

AUX Input

Connect an external audio device (e.g., MP3 player, computer) to the speaker's AUX input port using a 3.5mm audio cable. The speaker will automatically switch to AUX mode. Control playback from your connected device.

Volume Control

Long press the 'Volume Up' (>) button to increase volume. Long press the 'Volume Down' (<) button to decrease volume.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to wipe the speaker's surface. Do not use abrasive cleaners, alcohol, or chemical solvents, as these may damage the finish.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the speaker frequently. If storing for a long period, charge the battery to about 50% every few months.
- **Water Resistance:** While designed for outdoor use, avoid submerging the speaker in water or exposing it to heavy rain.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not turn on.	Low battery.	Charge the speaker fully using the provided USB cable.
No sound.	Volume too low; incorrect mode; device not connected.	Increase speaker and device volume. Ensure correct input mode (Bluetooth, FM, AUX, TF/USB). Re-pair Bluetooth device.
Cannot pair via Bluetooth.	Speaker not in pairing mode; device Bluetooth off; too far apart.	Ensure speaker is in Bluetooth pairing mode (flashing light). Turn device Bluetooth off and on. Move speaker closer to device (within 10 meters).
FM radio reception is poor.	Weak signal; environmental interference.	Relocate the speaker to an area with better signal. Extend the USB charging cable (if connected) as it can act as an antenna.

SPECIFICATIONS

Feature	Detail
Model Name	H27
Brand	Generico
Connectivity Technology	Bluetooth
Audio Output Mode	Stereo
Speaker Type	Outdoor
Material	Metal, Plastic
Mounting Type	Tabletop
Controller Type	Button
Compatible Devices	Laptop, Smartphone, Tablet, Television
Product Dimensions	11 x 24 x 13 cm
Weight	700 g

WARRANTY AND SUPPORT

The Generico Hopestar H27 Mini Wireless Bluetooth Speaker comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, or visit the official Generico website for detailed warranty information.

For technical support, troubleshooting assistance beyond this manual, or warranty claims, please contact Generico customer service through their official channels.

© 2023 Generico. All rights reserved. Information in this manual is subject to change without notice.