

manuals.plus /

› [Cecotec](#) /

› [Cecotec Bolero Dresscode 9300 Inverter Max A 9 kg Washing Machine User Manual](#)

Cecotec Bolero Dresscode 9300 Inverter Max A

Cecotec Bolero Dresscode 9300 Inverter Max A 9 kg Washing Machine User Manual

Model: Bolero Dresscode 9300 Inverter Max A (02794)

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Cecotec Bolero Dresscode 9300 Inverter Max A 9 kg front-load washing machine. Please read it thoroughly before installation, use, or maintenance.

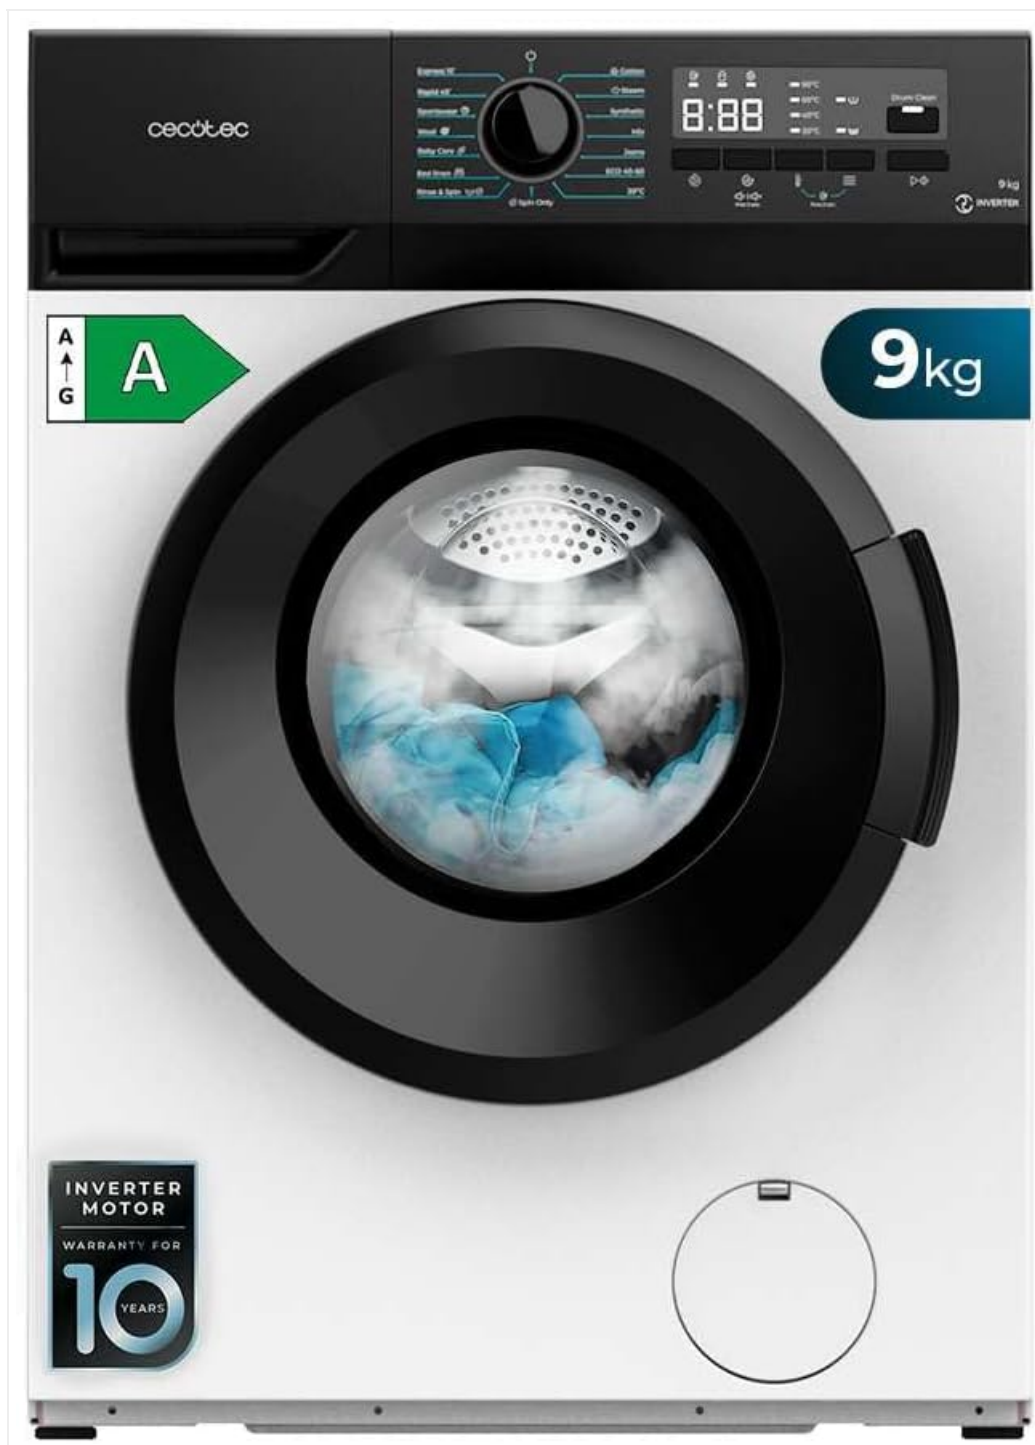


Image: Front view of the Cecotec Bolero Dresscode 9300 Inverter Max A washing machine, highlighting its 9 kg capacity, Class A energy rating, and Inverter Motor technology.

Key Features:

- 9 kg load capacity with a maximum spin speed of 1400 rpm.
- Class A energy efficiency rating.
- 15 diverse washing programs to suit various fabric types and soil levels.
- Inverter Plus Motor for efficient, quiet, and durable operation, offering over 70% energy savings compared to universal motors.
- SteamMax function for enhanced cleaning and wrinkle reduction.
- Extra Rinse function for thorough detergent removal.
- DrumClean program for maintaining drum hygiene.
- Delay Start function (0-24 hours) for convenient scheduling.
- KidLock feature for child safety.

- User-friendly control panel with LED display.
- Memory function to recall your most frequently used program and settings.

2. SAFETY INSTRUCTIONS

Always adhere to the following safety guidelines to prevent injury or damage to the appliance.

- Ensure the washing machine is properly grounded.
- Do not allow children to operate or play with the appliance.
- Keep packaging materials out of reach of children.
- Do not install the appliance in areas exposed to direct sunlight or extreme temperatures.
- Ensure water inlet and outlet hoses are securely connected to prevent leaks.
- Do not overload the machine beyond its 9 kg capacity.
- Unplug the appliance before cleaning or maintenance.
- In case of malfunction, contact authorized service personnel. Do not attempt repairs yourself.

3. SETUP AND INSTALLATION

3.1 Unpacking

Carefully remove all packaging materials. Inspect the appliance for any damage incurred during transit. Retain packaging for future transport if necessary.

3.2 Removing Transport Bolts

Before use, remove all transport bolts located at the rear of the machine. Failure to do so will cause excessive vibration and damage during operation. Store the bolts for future use.

3.3 Placement and Leveling

Place the washing machine on a firm, level surface. Adjust the leveling feet until the appliance is stable and balanced. Proper leveling reduces noise and vibration.



Image: Front-side view of the Cecotec Bolero Dresscode 9300 washing machine, illustrating its dimensions (85 cm height, 60 cm width, 53 cm depth).

3.4 Water Connection

Connect the water inlet hose to a cold water tap and the appliance's inlet valve. Ensure all connections are tight to prevent leaks. Position the drain hose correctly into a standpipe or sink, ensuring it is not kinked.

3.5 Electrical Connection

Plug the power cord into a grounded electrical outlet. Ensure the voltage and frequency match the specifications of the appliance.

4. OPERATING INSTRUCTIONS

4.1 Loading Laundry

Open the door and load laundry into the drum. Do not exceed the 9 kg capacity. Close the door firmly.



Image: A woman loading clothes into the front-load washing machine, demonstrating the loading process.

4.2 Adding Detergent and Softener

Add the appropriate amount of detergent to the main wash compartment and softener to its designated compartment in the dispenser drawer.

4.3 Program Selection

Turn the program selector knob on the control panel to choose one of the 15 available programs. The LED display will show the selected program's default settings.



Image: A woman adjusting the program selection knob on the washing machine's control panel, which features an LED display.

4.4 Customizing Settings

Use the touch buttons on the LED display to adjust settings such as spin speed (up to 1400 rpm), temperature, and to activate special functions:

- **SteamMax:** Adds steam at the end of the wash cycle to reduce wrinkles and refresh clothes.
- **Extra Rinse:** Performs an additional rinse cycle for sensitive skin or heavily soiled items.
- **Delay Start:** Set a delay for the wash cycle to begin, from 0 to 24 hours.
- **KidLock:** Activates the child lock to prevent accidental program changes.
- **Memory Function:** The machine can memorize your most frequently used program and settings for quick selection.



Image: A detailed view of the washing machine's LED control panel, showing various program options and function buttons.

4.5 Starting the Wash Cycle

Press the Start/Pause button to begin the selected wash cycle.



Image: Inside view of the washing machine drum during a wash cycle, showing clothes and water.

5. MAINTENANCE

5.1 DrumClean Function

Regularly use the DrumClean program to clean the washing machine drum and prevent odor buildup. This program runs at a high temperature to sanitize the drum.

5.2 Cleaning the Detergent Dispenser

Remove and clean the detergent dispenser drawer periodically to prevent residue buildup. Rinse it under running water and reinsert.

5.3 Cleaning the Filter

Locate and clean the drain pump filter regularly to remove lint and small objects. Refer to the full manual for detailed instructions on accessing and cleaning the filter.

5.4 Exterior Cleaning

Wipe the exterior of the washing machine with a soft, damp cloth. Avoid abrasive cleaners or solvents.

6. TROUBLESHOOTING

If you encounter issues with your washing machine, consult the following common troubleshooting steps.

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged, door not closed properly, program not selected, Delay Start active.	Check power connection, ensure door is latched, select a program, check Delay Start settings.
No water intake	Water tap closed, inlet hose kinked, water pressure too low.	Open water tap, straighten hose, check household water pressure.
Water leakage	Hose connections loose, detergent dispenser overflowing, drain pump filter loose.	Tighten hose connections, do not overfill detergent dispenser, secure filter cover.
Excessive vibration/noise	Transport bolts not removed, machine not level, uneven load.	Remove transport bolts, adjust leveling feet, redistribute laundry inside the drum.
Clothes not clean	Overloading, insufficient detergent, incorrect program selection.	Reduce load size, use correct detergent amount, select appropriate program.

For more complex issues or if the problem persists, please contact Cecotec customer support.

7. SPECIFICATIONS

Feature	Detail
Brand	Cecotec
Model Number	02794
Product Dimensions (D x W x H)	53 x 60 x 85 cm
Product Weight	62.8 kg
Capacity	9 Kilograms
Color	White Series 300
Power	1950 Watts
Max Spin Speed	1400 rpm
Energy Efficiency Class	A
Number of Programs	15
Motor Type	Inverter Plus
Special Features	SteamMax, DrumClean, Delay Start, KidLock
Components Included	1 x Washing Machine

Feature	Detail
ASIN	B0CG285MJ2
Date First Available	July 31, 2023

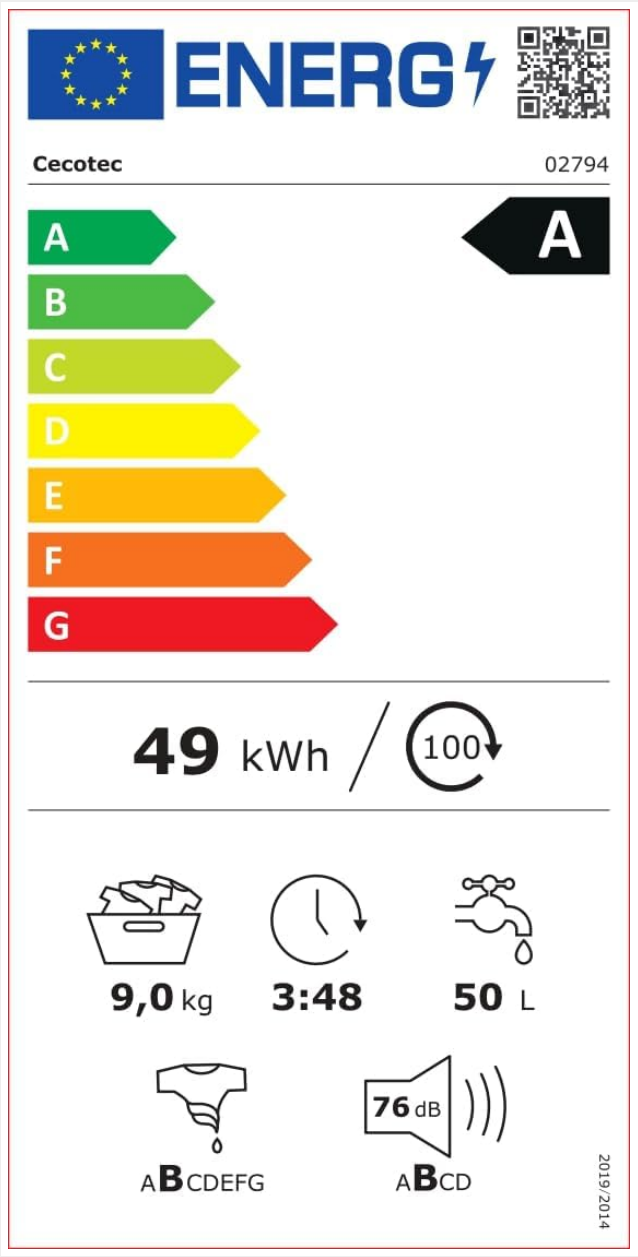


Image: EU Energy Label for the Cecotec Bolero Dresscode 9300 washing machine, showing Class A energy rating, 49 kWh/100 cycles, 9.0 kg capacity, 3:48 program duration, 50 L water consumption, and 76 dB noise level. For more details, visit the [EPREL database](#).

cecotec

Ficha de información del producto

REGLAMENTO DELEGADO (UE) 2019/2014 DE LA COMISIÓN en relación con el etiquetado energético de lavadoras y lavadoras-secadoras domésticas.

Nombre del proveedor o marca comercial: Cecotec Innovaciones, S.L.

Dirección del proveedor: C/ de la Pinadeta, s/n 46930 Quart de Poblet (Valencia) SPAIN

Identificador del modelo: 02794_Bolero DressCode 9300 Inverter Max A

Parámetros generales del producto:

Parámetro	Valor	Parámetro	Valor
-----------	-------	-----------	-------

Capacidad (c) (Kg)	9,0	Dimensiones en cm (a) (c)	Altura	85	
			Ancho	60	
			Profundidad	50	
Índice de Eficiencia Energética (EElw) (b)	51,9	Clase de eficiencia energética (b)	A (c)		
Índice de eficiencia de lavado (a)	1,031	Efectividad del aclarado (g/kg) (a)	5,0		
Consumo de energía en kWh por ciclo, basado en el programa eco 40-60. El consumo real de energía depende de las condiciones de utilización del aparato	0,494	Consumo de agua en litros por ciclo, basado en el programa eco 40-60. El consumo real de agua depende de las condiciones de utilización del aparato y de la dureza del agua	50		
Temperatura máxima de los textiles tratados (°C) (c)	Capacidad	43	Humedad residual (%) (b)	Capacidad	53,9
	Media	33		Media	53,9
	Un cuarto	22		Un cuarto	53,9
Velocidad de centrifugado (rpm) (b)	Capacidad	1350	Clase de eficiencia de centrifugado y secado (b)	B (d)	
	Media	1350			
	Un cuarto	1350			
Duración del programa (h:min) (b)	Capacidad	3:48	Tipo	De libre instalación	
	Media	2:54			
	Un cuarto	2:54			
Ruido aéreo emitido expresado durante la fase de centrifugado (dB(A) re 1 pW) (b)	76	Ruido aéreo emitido expresado (fase de centrifugado) (b)	B (d)		
Apagado (W)	0,50	Modo preparado (W)	1,00		
Inicio diferido (W) (si procede)	4,00	Modo preparado en red (W) (si procede)	N/A		
Duración mínima de la garantía ofrecida por el proveedor (a) (c): 3 años					
Este producto ha sido diseñado para liberar iones de plata durante el ciclo de lavado: NO					
Información adicional:					
Enlace al sitio web del proveedor, en el que se encuentra la información contemplada en el punto 9 del anexo II del Reglamento (UE) 2019/2023 de la Comisión: www.storececotec.es					
(a) Este elemento no se considerará pertinente a efectos del artículo 2, apartado 6, del Reglamento (UE) 2017/1369.					
(b) Para el programa ECO 40-60.					
(c) Los cambios en este punto no se considerarán relevantes a efectos del apartado 4 del artículo 4 del Reglamento (UE) 2017/1369.					
(d) Si la base de datos de productos genera automáticamente el contenido definitivo de esta celda, el proveedor no deberá adjuntar estos datos.					

C/ de la Pinadeta s/n 46930 Quart de Poblet, Valencia (Spain) · Info@cecotec.es / cecotec.es

Image: Product Information Sheet for the Cecotec Bolero Dresscode 9300 washing machine, detailing technical specifications and compliance information.

8. WARRANTY AND SUPPORT

8.1 Warranty Information

The Cecotec Bolero Dresscode 9300 Inverter Max A washing machine comes with a minimum warranty period of 3 years provided by the supplier. Please retain your proof of purchase for warranty claims.

8.2 Customer Support

For technical assistance, spare parts, or any inquiries regarding your appliance, please contact Cecotec customer service. Refer to the official Cecotec website or your purchase documentation for contact details.



Related Documents - Bolero Dresscode 9300 Inverter Max A

	Manual de Instrucciones: Cecotec Bolero Dresscode 8300/9300 Inverter Max A Lavadora Guía completa de instrucciones para las lavadoras Cecotec Bolero Dresscode 8300 y 9300 Inverter Max A. Aprenda sobre instalación, funcionamiento, mantenimiento y solución de problemas para optimizar el uso de su electrodoméstico.
	Cecotec Bolero DressCode Lavadoras: Manual de Instrucciones y Guía de Uso Manual completo de instrucciones para las lavadoras Cecotec Bolero DressCode (modelos 7610, 8610, 9610, 10610 Inverter). Incluye guías de instalación, operación, seguridad, mantenimiento y especificaciones técnicas.
	Bolero DressCode Washing Machine Manuals Instruction manual for the Bolero DressCode 6000, 7000, and 8000 washing machines by Cecotec. Includes safety instructions, operation, cleaning, maintenance, and troubleshooting.
	Cecotec Bolero DressCode 10900 Autodose Inverter: Manual de Usuario y Guía de Instrucciones Descubra el manual de usuario para la lavadora Cecotec Bolero DressCode 10900 Autodose Inverter. Encuentre instrucciones detalladas, guías de seguridad y especificaciones técnicas para su correcto funcionamiento y mantenimiento.
	Manual de Usuario Lavadora Cecotec Bolero DressCode 8500 Inverter A / Steel A Manual de usuario completo para las lavadoras Cecotec Bolero DressCode 8500 Inverter A y Steel A. Incluye instrucciones de seguridad, instalación, funcionamiento, mantenimiento, solución de problemas y especificaciones técnicas.



[Manual de Usuario Cecotec Bolero Dresscode Dry 10500 Inverter: Guía Completa](#)

Descubra el manual de usuario para la secadora Cecotec Bolero Dresscode Dry 10500 Inverter y Bolero Dresscode Dry 10500 Inverter Steel. Incluye instrucciones de seguridad, funcionamiento, mantenimiento y especificaciones técnicas.

Documents - Cecotec – Bolero Dresscode 9300 Inverter Max A



[Manual de Instrucciones: Cecotec Bolero Dresscode 8300/9300 Inverter Max A Lavadora](#)

Guía completa de instrucciones para las lavadoras Cecotec Bolero Dresscode 8300 y 9300 Inverter Max A. Aprenda sobre instalación, funcionamiento, mantenimiento y solución de problemas para optimizar el uso de su electrodoméstico.

lang:it **score:37** filesize: 4.14 M page_count: 137 document date: 2023-09-11