

Midea WQP13-5201C-S

Midea WQP13-5201C-S Dishwasher User Manual

Model: **WQP13-5201C-S** | Brand: **Midea**

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Midea WQP13-5201C-S Dishwasher. Please read it thoroughly before installation, use, or maintenance. Keep this manual for future reference.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury. This appliance is intended for household use only.

- Ensure the dishwasher is properly grounded.
- Do not operate the dishwasher if it is damaged or malfunctioning.
- Keep children away from the dishwasher, especially when it is operating.
- Use only detergents and rinse aids specifically designed for dishwashers.
- Sharp items should be loaded with points down to prevent injury.
- Do not touch the heating element during or immediately after use.

3. PRODUCT OVERVIEW

The Midea WQP13-5201C-S is a freestanding dishwasher designed for efficient dish cleaning. It features a silver finish, touch controls, and a 13 place setting capacity.



Figure 3.1: Front view of the Midea WQP13-5201C-S Dishwasher. This image shows the silver exterior and the control panel located at the top of the door.

Key features include a self-cleaning anti-bacterial filter system, a residual heating dry system, and flexible loading options such as a foldable cup rack and a removable cutlery rack.



Figure 3.2: Interior view of the Midea WQP13-5201C-S Dishwasher with the door open, showcasing the upper and lower racks, foldable cup rack, and cutlery basket.

4. SETUP

4.1 Unpacking

Carefully remove all packaging materials. Inspect the dishwasher for any damage during transit. Keep packaging materials away from children.

4.2 Placement

The dishwasher is a freestanding unit. Place it on a level, stable surface. Ensure there is adequate space for door opening and proper ventilation. Avoid placing it near heat sources.



Figure 4.1: Dimensions of the Midea WQP13-5201C-S Dishwasher: 60cm Depth x 59.8cm Width x 84.5cm Height.

4.3 Water Connection

Connect the water inlet hose to a cold water supply with a minimum pressure of 0.04 MPa and a maximum of 1 MPa. Ensure all connections are tight to prevent leaks. Connect the drain hose to a suitable drain pipe, ensuring it is not kinked or blocked.

4.4 Electrical Connection

Connect the dishwasher to a dedicated 220 Volt, 50 Hz grounded electrical outlet. Do not use extension cords or adapters. Ensure the electrical supply meets the appliance's requirements.

5. OPERATING INSTRUCTIONS

5.1 Loading the Dishwasher

Scrape off large food particles before loading. Place dishes securely in the racks, ensuring water spray can reach all surfaces. Load sharp items with points facing down. The adjustable rack height and adjustable door boxes provide flexibility for various item sizes.

5.2 Adding Detergent and Rinse Aid

Fill the detergent dispenser with the appropriate amount of dishwasher detergent. Add rinse aid to the rinse aid dispenser as needed to improve drying performance and prevent spots.

5.3 Program Selection

The dishwasher offers 6 wash programs:

- **Eco:** Energy-efficient program for normally soiled dishes.
- **Glass:** Gentle program for delicate glassware.
- **90 min:** Standard program for daily soiled dishes.
- **Rapid:** Quick wash for lightly soiled dishes without drying.
- **Intensive:** For heavily soiled dishes, pots, and pans.
- **Universal:** General purpose program for mixed loads.
- **Soak:** Pre-wash cycle for dishes with dried-on food.

Select the desired program using the touch controls on the panel.

5.4 Half Load Function

If you have fewer dishes, activate the "Half Load" function to save water, time, and energy. This feature is ideal for smaller loads, ensuring efficient resource usage.

5.5 Starting a Cycle

Close the dishwasher door firmly. Press the Start button to begin the selected wash cycle. The dishwasher will automatically proceed through the wash, rinse, and dry phases.

6. MAINTENANCE

6.1 Cleaning the Filters

The dishwasher features a self-cleaning anti-bacterial filter system. However, regular inspection and manual cleaning of the filter assembly are recommended to ensure optimal performance. Remove and rinse the filters under running water to remove any food debris.

6.2 Cleaning the Spray Arms

Periodically check the spray arms for clogged nozzles. Remove the spray arms and clean any blockages with a thin wire or toothpick.

6.3 Exterior and Interior Cleaning

Wipe the exterior of the dishwasher with a soft, damp cloth. Clean the interior with a dishwasher-safe cleaner or a mixture of vinegar and water to remove mineral deposits and odors.

6.4 Winterization (if applicable)

If the dishwasher is in an unheated location and subject to freezing temperatures, ensure all water is drained from the unit and hoses to prevent damage.

7. TROUBLESHOOTING

Before contacting service, refer to the following table for common issues and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Dishwasher does not start	Power supply issue, door not closed properly, program not selected.	Check power connection, ensure door is latched, select a program and press Start.
Dishes are not clean	Improper loading, clogged spray arms, insufficient detergent, incorrect program.	Reload dishes correctly, clean spray arm nozzles, use adequate detergent, select appropriate program.
Water not draining	Clogged filter, kinked drain hose, blocked drain pump.	Clean filters, check drain hose for kinks or blockages.
Excessive noise	Dishes rattling, foreign object in pump, improper installation.	Ensure dishes are secure, check for foreign objects, verify proper leveling.
Spots or film on dishes	Insufficient rinse aid, hard water, incorrect detergent dosage.	Refill rinse aid dispenser, consider a water softener, adjust detergent.

8. SPECIFICATIONS

Feature	Detail
Brand	Midea
Model Name	WQP13-5201C-S
Installation Type	Freestanding
Dimensions (D x W x H)	60 cm x 59.8 cm x 84.5 cm
Capacity	13 Place Settings
Special Features	Half Load, Anti-Bacterial Filter, Residual Heating Dry System, Adjustable Rack Height
Color	Silver
Control Type	Touch
Material	Plastic
Noise Level	49 dB
Number of Programs	6 (Eco, Glass, 90 min, Rapid, Intensive, Universal, Soak)
Voltage	220 Volts
Item Weight	45 kg
Recommended Uses	Daily dishes, glassware, heavily soiled pots and pans, delicate china, baking dishes

9. WARRANTY AND SUPPORT

9.1 Warranty Information

This Midea WQP13-5201C-S Dishwasher comes with a **5-year manufacturer's warranty**. Please retain your proof of purchase for warranty claims. The warranty covers defects in materials and workmanship under normal household use.

9.2 Customer Support

For technical assistance, service requests, or questions regarding your dishwasher, please contact Midea customer support. Refer to the contact information provided in your product packaging or visit the official Midea website for regional support details.