

SOLO 206 EAZY

Solo Eazy 206 Battery-Powered Handheld Sprayer, 1.6 GAL. Instruction Manual

Model: SOLO 206 EAZY

INTRODUCTION

Thank you for choosing the Solo Eazy 206 Battery-Powered Handheld Sprayer. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your sprayer. Please read these instructions carefully before initial use and keep them for future reference.

SAFETY INFORMATION

WARNING: Failure to follow these safety instructions may result in injury or property damage.

- Always wear appropriate protective clothing, including gloves and eye protection, when operating the sprayer.
- Avoid direct contact with eyes and skin when handling spray solutions.
- Ensure proper ventilation when mixing and spraying chemicals.
- Do not spray flammable liquids.
- Keep the sprayer and chemicals out of reach of children and pets.
- Dispose of unused contents and cleaning solutions properly according to local regulations.
- Do not modify the sprayer. Use only original replacement parts.

PRODUCT OVERVIEW

The Solo Eazy 206 is a battery-powered handheld sprayer designed for garden and pest control applications. It features a 1.6-gallon (6-liter) tank and operates on an 11.1V battery system.



Figure 1: Full view of the Solo Eazy 206 Battery-Powered Handheld Sprayer. Shows the red and white tank, handle, and spray wand.

Included Components:

- Sprayer Unit (Tank, Motor, Battery Compartment)
- Pump
- Spiral Hose
- Spray Wand with Nozzle
- Battery Charger (not explicitly listed but implied for battery-powered)



Figure 2: Close-up of the Solo Eazy 206 sprayer unit, showing the pump, spiral hose, and handle assembly.

SETUP

1. **Charge the Battery:** Before first use, fully charge the sprayer's battery. Connect the charger to a power outlet and then to the sprayer's charging port. Refer to the charger's indicator lights for charging status.
2. **Assemble the Hose and Wand:**
 - Attach the spiral hose to the sprayer unit's outlet. Ensure it is securely tightened to prevent leaks.
 - Connect the spray wand to the other end of the spiral hose.
 - Attach the desired nozzle to the spray wand.
3. **Fill the Tank:**
 - Unscrew the tank cap.
 - Carefully pour the desired liquid (water, herbicide, insecticide, etc.) into the tank. Do not overfill beyond the maximum fill line.
 - Securely screw the tank cap back on.

OPERATING INSTRUCTIONS

1. **Power On:** Locate the power switch on the sprayer unit and turn it to the "ON" position. The pump will activate.
2. **Adjust Nozzle:** Rotate the nozzle at the end of the spray wand to adjust the spray pattern from a fine mist to a direct stream, as required for your application.
3. **Begin Spraying:** Press the trigger on the spray wand handle to begin spraying. Release the trigger to stop.
4. **Spraying Technique:** Maintain a consistent distance and speed for even application. Avoid spraying in windy conditions to prevent drift.
5. **Power Off:** After use, turn the power switch to the "OFF" position.

MAINTENANCE

- **Cleaning After Use:**
 - Empty any remaining liquid from the tank.
 - Rinse the tank thoroughly with clean water.
 - Fill the tank with clean water and spray it through the wand until the tank is empty to flush the pump and hose.
 - Clean the nozzle to prevent clogging.
- **Battery Care:**
 - Recharge the battery after each use or when the power indicator shows low charge.
 - Store the sprayer with a partially charged battery if not used for extended periods.
 - Do not expose the battery to extreme temperatures.
- **Storage:** Store the sprayer in a cool, dry place, away from direct sunlight and freezing temperatures. Ensure the tank is empty and clean.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Sprayer does not turn on.	Battery is discharged. Power switch is off.	Charge the battery. Turn the power switch to "ON".
No spray or weak spray.	Tank is empty. Nozzle is clogged. Hose is kinked. Pump malfunction.	Refill tank. Clean nozzle. Straighten hose. Contact customer support if pump is faulty.
Leaking from connections.	Connections are loose. Damaged O-rings/seals.	Tighten all connections. Inspect and replace O-rings/seals if damaged.

SPECIFICATIONS

Model Name	EAZY 206 BATTERY-POWERED HANDHELD SPRAYER, 1.6 GAL.
Model Number	SOLO 206 EAZY
Brand	Generic (Manufacturer: SOLO)
Tank Volume	1.6 Gallons (6 Liters)
Power Source	Battery Powered (11.1V, implied)
Material	Plastic, Nylon
Hose Length	6.5 Feet
Item Weight	6 Pounds
Dimensions (W x H)	20.25"W x 15.25"H
Recommended Uses	Garden sprayer, Pest Control
UPC	720343206005

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact the manufacturer directly. Keep your proof of purchase for warranty claims.