

[Manuals.plus](#) /

› [Caiord](#) /

› Caiord Karaoke Machine P3 User Manual

Caiord P3

Caiord Karaoke Machine P3 User Manual

Model: P3

1. PRODUCT OVERVIEW

The Caiord P3 Karaoke Machine is a compact and portable Bluetooth speaker system designed for both kids and adults. It features two wireless microphones, multiple voice effects, and dynamic colorful lights to enhance your singing experience. Its small size makes it ideal for various occasions, from family parties to outdoor gatherings.



Figure 1: Caiord P3 Karaoke Machine (Rectangle Pinkcolor)



Figure 2: Mini Size with Powerful Sound Output

2. WHAT'S IN THE BOX

Upon opening your package, please ensure all the following items are present:

- 1 x Karaoke Machine (Speaker)
- 2 x Wireless Microphones
- 1 x Charging Cable (Type-C)
- 1 x User Manual



Figure 3: Package Contents

3. SETUP

Follow these steps to set up your Caiord P3 Karaoke Machine:

1. **Charge the Device:** Before first use, fully charge the karaoke machine and both wireless microphones using the provided Type-C charging cable. The charging indicator light will show the charging status.
2. **Power On:** Long press the power button on the karaoke machine to turn it on. Do the same for each wireless microphone.
3. **Bluetooth Pairing:** The microphones will automatically pair with the speaker upon powering on. For Bluetooth audio input, activate Bluetooth on your mobile device (phone, tablet, laptop) and search for 'P3'. Select it to connect.
4. **Alternative Connections:** The speaker also supports TF card input and AUX cable audio modes for versatile connectivity.



Figure 4: Easy Device Connection via Bluetooth

Video 1: Demonstration of Caiord P3 Karaoke Machine features and operation, including button functions and connectivity.

4. OPERATING INSTRUCTIONS

Familiarize yourself with the controls for optimal use:



Figure 5: Button Functions on Speaker and Microphones

Speaker Controls:

- **Power On/Off:** Long press the power button.
- **Play/Pause:** Short press the play/pause button.
- **Switch Light:** Short press the light button.
- **Turn On/Off Light Effects:** Double click the light button.
- **Remove Original Voice:** Long press the 'M' (Mode) button.
- **Switch Music/BT Mode:** Short press the 'M' (Mode) button.
- **Next Song:** Long press the '+' button.
- **Volume +:** Short press the '+' button.
- **Last Song:** Long press the '-' button.
- **Volume -:** Short press the '-' button.

Microphone Controls:

- **Play/Pause:** Short press the power button.
- **Power On/Off:** Long press the power button.
- **Volume +:** Short press the '+' button.
- **Mic Adjustment:** Long press the '+' button.
- **Volume -:** Short press the '-' button.
- **Mic Adjustment:** Long press the '-' button.
- **Accompaniment/Echo Adjustment:** Short press the 'M' (Mode) button.
- **Open/Close Mic Volume:** Long press the 'M' (Mode) button.
- **Switch Sound Effects:** Short press the voice effect button (below 'M').
- **Remove Original Voice:** Long press the voice effect button.

Voice Effects:

The Caiord P3 offers 4 fun voice effects:

- Monster
- Baby
- Female
- Male



Figure 6: Available Voice Effects

Colorful Light Modes:

Enhance your party atmosphere with 3 dynamic light modes:

- Color Rotating Light
- Water Ripple Light
- Single Color Light



Figure 7: Dynamic Light Modes

5. KEY FEATURES

- **Mini Size, Powerful Sound:** Despite its compact design, the P3 delivers surprisingly loud and clear audio thanks to its 6W HD loudspeaker and noise reduction chip.
- **Multi-functionality:** Equipped with Bluetooth 5.3 for stable, instant pairing and wide compatibility with various devices (laptops, PCs, Android, iPhone). Also supports TF card and AUX input.
- **Dual Wireless Microphones:** Comes with two wireless microphones for duets and interactive singing.
- **Voice Effects:** Four distinct voice effects (monster, baby, female, male) add a fun element to performances.
- **Dynamic Lighting:** Three colorful light modes create an engaging atmosphere, with lights beating to the music rhythm.
- **Portable Design:** Features an exquisitely compact design with a strong and durable leather handle for easy transport.



Figure 8: Multiple Ways to Connect and Wide Compatibility

 


Figure 9: Widely Used Scenarios

6. BATTERY INFORMATION

The Caiord P3 Karaoke Machine is equipped with a built-in 2000mAh rechargeable Lithium Ion battery, providing extended usage time.

- **Charging Time:** Approximately 4 hours for a full charge.
- **Working Time:** Approximately 4-5 hours of continuous singing time on a full charge.
- **Microphone Batteries:** Each microphone requires 2 'A' batteries (not specified if included or type, assuming standard)

AA/AAA if not rechargeable).



Figure 10: Battery Life and Charging

7. SPECIFICATIONS

Feature	Detail
Brand	Caiord
Model Number	P3
Item Weight	1.39 pounds
Product Dimensions	3.26 x 5.5 x 5.5 inches
Speaker Count	1
Output Wattage	6 Watts
Connector Type	Wireless (Bluetooth 5.3)
Compatible Devices	Laptop, PC, Android, iPhone
Power Source	Battery Powered
Battery Type	Lithium Ion (2000mAh)
Special Feature	Mute Function, Dynamic Lights, Voice Effects

8. MAINTENANCE

To ensure the longevity and optimal performance of your karaoke machine, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the speaker and microphones. Avoid using abrasive cleaners or solvents.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures when not in use.
- **Battery Care:** For optimal battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods.

- **Handle with Care:** The device contains sensitive electronic components. Avoid dropping or subjecting it to strong impacts.

9. TROUBLESHOOTING

If you encounter any issues, refer to the following common solutions:

- **No Power:** Ensure the device is fully charged. Connect the charging cable and try powering on again.
- **Microphones Not Connecting:** Make sure both the speaker and microphones are powered on. If they don't pair automatically, power them off and on again. Ensure they are within range of each other.
- **No Sound from Speaker:** Check the volume levels on both the speaker and your connected device. Ensure the correct input mode (Bluetooth, AUX, TF Card) is selected.
- **Poor Sound Quality:** Ensure the microphones are not too close to the speaker to avoid feedback. Check for any obstructions between the devices.
- **Bluetooth Disconnection:** Ensure your device is within the effective Bluetooth range (typically up to 10 meters or 32 feet). Avoid interference from other electronic devices.

10. WARRANTY AND SUPPORT

Your Caiord P3 Karaoke Machine comes with a standard manufacturer's warranty. For detailed warranty information, please refer to the product packaging or contact Caiord customer support.

If you require further assistance or have questions not covered in this manual, please visit the official Caiord website or contact their customer service team.