

DSP KB2066

DSP KB2066 8.5 Liter 1700W Air Fryer Instruction Manual

Model: KB2066 | Brand: DSP

1. INTRODUCTION

Thank you for choosing the DSP KB2066 Air Fryer. This manual provides essential information for the safe and efficient operation of your appliance. Please read all instructions carefully before first use and retain this manual for future reference.

Important Safety Instructions

- Always place the appliance on a stable, heat-resistant surface, away from walls and other appliances to ensure proper ventilation.
- Do not immerse the main unit, cord, or plug in water or any other liquid.
- Keep children and pets away from the appliance during operation.
- Do not block the air inlet or outlet vents.
- Unplug the appliance when not in use and before cleaning.
- Do not operate the appliance if the cord or plug is damaged, or if the appliance malfunctions.
- The appliance generates heat; use oven mitts when handling hot parts.

2. PRODUCT OVERVIEW

The DSP KB2066 Air Fryer is designed for healthy cooking with minimal oil. It features a large capacity and powerful heating element for efficient results.



Image 2.1: The DSP KB2066 Air Fryer shown with its packaging and example food items.

Key Components:

- **Main Unit:** Houses the heating element and fan.
- **Control Panel:** Digital touch display for setting temperature and time.
- **Air Fryer Basket:** Removable cooking container.
- **Crisper Plate:** Sits inside the basket to allow air circulation around food.
- **Handle:** For safely removing the basket.



Image 2.2: A close-up view of the perforated crisper plate, designed for optimal air circulation during cooking.

3. SETUP

Unpacking and Initial Cleaning:

1. Remove all packaging materials, stickers, and labels from the appliance.
2. Wipe the exterior of the appliance with a damp cloth.
3. Wash the air fryer basket and crisper plate thoroughly with hot water, dish soap, and a non-abrasive sponge. Rinse and dry completely.
4. Ensure all parts are dry before plugging in the appliance.

Placement:

- Place the air fryer on a stable, level, and heat-resistant surface.
- Ensure there is at least 10 cm (4 inches) of free space around the back and sides of the appliance, and above it, for proper air circulation.
- Do not place the appliance near flammable materials or heat sources.

First Use:

During the first few uses, a slight odor or light smoke may be noticeable. This is normal and will dissipate quickly. It is recommended to run the air fryer empty for about 10-15 minutes at 200°C (390°F) before cooking food for the first time.

4. OPERATING INSTRUCTIONS

Basic Operation:

1. Plug the power cord into a grounded wall outlet.
2. Carefully pull the air fryer basket out of the appliance using the handle.
3. Place the crisper plate inside the basket.
4. Place your ingredients into the air fryer basket. Do not overfill the basket to ensure even cooking.
5. Slide the basket back into the air fryer until it clicks into place.
6. The control panel will illuminate. Use the touch controls to set the desired temperature and cooking time. Refer to cooking guides for recommended settings.
7. Press the Start/Pause button to begin cooking.
8. During cooking, you may pull out the basket to shake or flip ingredients for even browning. The appliance will pause automatically and resume when the basket is reinserted.
9. When the cooking time is complete, the appliance will beep. Carefully pull out the basket and transfer the cooked food to a plate using tongs.
10. Unplug the appliance after use.

Temperature and Time Control:

- The air fryer features a digital touch control panel.
- Use the temperature adjustment buttons to select a temperature between 80°C and 200°C (175°F - 390°F).
- Use the time adjustment buttons to set the cooking duration, typically up to 60 minutes.
- Some models may include preset cooking functions for common foods. Consult the display for available options.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

Cleaning Steps:

1. Always unplug the air fryer and allow it to cool completely before cleaning.
2. **Basket and Crisper Plate:** These parts are made of stainless steel and are dishwasher safe. For best results and to prolong their life, hand wash with hot water, dish soap, and a non-abrasive sponge. Remove any stubborn food residue by soaking in warm, soapy water for 10-15 minutes.
3. **Interior:** Wipe the interior with a damp cloth. For stubborn residue, use a non-abrasive sponge and mild dish soap. Avoid using metal scouring pads or harsh abrasive cleaners.

- 4. **Heating Element:** Gently clean the heating element with a soft brush to remove any food particles. Do not use water or liquid cleaners directly on the heating element.
- 5. **Exterior:** Wipe the exterior of the appliance with a damp cloth. Do not use abrasive cleaners or solvents.
- 6. Ensure all parts are completely dry before storing or using the appliance again.

Storage:

Store the cleaned and dried air fryer in a cool, dry place. Do not wrap the power cord tightly around the appliance.

6. TROUBLESHOOTING

If you encounter any issues with your air fryer, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance not plugged in. Power outlet malfunction.	Ensure the power cord is securely plugged into a working outlet. Try a different outlet.
Food is not cooked evenly.	Basket is overfilled. Food not shaken/flipped.	Cook food in smaller batches. Shake or flip food halfway through cooking.
White smoke coming from the appliance.	Grease residue from previous use. High-fat ingredients.	Clean the basket and crisper plate thoroughly. Remove excess oil from food before air frying.
Food is not crispy.	Too much moisture in food. Not enough oil (for some foods).	Pat food dry before cooking. Lightly brush or spray food with oil.

7. SPECIFICATIONS

Detailed technical specifications for the DSP KB2066 Air Fryer:

- **Model Number:** KB2066
- **Brand:** DSP
- **Capacity:** 8.5 Liters
- **Power:** 1700 Watts
- **Voltage:** 220 Volts
- **Dimensions (D x W x H):** 40 cm x 35 cm x 40 cm
- **Item Weight:** 4.5 Kilograms
- **Color:** Black
- **Material (Exterior):** Aluminum
- **Material (Interior):** Stainless Steel
- **Control Method:** Touch, Manual Control
- **Special Feature:** Temperature Control
- **Non-stick Coating:** No (for stainless steel basket)

- **Dishwasher Safe:** Yes (removable parts like basket and crisper plate)
- **Product Care Instructions:** Drip cleaning only (for main unit)
- **Country of Origin:** China

8. WARRANTY AND SUPPORT

Warranty Information:

This DSP KB2066 Air Fryer comes with an **International Warranty**. Please retain your proof of purchase for any warranty claims. The warranty covers manufacturing defects under normal household use. It does not cover damage resulting from misuse, accident, alteration, neglect, or unauthorized repair.

Customer Support:

For technical assistance, warranty service, or general inquiries, please contact your local distributor or the retailer where the product was purchased. Please have your model number (KB2066) and proof of purchase ready when contacting support.

© 2024 DSP. All rights reserved. Information in this manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

