

## Tefal DT3041

# Tefal Access Steam Pocket DT3041 Garment Steamer

## USER MANUAL

### 1. Important Safety Instructions

Please read all instructions carefully before using your Tefal Access Steam Pocket DT3041 garment steamer. Keep this manual for future reference.

- Always ensure the voltage of your electrical outlet matches the voltage specified on the appliance.
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Keep the steamer away from children and pets.
- Do not touch the hot steam head during operation or immediately after use.
- Always unplug the steamer from the power outlet before filling with water, cleaning, or when not in use.
- Use only distilled or demineralized water to prevent mineral buildup.
- The appliance features enhanced safety, including a stable base and automatic shut-off. Ensure the base is stable during use.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.

### 2. Product Overview

The Tefal Access Steam Pocket DT3041 is a compact and powerful handheld garment steamer designed for efficient textile care.



**Figure 1:** Tefal Access Steam Pocket DT3041 Garment Steamer, showing the main unit, detachable fabric brush, and storage pouch.

- **Steam Head:** Delivers powerful steam for wrinkle removal.
- **Water Tank:** Removable tank for easy filling.
- **Power Button:** To turn the steamer on and off.
- **Steam Trigger:** Activates steam release.
- **Foldable Handle:** For compact storage and portability.
- **Fabric Brush:** Attachment for thicker fabrics and improved steam penetration.

### 3. Setup

1. **Fill the Water Tank:** Remove the water tank from the main unit. Open the rubber cap and fill the tank with up to 120 ml of distilled or demineralized water. Close the cap securely and reattach the tank to the steamer.
2. **Attach Accessories (Optional):** For optimal results on certain fabrics, attach the fabric brush to the steam head until it clicks into place.
3. **Unfold the Steamer:** If the steamer is in its folded position, gently unfold the handle until it locks into place.
4. **Plug In:** Insert the power plug into a suitable electrical outlet.

## 4. Operating Instructions

---

The Tefal Access Steam Pocket DT3041 heats up in just 15 seconds, allowing for quick garment refreshing.

1. **Power On:** Press the power button. The indicator light will illuminate, indicating the steamer is heating up.
2. **Wait for Heating:** The steamer will be ready for use when the indicator light stops flashing (approximately 15 seconds).
3. **Prepare Garment:** Hang the garment on a hanger. Ensure the fabric is taut for best results.
4. **Apply Steam:** Hold the steamer upright and press the steam trigger to release steam. Move the steam head slowly over the fabric, from top to bottom. The powerful steam output of 19 g/min effectively removes wrinkles.
5. **Fabric Care:** This steamer is safe for use on all fabric types. For delicate fabrics, hold the steamer slightly further away.
6. **Finish Steaming:** Release the steam trigger to stop steaming. Press the power button to turn off the appliance.

*Note:* An ironing board is not required for use. Simply use a hanger to smooth and refresh your clothes.

## 5. Maintenance and Care

---

Regular maintenance ensures optimal performance and extends the life of your steamer.

1. **Empty Water Tank:** After each use, unplug the steamer and allow it to cool completely. Remove the water tank and empty any remaining water.
2. **Clean Steam Head:** Wipe the steam head with a soft, damp cloth to remove any residue. Do not use abrasive cleaners.
3. **Descaling (if necessary):** If you notice reduced steam output or mineral buildup, consult the manufacturer's website for descaling instructions specific to your model.
4. **Storage:** Once cooled and emptied, fold the handle for compact storage. Store the steamer and its accessories in a dry, safe place, ideally in the provided travel pouch.



**Figure 2:** The Tefal Access Steam Pocket DT3041 in its folded position, ready for compact storage or travel.

## 6. Troubleshooting

- **No Steam:**

- Check if the steamer is plugged in and turned on.
- Ensure the water tank is filled.
- Allow sufficient time for the steamer to heat up (15 seconds).

- **Water Leakage:**

- Ensure the water tank cap is securely closed and the tank is properly seated.
- Do not overfill the water tank.
- Ensure the steamer has fully heated up before use.

- **Reduced Steam Output:**

- The steamer may require descaling if hard water has been used. Refer to the manufacturer's guidelines for descaling.

## 7. Specifications

| Feature                        | Specification   |
|--------------------------------|-----------------|
| Model Number                   | DT3041          |
| Power                          | 1300 Watts      |
| Voltage                        | 2.3E+2 Volts    |
| Water Tank Capacity            | 120 Milliliters |
| Steam Output                   | 19 g/min        |
| Heat-up Time                   | 15 seconds      |
| Product Dimensions (L x W x H) | 38 x 13 x 13 cm |
| Item Weight                    | 1.8 Kilograms   |

## 8. Warranty and Support

Your Tefal Access Steam Pocket DT3041 garment steamer is covered by a manufacturer's warranty. Please refer to the warranty card included with your product for specific terms and conditions.

For technical support, spare parts, or service inquiries, please contact Tefal customer service or visit the official Tefal website. Keep your proof of purchase for warranty claims.