

EMOOR B0CG8JRGY8

EMOOR Ozone Deodorizing Electric Slide Dustbin Instruction Manual

Model: B0CG8JRGY8

INTRODUCTION

Thank you for purchasing the EMOOR Ozone Deodorizing Electric Slide Dustbin. This innovative dustbin combines automatic sensor operation with ozone deodorization and air purification functions to provide a clean and convenient waste disposal solution. Please read this manual thoroughly before use to ensure proper operation and maintenance.

SAFETY INFORMATION

- Do not immerse the product in water or other liquids.
- Keep the product away from direct sunlight, heat sources, and flammable materials.
- Ensure batteries are inserted correctly according to polarity markings. Do not mix old and new batteries or different types of batteries.
- Keep hands and fingers clear of the lid mechanism during operation to prevent injury.
- This product is intended for indoor household use only.
- Do not attempt to disassemble or repair the product yourself. Contact customer support for assistance.

SETUP

1. Unpacking

Carefully remove all components from the packaging. Verify that all parts are present:

- Dustbin body
- Lid assembly
- Garbage bag hanging ring

2. Battery Installation

The dustbin requires 6 AAA alkaline batteries (not included).

1. Locate the battery compartment on the underside of the lid.

2. Open the battery compartment cover.
3. Insert 6 AAA alkaline batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.



消臭&除菌



人感センサー



空気清浄

Image: The underside of the lid showing the battery compartment. Ensure batteries are inserted with correct polarity.

3. Garbage Bag Installation

This dustbin is compatible with 30-45L garbage bags.

1. Place the garbage bag hanging ring inside the dustbin body.
2. Secure the garbage bag by hooking its edges onto the four claws of the hanging ring.
3. Tuck any excess bag material into the side holes of the ring to ensure a neat fit and prevent the bag from being visible from the outside.
4. Place the lid assembly onto the dustbin body, ensuring it is securely seated.

省スペースインテリア



Image: Detailed view of how to install a garbage bag using the internal hanging ring and tucking excess into side holes for a clean appearance.

OPERATING INSTRUCTIONS

1. Automatic Lid Operation (Sensor Mode)

The dustbin features a human motion sensor for hands-free operation.

- Simply wave your hand over the sensor area on the lid. The lid will automatically slide open.
- Once you move away from the sensor detection area, the lid will automatically close after approximately 5 seconds.

マイナスイオンで空気清浄



空気を清浄し 清潔なゴミ箱に

オゾンの発生と同時にマイナスイオンも生成します。

マイナスイオンは空気中のチリ・ホコリを除去する空気清浄効果があります。

※ふたを閉めた状態でのゴミ箱内のみイオンが放出されます。

Image: A hand waving over the sensor, demonstrating the automatic lid opening function.

2. Manual Lid Operation (Touch Switch)

For manual control, use the touch switch on the lid.

- Lightly touch the switch to manually open or close the lid.

3. Adjusting Sensor Range

The sensor detection range can be adjusted to three levels (approximately 0-15cm, 15-25cm, 25-35cm) to suit your environment.

- Locate the sensor adjustment switch on the lid.
- Slide the switch to select the desired detection range.

POINT 3

手を触れず、快適オープン



人感センサーでオープン

蓋の手前に手をかざすと自動でふたが開きます。人が感知エリア内から離れると約5秒後に自動で閉まります。タッチスイッチに触れると、手動での開閉も可能です。

Image: A diagram illustrating the three adjustable sensor detection ranges (0-15cm, 15-25cm, 25-35cm).

4. Ozone Deodorization and Air Purification

The dustbin features an ozone generator for deodorization and negative ion generation for air purification.

- Press and hold the ozone button for 3 seconds. The LED indicator will light up green.
- Ozone will be released inside the dustbin for 5 minutes. This process oxidizes and breaks down odor molecules, particularly ammonia and hydrogen sulfide, and helps inhibit mold and bacteria.
- Simultaneously, negative ions are generated, which help remove dust and debris from the air within the dustbin.
- **Note:** The ozone and negative ion functions operate only when the lid is closed.

COLORS



Image: A close-up view of the ozone button and its green LED indicator on the dustbin lid.

MAINTENANCE

1. Cleaning the Dustbin

- Wipe the exterior of the dustbin with a soft, damp cloth. Do not use abrasive cleaners or solvents.

- For the interior, remove the garbage bag and wipe with a damp cloth. Ensure the interior is dry before placing a new garbage bag.
- Do not rinse the lid assembly directly under water, as this may damage the electronic components.

2. Battery Replacement

When the automatic lid operation or ozone function becomes weak or stops responding, it is time to replace the batteries.

1. Follow the battery installation steps in the "Setup" section to replace all 6 AAA alkaline batteries.
2. Dispose of used batteries according to local regulations.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Lid does not open automatically.	Batteries are low or depleted. Batteries are inserted incorrectly. Sensor is obstructed or dirty.	Replace all batteries with new AAA alkaline batteries. Check battery polarity. Clean the sensor area with a soft, dry cloth.
Lid opens or closes unexpectedly.	Sensor sensitivity is too high. Product is placed in a high-traffic area.	Adjust the sensor range to a lower sensitivity setting. Relocate the dustbin to an area with less movement.
Ozone deodorization not working.	Lid is not fully closed. Batteries are low or depleted.	Ensure the lid is completely closed. Replace all batteries with new AAA alkaline batteries.

SPECIFICATIONS

Model	B0CG8JRGY8
Brand	EMOOR
Capacity	42 Liters (compatible with 30-45L garbage bags)
Dimensions (L x W x H)	Approx. 34 cm x 25 cm x 61 cm
Weight	Approx. 3.9 kg
Material	Body: Stainless Steel / Lid & Ring: ABS Resin, Stainless Steel
Opening Mechanism	Sensor (Automatic Slide Open), Manual Touch Switch
Special Features	Ozone Deodorization, Negative Ion Air Purification, Adjustable Sensor Range
Power Source	6 x AAA Alkaline Batteries (sold separately)
Color	Black



幅25cmのスリムタイプ

毎日出る生活ゴミもしっかり入る大容量サイズなのに、幅はわずか約25cmのスタイリッシュデザイン。
キッチンだけではなく、洗面所やオフィスなど、好きな場所に設置できます。

高さ制限のある 場所に置ける

ふたはスライド開閉式で左右や上の障害物とぶつかる心配もありません。感知センサーもふたの手前があるので、カウンターやデスク下に設置できます。



Image: A diagram illustrating the key dimensions (width, depth, height) of the dustbin.

WARRANTY AND SUPPORT

For warranty information, product support, or inquiries, please refer to the warranty card included with your purchase or visit the official EMOOR website. Please retain your proof of purchase for warranty claims.

EMOOR Official Website: www.emoor.co.jp

© 2026 EMOOR. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question