

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [PETLIBRO](#) /

› [PETLIBRO Interactive Cat Toy User Manual](#)

PETLIBRO PLIT002

PETLIBRO Interactive Cat Toy User Manual

Model: PLIT002

PRODUCT OVERVIEW

The PETLIBRO Interactive Cat Toy is an automatic, USB rechargeable moving mouse toy designed to engage indoor cats with its smart sensing capabilities and LED lights. This upgraded 2024 model offers various features to keep your feline friend entertained and active.



Image: The PETLIBRO Interactive Cat Toy, a white and teal mouse-shaped device with large wheels and a glowing tail.

SETUP AND FIRST USE

1. **Charging the Toy:** The toy comes with a built-in rechargeable battery. Use the included micro USB cable to charge the toy. A full charge takes approximately 40 minutes and provides up to 240 minutes of playtime. It is recommended to fully charge the toy upon first opening.

Note: Power adapter is not included.

2. **Powering On/Off:** To turn the toy on or off, press the toy's nose (power button) for 3 seconds. The tail's LED light will illuminate when the toy is active.

OPERATING INSTRUCTIONS

Adjustable Speeds

The toy features two speed settings to suit different cat preferences:


- **Slow Mode:** Indicated by a green light strip.

- **Fast Mode:** Indicated by a blue light strip.

To select the desired speed mode, press the toy's nose (power button) within five seconds of turning it on.

Two speed modes

Keeps playtime exciting with two adjustable speeds

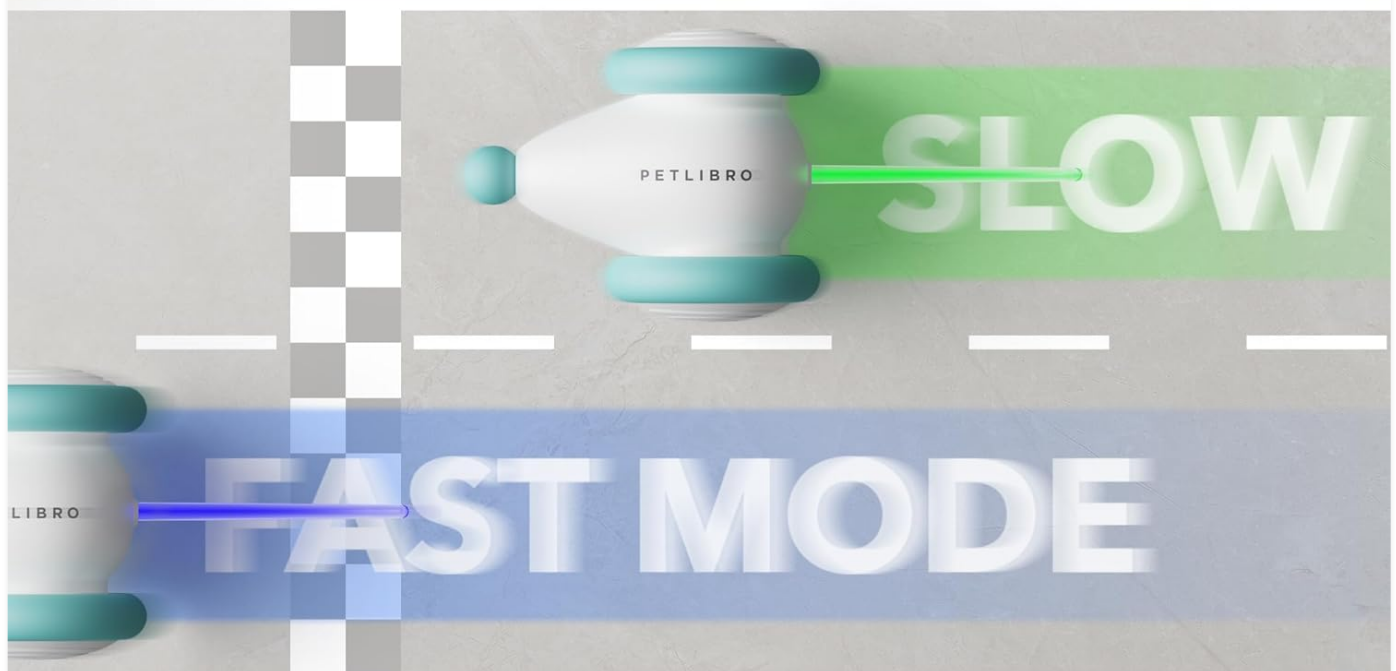

Note: To select the speed mode, press the toy's nose within five seconds of turning it on.

Image: Graphic illustrating the two speed modes: a green light for slow mode and a blue light for fast mode, with the toy shown in both states.

Automatic Operation and Obstacle Avoidance

The PETLIBRO cat toy moves in random directions, mimicking a mouse. It is equipped with a smart built-in obstacle avoidance sensor that automatically changes its course when it encounters walls, furniture, or other obstacles, ensuring unpredictable and engaging play.

Object avoidance

Changes direction on impact

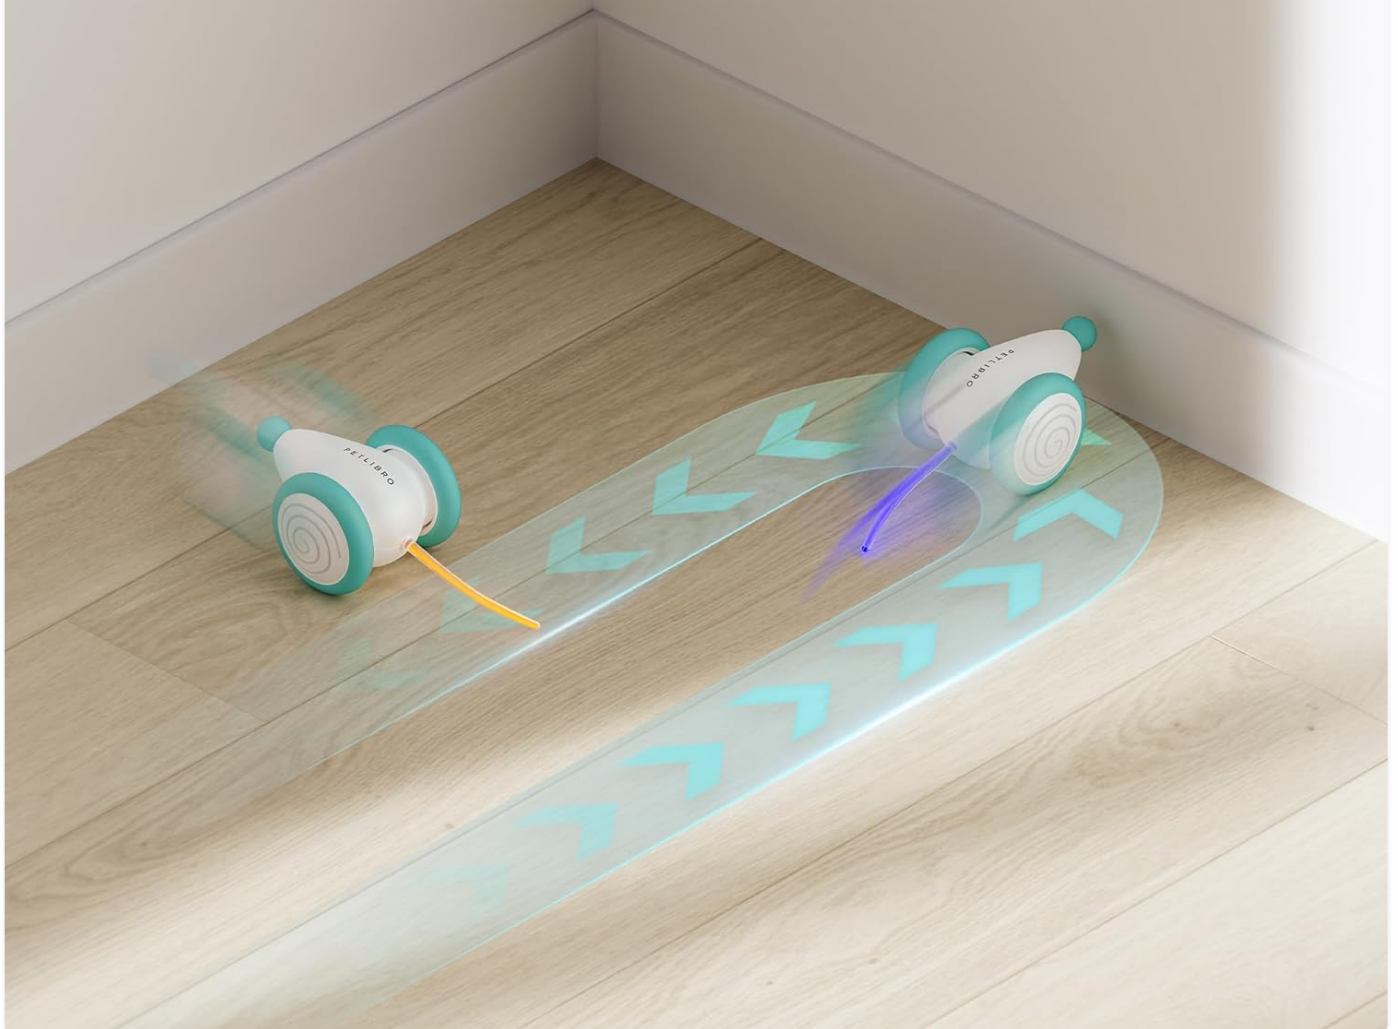


Image: The cat toy demonstrating its object avoidance feature, changing direction upon encountering a wall.

Play Cycles and Auto-Pause

The toy operates in intelligent cycles to prevent overstimulation and conserve battery. After 10 minutes of operation, the toy will automatically pause for 30 minutes. It can be restarted by touching it during the pause. This cycle repeats until a maximum running time of 240 minutes is reached.

Toy Jam Alert Sound

If the toy becomes stuck and remains immobile for 10 minutes, it will emit a one-second beep every 10 seconds. This alert helps you easily locate and retrieve the toy, especially if it gets hidden under furniture.

No more lost toys

Beeps to locate toy jams



Note: After the toy has been stuck for 10 minutes, it will emit a one-second beep every 10 seconds.

Image: An illustration showing the cat toy stuck under a couch, with a bell icon indicating the jam alert sound.

Surface Compatibility

The toy's smooth and sturdy wheels allow it to operate effectively on various hard floor types, including marble, wood, and tile floors. It is **not recommended** for use on shag carpets or thick rugs.

MAINTENANCE

- **Cleaning:** Regularly wipe the toy with a soft, dry cloth to remove dust and debris. Avoid using harsh chemicals or abrasive materials.
- **Wheel Maintenance:** Over time, cat hair and dust may accumulate around the wheels, affecting performance. The wheels are designed to be easily popped off for cleaning. Remove any tangled hair or debris, then snap the wheels back into place.

Tangle-free rolling

Upgraded wheel design effectively reduces tangling



Image: A close-up view of the toy's wheel, highlighting its design for easy cleaning and tangle reduction.

- **Storage:** When not in use for extended periods, store the toy in a cool, dry place away from direct sunlight.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Toy does not turn on.	Battery is low or depleted.	Charge the toy using the included USB cable.
Toy moves slowly or gets stuck frequently.	Hair or debris tangled in wheels; operating on unsuitable surface.	Clean the wheels by popping them off and removing debris. Ensure toy is used on hard, flat surfaces.
Toy emits a beep sound.	Toy is stuck and immobile for 10 minutes.	Locate the toy and free it from the obstruction.

Problem	Possible Cause	Solution
Toy stops after 10 minutes of play.	Normal operation cycle (auto-pause feature).	The toy will resume after 30 minutes, or can be restarted by touching it.

SPECIFICATIONS

- **Model:** PLIT002
- **Dimensions (LxWxH):** 2.13 x 1.54 x 2.56 inches
- **Weight:** 2.82 ounces (0.08 Kilograms)
- **Battery:** 1 Lithium Ion battery (included)
- **Charge Time:** Approximately 40 minutes
- **Max Playtime:** Up to 240 minutes (4 hours) per charge cycle
- **Materials:** Acrylonitrile Butadiene Styrene (ABS), Polyvinyl Chloride (PVC), Thermoplastic Polyurethane (TPU) - BPA-free
- **Color:** Blue
- **Target Audience:** Cats, house-cats (All Life Stages)
- **Specific Uses:** Indoor

WARRANTY AND SUPPORT

PETLIBRO offers a 30-day money-back guarantee for this product. The product also comes with a 2-year warranty. For any assistance, questions, or warranty claims, please do not hesitate to contact PETLIBRO customer service. Contact information can typically be found on the product packaging or the official PETLIBRO website. You can also refer to the official [User Manual \(PDF\)](#) for additional details.