

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [BELLEZE](#) /

› [BELLEZE 67-inch TV Stand with LED Lights \(Model: 014-HG-41026-BK\)](#)

BELLEZE 014-HG-41026-BK

BELLEZE 67-inch TV Stand with LED Lights

Model: 014-HG-41026-BK

1. INTRODUCTION

This manual provides instructions for the assembly, operation, maintenance, and troubleshooting of your BELLEZE 67-inch TV Stand. Please read all instructions carefully before assembly and use to ensure safe and proper operation.



Figure 1.1: Front view of the BELLEZE 67-inch TV Stand with LED lighting activated.

2. SAFETY INFORMATION

Adherence to these safety guidelines is crucial for preventing injury and damage to the product.

- Exercise caution around sharp edges during assembly and handling.
- Do not overload shelves or drawers. Refer to the 'Specifications' section for weight limits.
- Follow all assembly instructions precisely. Incorrect assembly can lead to instability.
- Keep small parts and assembly tools away from children during the assembly process.
- Ensure the TV stand is placed on a flat, stable surface to prevent tipping.

3. PACKAGE CONTENTS

Verify that all components listed below are present before beginning assembly. If any parts are missing or damaged, contact customer support.

- 1 x Entertainment Stand (unassembled components)
- 1 x Power Cord for LED lights
- 1 x Remote Control for LED lights
- 1 x Set of LED Light Strips
- 1 x User Manual (this document)
- Hardware Pack (screws, dowels, cam locks, etc.)

4. ASSEMBLY INSTRUCTIONS

Assembly is required for this product. It is recommended to have two people for assembly. The estimated assembly time is approximately 2 hours, though individual times may vary.

1. **Unpack and Identify Parts:** Carefully remove all components from the packaging. Lay them out on a clean, soft surface to prevent scratches. Identify each part using the provided parts list in the separate assembly guide.
2. **Assemble the Main Frame:** Follow the step-by-step diagrams in the assembly guide to connect the base, side panels, and top panel. Ensure all connections are secure.
3. **Install Drawers:** Assemble the drawer boxes according to the instructions. Install the drawer slides onto both the drawers and the main frame. Insert the assembled drawers into the frame.
4. **Attach Cabinet Doors:** Mount the hinges to the cabinet doors and then attach the doors to the main frame. Adjust hinges as necessary to ensure proper alignment and smooth opening/closing.
5. **Install Shelves:** Insert the shelf pins into the desired height positions within the cabinets. Place the shelves onto the pins. The shelves are adjustable to three different height levels.
6. **Install LED Lights:** Adhere the LED light strips to the designated area on the TV stand, typically under the top panel. Connect the power cord and the remote control receiver to the LED strips.
7. **Final Checks:** Ensure all screws are tightened, and the stand is stable. Place the TV stand in its desired location, ensuring it is level.

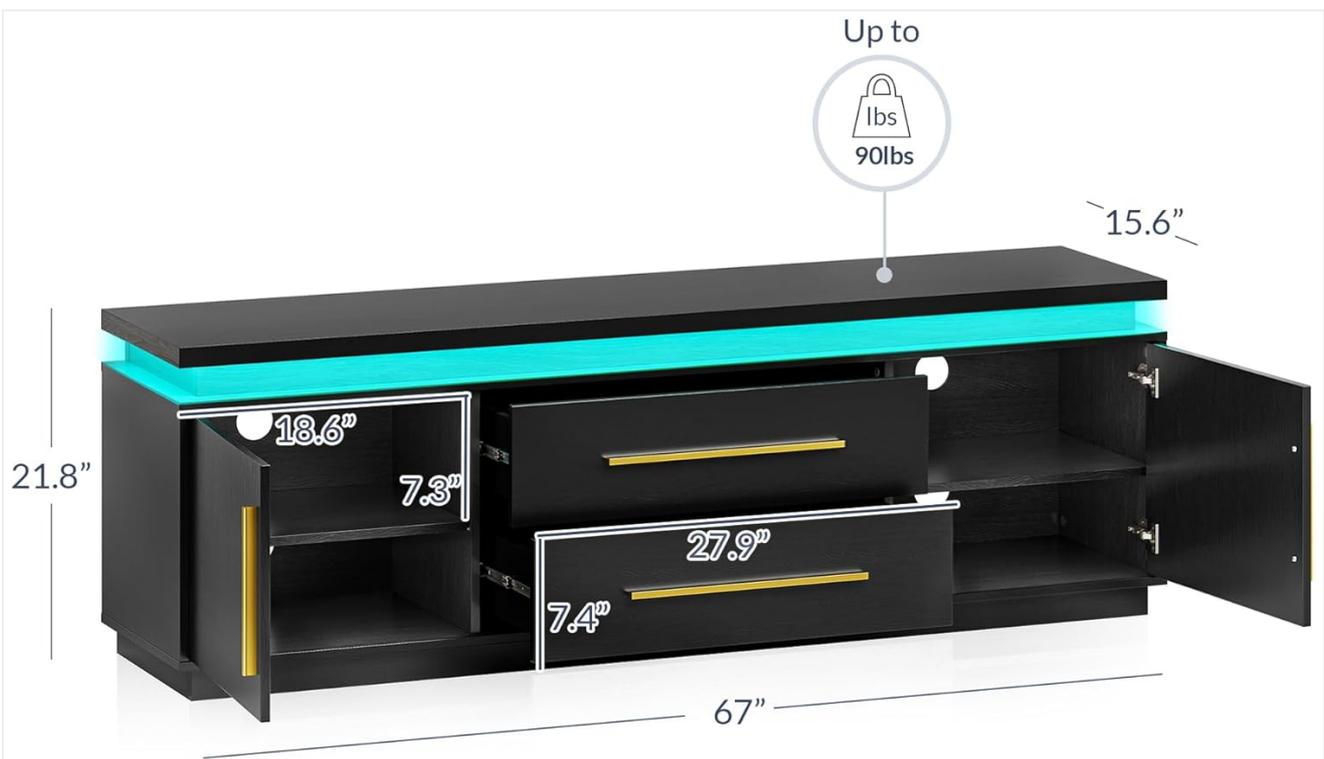


Figure 4.1: Dimensional overview of the TV stand, including internal storage measurements.

5. OPERATING INSTRUCTIONS

5.1 LED Lighting System

The integrated RGB LED lighting system offers customizable ambiance for your entertainment area. Use the provided remote control to manage the lights.

- **Power On/Off:** Press the power button on the remote to turn the lights on or off.
- **Color Selection:** Choose from 16 different static colors using the color buttons on the remote.
- **Dynamic Modes:** Select from 8 dynamic modes (e.g., flash, strobe, fade, smooth) to create various lighting effects.
- **Brightness Adjustment:** Adjust the light intensity with 10 brightness levels.
- **Speed Control:** For dynamic modes, adjust the speed of the effects with 10 speed modes.
- **Music Sync Function:** Activate the music sync function to allow the LED lights to change color and rhythm in response to ambient music or sounds.

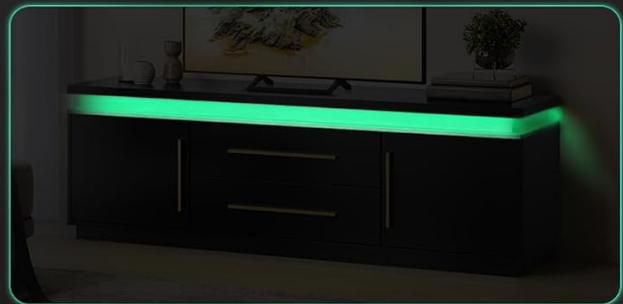


Figure 5.1: The LED lighting system can synchronize with music, controlled by the included remote.

ADJUSTABLE LED LIGHTS SYSTEM WITH REMOTE



16 DIFFERENT COLORS, 8 DYNAMIC MODES



10 BRIGHTNESS LEVELS, AND 10 SPEED MODES



Figure 5.2: The remote control allows selection of 16 colors, 8 dynamic modes, 10 brightness levels, and 10 speed modes.

5.2 Storage and Organization

The TV stand features two center sliding drawers and two-door cabinets for organized storage of media devices, accessories, and other items.

- **Drawers:** Utilize the two smooth-gliding drawers for smaller items like remote controls, game controllers, or DVDs.
- **Cabinets:** The two side cabinets provide enclosed storage. Each cabinet contains adjustable shelves to accommodate items of varying heights.
- **Cable Management:** Rear wire holes are integrated to help manage and conceal cables from your electronic devices, maintaining a tidy appearance.



LARGE STORAGE & ORGANIZATION

With two drawers, You can sort your TV, video game consoles, media players, and more with ease.

Figure 5.3: The two center drawers provide convenient storage for various items.



ADJUSTABLE SHELVES

Three adjustable height of levels
to suit your item size

Figure 5.4: Side cabinets feature adjustable shelves for flexible storage configurations.

6. MAINTENANCE

Regular maintenance will help preserve the appearance and functionality of your TV stand.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that may damage the finish.
- **Dusting:** Dust regularly with a dry, soft cloth.
- **Hardware Check:** Periodically check all screws and fasteners to ensure they remain tight. Retighten if necessary.
- **LED Lights:** If LED lights dim or flicker, check the power connection and remote control battery.

7. TROUBLESHOOTING

This section addresses common issues you might encounter with your TV stand.

Problem	Possible Cause	Solution
LED lights do not turn on.	Power cord disconnected; remote battery dead; LED strip faulty.	Ensure power cord is securely plugged in. Replace remote battery. Contact customer support if issue persists.
Drawers stick or do not slide smoothly.	Drawer slides misaligned; debris in slides; overloaded drawer.	Check alignment of drawer slides. Clean slides of any obstructions. Reduce weight in the drawer.
Cabinet doors are misaligned.	Hinges not properly adjusted.	Adjust the screws on the hinges to align the doors. Refer to the assembly guide for hinge adjustment details.
Stand feels wobbly.	Loose fasteners; uneven floor.	Tighten all assembly screws. Ensure the stand is on a level surface; use shims if necessary.

8. SPECIFICATIONS

Feature	Detail
Brand	BELLEZE
Model Name	014-HG-41026-BK
Color	Black
Product Dimensions (L x W x H)	67" x 15.6" x 21.8"
Material	Engineered Wood
Top Shelf Weight Limit	90 Pounds
Side Cabinet Weight Limit	30 Pounds (each)
Middle Drawer Weight Limit	15 Pounds (each)
Recommended TV Size	Up to 75 inches
Special Feature	LED Lights that Sync to Music (16 colors, 8 modes, 10 brightness, 10 speed)
Storage Options	2 Drawers, 2 Cabinets with 4 adjustable shelves
Assembly Required	Yes
Item Weight	117.9 Pounds
UPC	192928051711



Figure 8.1: The TV stand is designed to accommodate televisions up to 75 inches.

9. WARRANTY AND SUPPORT

BELLEZE is committed to providing quality products. For any questions, missing parts, or assistance with assembly or operation, please contact BELLEZE customer support. Information regarding specific warranty terms may be available on the manufacturer's website or through your retailer.

For customer service, please refer to the contact information provided with your purchase documentation or visit the official BELLEZE website.