

PDP 500-234-PIK

PDP REALMz Wireless Nintendo Switch Pro Controller Instruction Manual

Model: 500-234-PIK | Brand: PDP

INTRODUCTION

Experience a new realm of gaming with the Pikmin Clover Patch REALMz Wireless Controller. This one-of-a-kind controller features a figurine living inside the grip, offering an immersive universe from your favorite games. Its unique, multi-layer design showcases iconic scenes from your favorite titles. Designed for the Nintendo Switch, this controller provides a comfortable and responsive gaming experience.

SETUP

1. Initial Charge

Before first use, ensure the controller is fully charged. Connect the included USB-C charging cable to the controller's charging port and plug the other end into a compatible USB power source, such as your Nintendo Switch dock or a USB wall adapter. The controller features a built-in rechargeable battery with up to 40 hours of play time.

ERGONOMICALLY DESIGNED

For Comfort



Nintendo Switch is a trademark of Nintendo. © 2023 Nintendo.

Image: The controller's USB-C charging port and an indicator for 40 hours of battery life.

2. Wireless Connection

The controller connects wirelessly to your Nintendo Switch. Follow the standard Nintendo Switch controller pairing procedure. The controller offers a 30-foot wireless range for flexible gameplay.

OFFICIALLY LICENSED

By Nintendo®



Nintendo Switch is a trademark of Nintendo. © 2023 Nintendo.

Image: A user holding the controller, illustrating its 30-foot wireless range.

3. LED Lighting Effects

Effortlessly change the LED lighting effects using the ABXY buttons. Refer to the specific button combinations in the quick start guide for detailed instructions on customizing the lighting.

RECHARGEABLE BATTERY

40 Hours of Play

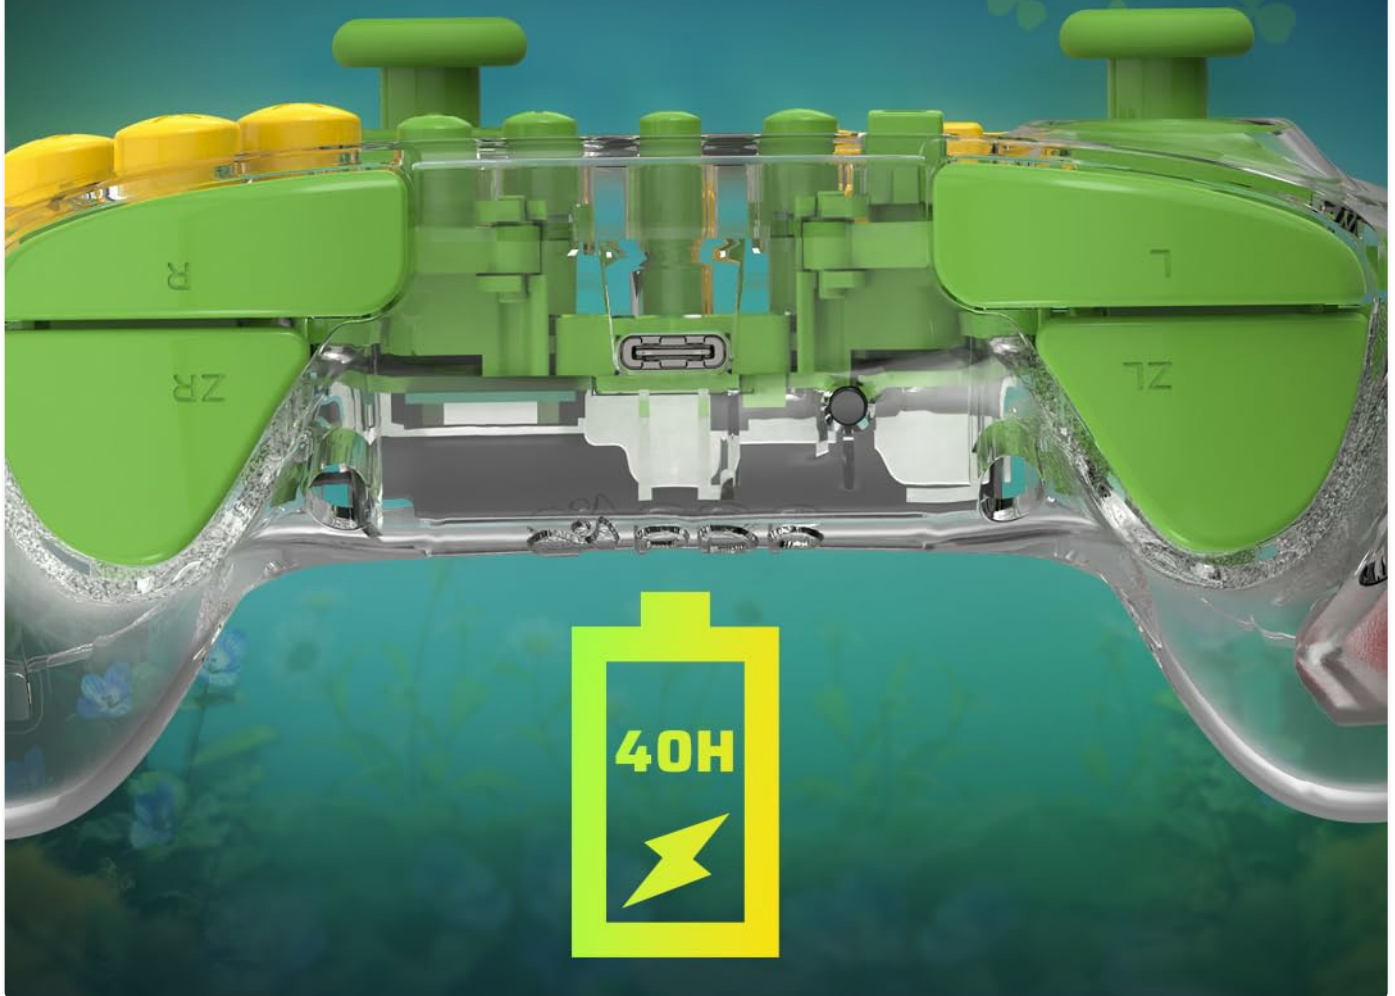


Image: A close-up view of the controller highlighting its customizable LED lighting effects.

4. Headphone Jack

The controller includes a headphone jack for audio output, allowing for private listening during gameplay.

OPERATING THE CONTROLLER

1. Ergonomic Design

The PDP REALMz Wireless Controller is ergonomically designed for all-day comfort and performance, ensuring a comfortable grip during extended gaming sessions.

WIRELESS CONNECTION

30-Foot Range



Nintendo Switch is a trademark of Nintendo. © 2023 Nintendo.

Image: A side profile of the controller, emphasizing its comfortable, ergonomic design.

2. Unique Visuals

The controller features a collectible figurine inside its grip and a multi-layered design showcasing iconic scenes, adding a unique visual element to your gaming setup.



Image: A detailed view of the controller's clear casing, revealing a Pikmin figurine and multi-layered artwork.

MAINTENANCE

- Keep the controller clean by wiping it with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.
- Store the controller in a cool, dry place away from direct sunlight and extreme temperatures.
- Avoid dropping the controller or subjecting it to strong impacts, as this can damage internal components or the clear casing.
- Ensure the USB-C port is free of dust and debris to maintain proper charging and connection.

TROUBLESHOOTING

Controller Not Connecting:

- Ensure the controller is fully charged.
- Verify that the Nintendo Switch console is updated to the latest system software.
- Attempt to re-pair the controller through the Nintendo Switch's "Change Grip/Order" menu.
- If issues persist, try connecting the controller directly to the Switch dock via the USB-C cable to establish a wired connection and then attempt wireless pairing again.

LED Lights Not Functioning:

- Check the controller's battery level. Low battery can affect LED performance.

- Refer to the quick start guide for correct button combinations to activate or change LED effects.

SPECIFICATIONS

Model Number:	500-234-PIK
Wireless Range:	30 feet
Battery Life:	Up to 40 hours
Connectivity:	Wireless (Bluetooth), USB-C for charging
Audio:	Headphone Jack
Weight:	8.4 ounces
Dimensions:	6.34 x 5.55 x 2.64 inches
Manufacturer:	PDP
Country of Origin:	China

WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the official PDP website or the documentation included with your product. You can also visit the [PDP Store on Amazon](#) for additional resources.