

Playsheek Rechargeable Emo Robot

Playsheek Rechargeable Emo Robot User Manual

Model: Rechargeable Emo Robot

INTRODUCTION

Thank you for choosing the Playsheek Rechargeable Emo Robot. This manual provides essential information for the safe and optimal use of your robot. Please read it thoroughly before operation and retain it for future reference.

The Playsheek Emo Robot is an interactive toy designed for children aged 3 and up, featuring remote control functionality, LED eyes, music, and auto-demonstration capabilities.

PACKAGE CONTENTS

Ensure all items are present in the package:

- 1 x Playsheek Emo Robot (Purple)
- 1 x Remote Control
- 1 x USB Charging Cable
- 1 x Screwdriver
- 1 x User Manual (This document)



Image: Illustration of the Playsheek Emo Robot and its included accessories: the robot, remote control, USB charging cable, screwdriver, and user manual.

SETUP

1. Charging the Robot

1. Locate the USB charging port on the robot.
2. Connect the small end of the included USB charging cable to the robot's charging port.
3. Connect the larger end of the USB cable to a compatible USB power source (e.g., computer USB port, power bank, USB wall adapter).
4. The robot's indicator light will illuminate during charging. Once fully charged, the light will change or turn off (refer to specific robot behavior if noted).
5. A full charge typically takes approximately 60-90 minutes.

USB CHARGING



CELLPHONE
CHARGER



COMPUTER
WITH USB



PORTABLE
CHARGER



CAR
CHARGER

Image: The Playsheek Emo Robot being charged via its USB port, illustrating compatible charging methods such as a computer, power bank, or wall adapter.

2. Installing Remote Control Batteries

1. Using the included screwdriver, open the battery compartment on the back of the remote control.
2. Insert 2 x AAA batteries (not included), ensuring correct polarity (+/-).
3. Close the battery compartment and secure it with the screw.

OPERATING INSTRUCTIONS

1. Powering On/Off

- **Robot:** Locate the ON/OFF switch on the robot's body and slide it to the "ON" position.
- **Remote Control:** Press the ON/OFF button on the remote control to activate it.

2. Remote Control Functions

The remote control allows for full command of the robot's movements and features. Refer to the

diagram below for button layout:

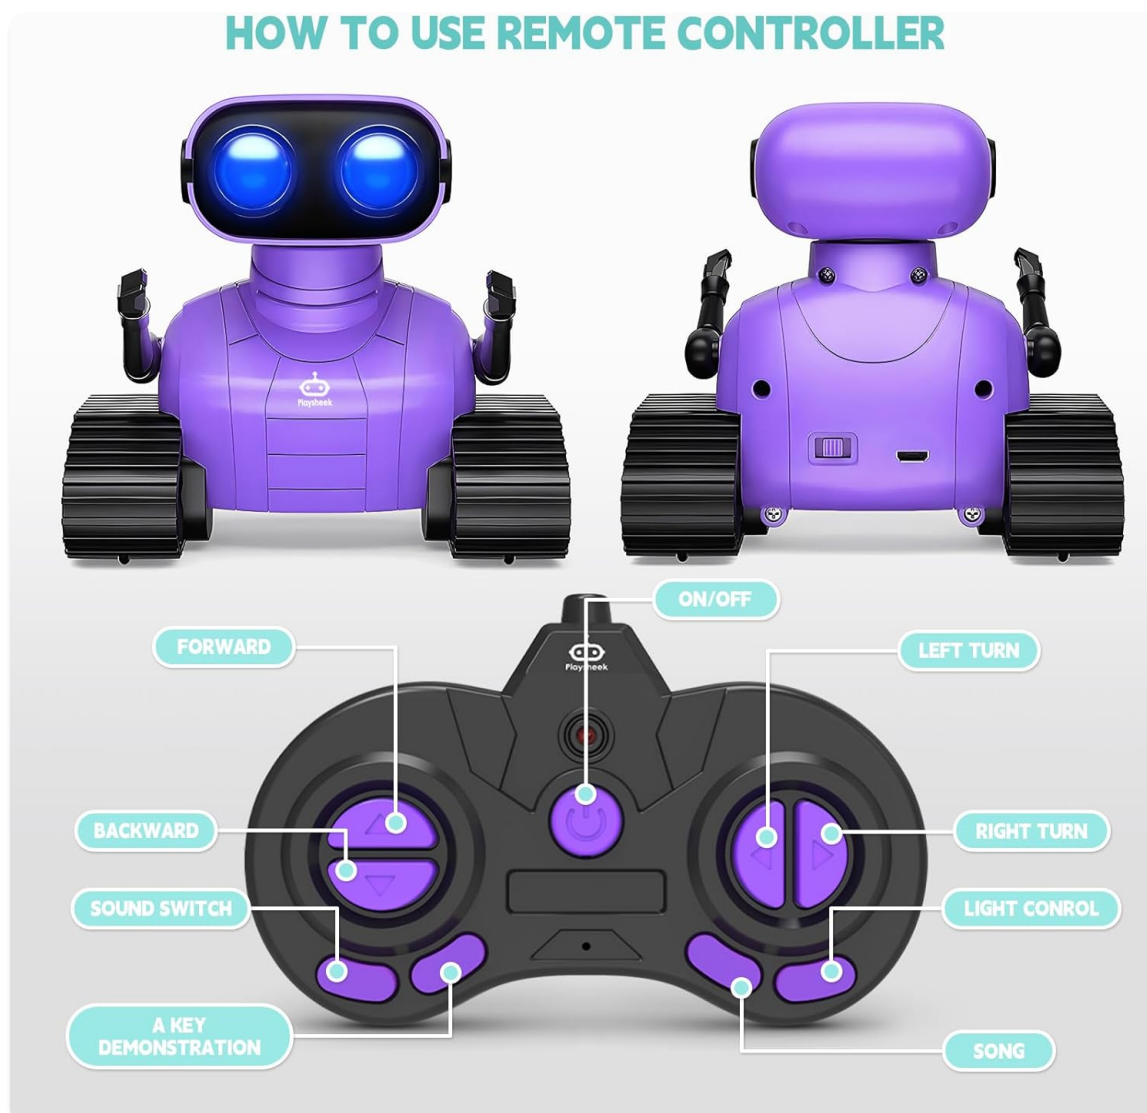


Image: Detailed diagram of the remote control, indicating the function of each button for controlling the robot's movement, sound, lights, and special features.

- **Forward:** Moves the robot straight ahead.
- **Backward:** Moves the robot straight backward.
- **Left Turn:** Turns the robot to the left.
- **Right Turn:** Turns the robot to the right.
- **Sound Switch:** Toggles the robot's sound effects or music on/off.
- **Light Control:** Adjusts the LED lights in the robot's eyes (e.g., blink, steady on, off).
- **A Key Demonstration:** Activates the robot's pre-programmed auto-demonstration routine, showcasing various movements and features.
- **Song:** Plays different songs from the robot's built-in speaker.

3. Robot Features

- **LED Eyes:** The robot's eyes feature adjustable LED lights.
- **Movable Joints:** The robot has movable arm joints for expressive poses.
- **360° Rotation:** The robot can perform full 360-degree rotations.
- **Music & Dance:** Enjoy various songs and a pre-programmed dance routine.



Image: Visual representation of the robot's capabilities, including 360-degree rotation, music and dance functions, and its stable, movable design.

MAINTENANCE

1. Cleaning

Wipe the robot and remote control with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners. Avoid exposing the robot to water or excessive moisture.

2. Battery Care

- **Robot Battery:** Recharge the robot's built-in battery regularly to maintain its lifespan. Avoid fully depleting the battery before recharging.
- **Remote Control Batteries:** Remove AAA batteries from the remote control if it will not be used for an extended period to prevent leakage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Robot does not turn on.	Robot battery is low or depleted.	Charge the robot using the USB cable.
Remote control does not work.	AAA batteries are depleted or incorrectly installed.	Replace AAA batteries, ensuring correct polarity.
Robot does not respond to remote.	Robot or remote is off; interference.	Ensure both are powered on. Move closer to the robot. Avoid operating near other 2.4GHz devices.
Sound or lights not working.	Feature is turned off via remote.	Press the "Sound Switch" or "Light Control" button on the remote.

SPECIFICATIONS

Feature	Detail
Product Dimensions	3.5 x 3.5 x 4.7 inches
Item Weight	12.9 ounces
Recommended Age	3 years and up
Robot Battery	1 Lithium Ion battery (included, built-in)
Remote Control Batteries	2 x AAA batteries (not included)
Manufacturer	Playsheek



Image: Visual representation of the robot's physical dimensions, indicating its height, width, and length.

SAFETY INFORMATION

- This product is intended for children aged 3 years and up. Adult supervision is recommended.
- Do not operate the robot near stairs, furniture, or other obstacles that could cause damage or

injury.

- Keep the robot and remote control away from water and heat sources.
- Do not attempt to disassemble or modify the robot or remote control.
- Dispose of used batteries responsibly according to local regulations.