

uleway T2301

uleway T2301 4G Senior Mobile Phone User Manual

Model: T2301

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your uleway T2301 4G Senior Mobile Phone. Please read this manual thoroughly to ensure proper use and to maximize the phone's features. This device is designed for ease of use, featuring large buttons, a clear display, and essential functions for communication.

2. PACKAGE CONTENTS

Please check the box for the following items:

- 1 x uleway T2301 Mobile Phone
- 1 x User Manual
- 1 x Battery
- 1 x Battery Charger (USB-C cable and wall adapter)
- 1 x Charging Dock
- 2 x SIM Card Adapters

3. PHONE OVERVIEW

The uleway T2301 is designed with user-friendliness in mind, featuring a clear 2.4-inch screen, large buttons, and a dedicated SOS button for emergencies.



Image 3.1: Key features of the uleway T2301, highlighting the large screen, large font, large buttons, and high volume output.

3.1 Front View

- **2.4-inch QVGA Screen:** Displays information clearly with large fonts.
- **Navigation Keys:** Up, Down, Left, Right, and OK/Confirm button for menu navigation.
- **Call/Answer Key:** Green button to initiate or answer calls.
- **End Call/Power Key:** Red button to end calls or power the phone on/off.
- **Numeric Keypad:** Large, backlit keys for dialing and text input.
- **Speed Dial Keys:** Keys 2-9 can be assigned for quick dialing.

3.2 Rear View

- **SOS Button:** Dedicated button for emergency calls and messages.
- **Speaker:** High-volume speaker for clear audio.

3.3 Side Views

- **USB-C Port:** For charging the phone directly.
- **Headphone Jack:** For connecting wired headphones.

4. SETUP

4.1 Installing the SIM Card and Battery

1. Remove the back cover of the phone by gently prying it open from the notch.
2. If a battery is already installed, remove it.
3. Insert your 4G SIM card(s) into the designated SIM card slot(s). The phone supports dual SIM cards. Ensure the gold contacts face downwards and the cut corner aligns with the slot.
4. If using a Micro SD card (up to 16GB, not included), insert it into the Micro SD slot.
5. Insert the battery, ensuring the gold contacts align with the phone's terminals.
6. Replace the back cover until it clicks securely into place.

4.2 Charging the Phone

Before first use, fully charge the phone's battery.



Image 4.1: The uleway T2301 phone placed in its charging dock.

- **Using the Charging Dock:** Connect the charger cable to the charging dock, then place the phone

into the dock. Ensure the phone is seated correctly and the charging indicator appears on the screen.

- **Direct USB-C Charging:** Alternatively, connect the USB-C charger cable directly to the USB-C port on the side of the phone.

A full charge typically takes a few hours. The battery indicator on the screen will show the charging status.



Image 4.2: Convenient charging for seniors using the charging dock.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

- **To Power On:** Press and hold the **End Call/Power Key** (red button) until the screen lights up.
- **To Power Off:** Press and hold the **End Call/Power Key** until the power off options appear, then select 'Power Off' using the navigation keys and OK button.

5.2 Making and Receiving Calls

- **To Make a Call:** Dial the number using the numeric keypad and press the **Call Key** (green button).

- **To Answer a Call:** When the phone rings, press the **Call Key**.
- **To End a Call:** Press the **End Call Key**.

5.3 Sending and Receiving SMS/MMS

- Navigate to the 'Messages' menu.
- Select 'New Message' to compose an SMS or MMS.
- Enter the recipient's number or select from contacts.
- Type your message using the keypad.
- Press 'Send'.

5.4 Contacts

The phone can store up to 500 contacts.

- **Adding a Contact:** Go to 'Contacts' in the menu, select 'Add New Contact', enter the name and number, then save.
- **Speed Dial:** Keys 2-9 can be assigned as speed dial numbers. To set up, go to 'Settings' > 'Speed Dial', select a key (2-9), and assign a contact. To use, long-press the assigned numeric key.



Image 5.1: Speed dial functionality using keys 2-9 on the uleway T2301.

5.5 SOS Emergency Function

The SOS button is located on the back of the phone. It can be configured to call and send SMS messages to up to five emergency contacts.

SOS Function (Support 5 SOS Contact)

One Click for Help In Emergency



Image 5.2: The SOS function, allowing one-click help in emergencies by contacting up to five pre-set numbers.

- **Setting Up SOS Contacts:** Go to 'Settings' > 'SOS Settings'. Add up to five emergency contact numbers and customize the emergency SMS message.
- **Using the SOS Function:** In an emergency, press and hold the **SOS Button** on the back of the phone for 3 seconds. The phone will automatically send the emergency SMS to all SOS contacts and then sequentially dial them until one answers.

5.6 Menu Navigation and Other Features

The phone features a user-friendly interface with clear icons.

USER-FRIENDLY UI



Image 5.3: User-friendly interface with clear icons for various functions.

- **Accessing Menu:** Press the left soft key (usually labeled 'Menu') to access the main menu.
- **Navigation:** Use the Up/Down/Left/Right navigation keys to scroll through options and the 'OK' button to select.
- **Multimedia:** Access the camera, video player, and audio player.
- **FM Radio:** Listen to FM radio stations.
- **Tools:** Includes features like Alarm, Calculator, and Calendar.
- **Bluetooth:** Connect to Bluetooth devices like headsets.
- **Languages:** The phone supports multiple languages including English, French, German, Italian, and Spanish. Change language in 'Settings'.

6. MAINTENANCE

6.1 Battery Care

- Avoid exposing the battery to extreme temperatures.
- Do not puncture or damage the battery.
- If the phone will not be used for an extended period, charge it periodically to maintain battery health.

Large Capacity Battery

Long Standby Time, Durable to Use



Image 6.1: Information on the uleway T2301's 1000mAh battery capacity and expected usage times.

6.2 Cleaning

- Use a soft, dry cloth to clean the phone's screen and body.
- Avoid using liquid cleaners or abrasive materials.

7. TROUBLESHOOTING

If you encounter issues with your phone, refer to the following common solutions:

- **Phone does not power on:** Ensure the battery is correctly installed and fully charged.
- **Cannot make or receive calls:** Check if the SIM card is properly inserted and activated. Verify network signal strength.
- **Poor call quality:** Move to an area with better network coverage. Ensure the speaker/microphone is not obstructed.
- **Battery drains quickly:** Reduce screen brightness, close unused applications, or limit background data usage if applicable. Ensure the battery is not old or damaged.
- **SOS function not working:** Verify that emergency contacts are correctly set up in the SOS

settings. Ensure the phone has network signal.

- **Phone freezes or is unresponsive:** Remove the battery, wait a few seconds, then reinsert it and power on the phone.

If problems persist, contact customer support for further assistance.

8. SPECIFICATIONS

Feature	Specification
Brand	uleway
Model Number	T2301
Product Type	Bar Phone
Operating System	KaiOS
Screen Size	2.4 Inches QVGA
Resolution	240 x 320
Memory (RAM + ROM)	32MB + 32MB
Expandable Memory	Micro SD up to 16GB
Cellular Technology	4G, 3G, 2G (LTE)
Wireless Carrier	Unlocked for all carriers
SIM Support	Dual SIM (4G SIM card)
Battery Capacity	1000 mAh Lithium-ion
Standby Time	Up to 240 hours
Talk Time	Up to 250 minutes
Power Input	5V, 500mAH
Charging Port	USB Type C
Handset Dimensions (mm)	104 x 53.5 x 21.1
Handset Weight (g)	103 (with batteries)
Human Interface Input	Buttons, Keypad
Supported Languages	English, French, German, Italian, Spanish

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or contact the retailer. Keep your proof of purchase for any warranty claims.

