



Manuals.plus /

› BESTOONE /

› BESTOONE Instant Print Camera User Manual

BESTOONE ABSS-681

BESTOONE Instant Print Camera User Manual

Model: ABSS-681

Brand: BESTOONE

1. INTRODUCTION

Thank you for choosing the BESTOONE Instant Print Camera. This digital camera is designed for children aged 3-12, offering both digital photography and instant black and white printing capabilities. It features 1080P video recording, an 8-megapixel camera, and various fun functions like games and an MP3 player. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your camera to ensure a safe and enjoyable experience.

2. WHAT'S IN THE BOX

Please check the package contents to ensure all items are present:

- Instant Print Camera (Blue)
- 3 Rolls of Thermal Printer Paper
- 32GB Micro SD Card (pre-installed)
- USB Charging Cable
- Lanyard



Image: The Instant Print Camera in blue, shown with its included accessories: three rolls of thermal paper, a 32GB SD card, a USB charging cable, and a lanyard.

3. PRODUCT OVERVIEW

Familiarize yourself with the camera's components and controls:

Introduction of Print Camera

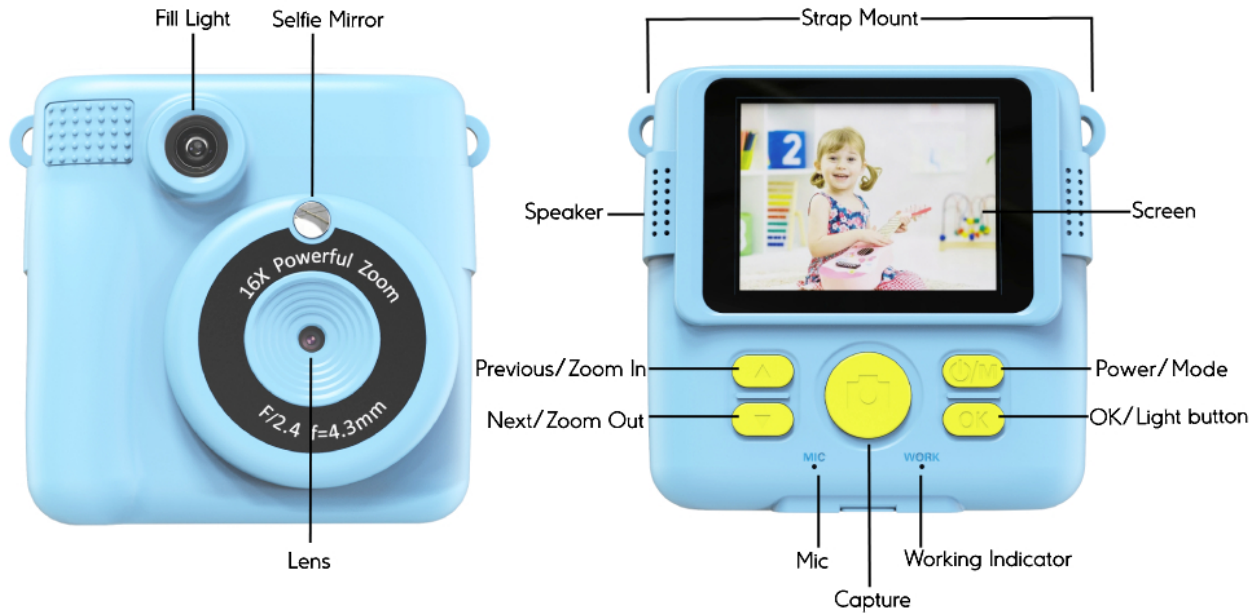


Image: A detailed diagram illustrating the various parts of the Instant Print Camera, including the lens, fill light, selfie mirror, speaker, screen, power/mode button, OK/light button, previous/zoom in button, next/zoom out button, mic, working indicator, and capture button.

- **Lens:** Captures photos and videos.
- **Fill Light:** Provides additional illumination for photos.
- **Selfie Mirror:** Assists in framing self-portraits.
- **Screen:** Displays menus, live view, and playback.
- **Power/Mode Button:** Turns the camera on/off and switches between modes.
- **OK/Light Button:** Confirms selections and controls the fill light.
- **Previous/Zoom In Button:** Navigates menus or zooms in during photo/video mode.
- **Next/Zoom Out Button:** Navigates menus or zooms out during photo/video mode.
- **Mic:** Records audio for videos.
- **Working Indicator:** Shows camera status (e.g., charging, recording).
- **Capture Button:** Takes photos or starts/stops video recording.
- **USB Port:** For charging and data transfer.
- **SD Card Slot:** For memory expansion (32GB card included).

4. SETUP

4.1 Charging the Camera

Before first use, fully charge the camera. Connect the provided USB charging cable to the camera's USB port and a compatible USB power adapter (not included). The working indicator light will show charging status and turn off when fully charged. A full charge provides up to 2 hours of continuous recording.

4.2 Inserting/Replacing Thermal Paper

The camera uses thermal paper for instant prints. Three rolls are included. To load or replace paper:

1. Gently open the paper compartment cover on the side of the camera.

2. Insert a new roll of thermal paper, ensuring the paper feeds from the bottom and the end of the paper extends slightly out of the slot.
3. Close the paper compartment cover securely.

Your browser does not support the video tag.

Video: An official BESTOONE video demonstrating the process of loading thermal paper into the instant print camera and showing the camera in use.

4.3 SD Card Installation

A 32GB Micro SD card is pre-installed in the camera. If you need to remove or replace it, locate the SD card slot (usually next to the USB port) and gently push the card to eject it. Insert a new card with the gold contacts facing down until it clicks into place.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

Press and hold the Power/Mode button to turn the camera on or off.

5.2 Taking Photos

From the main menu, select the 'Photo' icon. Frame your shot using the screen. The camera features 8-megapixel resolution, 16x digital zoom, flash, and autofocus for clear images. Press the Capture button to take a photo.

Record the Beautiful Moments of Life



2.4" IPS Screen



1080P Video



8MP Photo



Print Photos



1000 mAh Battery



MP3 Player



Playback



Puzzle Game

Image: An illustration highlighting the camera's key features for capturing moments, including 2.4" IPS screen, 1080P video, 8MP photo, print photos, 1000 mAh battery, MP3 player, playback, and puzzle game capabilities.

5.3 Recording Videos

From the main menu, select the 'Video' icon. The camera supports 1080P video recording. Press the Capture button to start recording, and press it again to stop.

5.4 Instant Printing

The camera can instantly print black and white images using thermal paper. Prints are generated in approximately 3 seconds. You can choose to print automatically after taking a picture or select specific photos from the gallery to print. The camera uses thermal printing technology, eliminating the need for ink cartridges.

Two Photo Modes



Instant print photo (black and white only)



Color digital photo (stored on SD card)



Digital Zoom

16x, Never miss a detail



Image: This image illustrates the two photo modes available: instant print (black and white only) and color digital photo (stored on the SD card). It also shows the digital zoom feature with examples from 2x to 16x.

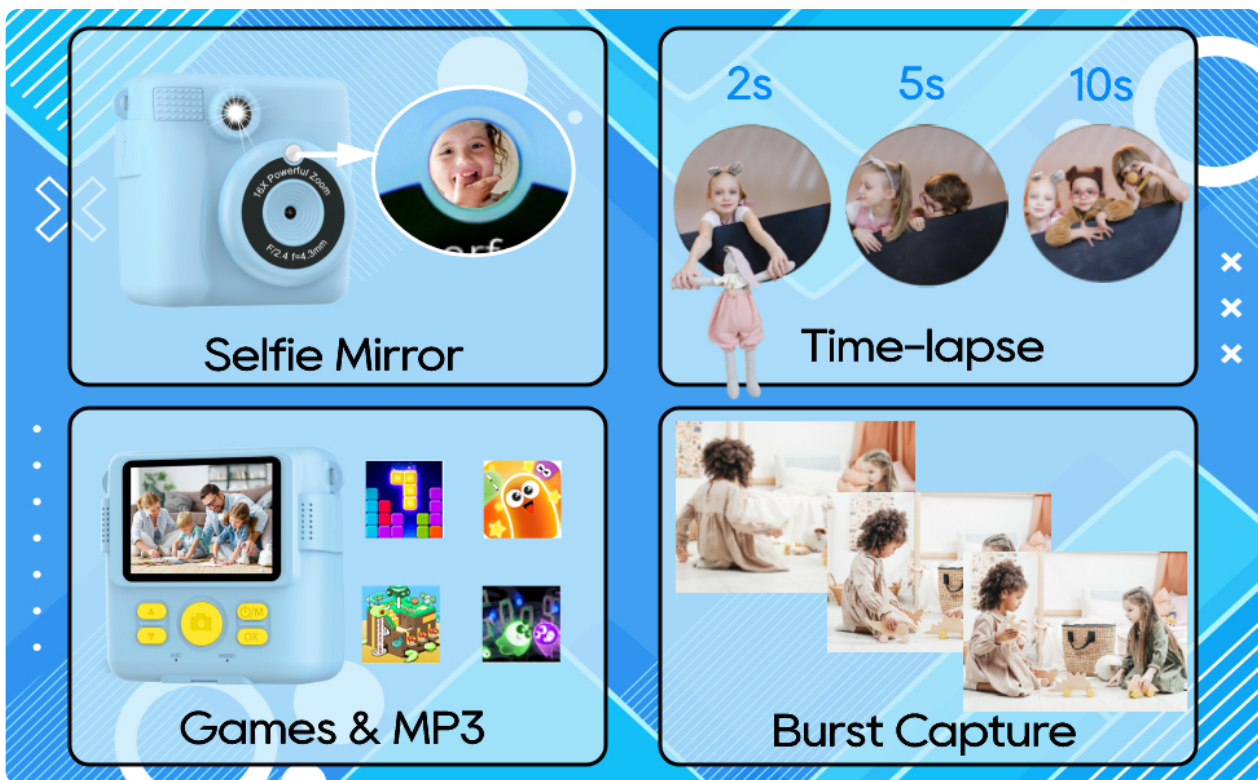


Image: Demonstrates that grayscale can be selected for photo printing, showing examples of a color image and its black and white printed versions.

5.5 Special Features

The camera includes several creative and entertainment features:

- **Continuous Shooting:** Capture a series of photos rapidly.
- **Timer:** Set a delay before taking a photo (e.g., 2s, 5s, 10s).
- **Looping Function:** For video recording.
- **Scene Filters & Stickers:** Add fun effects and frames to your photos.
- **MP3 Player:** Download music to the memory card and use the camera as an MP3 player.
- **Puzzle Games:** Enjoy pre-loaded educational games.



Image: A visual representation of additional camera features including a selfie mirror, time-lapse photography options (2s, 5s, 10s), built-in games and MP3 player functionality, and burst capture mode.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the camera body and screen. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge it regularly, even if not in use for extended periods.
- **Paper Storage:** Keep thermal paper rolls in a dry, dark place to prevent degradation.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera won't turn on.	Low battery.	Charge the camera for at least 30 minutes.
Cannot take photos/videos.	SD card full or not inserted correctly.	Check SD card insertion. Delete old files or replace SD card.
Prints are blank or faded.	Thermal paper inserted incorrectly or low quality.	Ensure thermal paper is inserted with the correct side facing the print head. Try a new roll of paper.
Camera freezes.	Software glitch.	Press the reset button (small pinhole, usually near the USB port) or hold the power button for 10 seconds to force a restart.

8. SPECIFICATIONS

- **Product Dimensions:** 3.5 x 3.4 x 2.1 inches
- **Item Weight:** 8.1 ounces (230 Grams)
- **Model Number:** ABSS-681
- **Batteries:** 1 Lithium Ion battery (included)
- **Manufacturer:** BESTOONE
- **Country of Origin:** China
- **Special Feature:** Time-lapse
- **Film Format Type:** Instant
- **Film Color:** Black and White (for prints)
- **Compatible Devices:** Printer (internal)
- **Exposure Control Type:** Automatic

9. WARRANTY AND SUPPORT

BESTOONE offers a one-year warranty for this product. For any questions, technical support, or warranty claims, please contact BESTOONE customer service through your original purchase platform or visit the official BESTOONE store online. Please retain your proof of purchase for warranty validation.

For more information, you may visit the [BESTOONE Store](#).