

Gosasa 2016

Gosasa Square Digital Watch (Model 2016) User Manual

1. INTRODUCTION

Thank you for choosing the Gosasa Square Digital Watch Model 2016. This manual provides essential information for setting up, operating, and maintaining your watch. This digital watch features a large, easy-to-read display, EL backlight, and 50-meter water resistance, making it suitable for daily wear and various activities.



Figure 1: Gosasa Square Digital Watch (Model 2016)

2. PRODUCT OVERVIEW AND SETUP

Before using your watch, familiarize yourself with its components and basic setup.

2.1 Watch Components



Figure 2: Watch Components

- **Watch Case:** Protects the internal mechanisms. Made of ABS material.
- **Watch Dial:** The display area showing time, date, and other information.
- **Watch Band:** Made of soft and flexible TPU for comfortable wear.
- **Watch Mirror:** High-transparent resin glass for clear visibility.
- **Watch Clasp:** Buckle type for secure fastening.
- **Back Cover:** Stainless steel for durability and water resistance.

2.2 Button Functions



Figure 3: Watch Buttons and Functions

- **LIGHT Button:** Activates the EL backlight.
- **MODE Button:** Cycles through different modes (Time, Date, Alarm, Stopwatch).
- **START/STOP Button:** Used to start/stop functions like the stopwatch or adjust settings.
- **RESET Button:** Used to reset functions or confirm settings.

3. OPERATING INSTRUCTIONS

3.1 Setting Time and Date

1. Press the **MODE** button repeatedly until the time display starts flashing.
2. Use the **START/STOP** button to adjust the hour.
3. Press the **RESET** button to move to the minute setting.
4. Use the **START/STOP** button to adjust the minutes.
5. Continue pressing **RESET** to cycle through year, month, and day settings, adjusting each with the **START/STOP** button.
6. Once all settings are correct, press the **MODE** button to exit setting mode.

3.2 Using the EL Backlight

Press the **LIGHT** button to illuminate the display for easy reading in low-light conditions. The backlight will remain on for a few seconds.

3.3 Using the Alarm

1. Press the **MODE** button until the alarm time is displayed.
2. Press the **START/STOP** button to adjust the alarm hour.
3. Press the **RESET** button to move to the alarm minute setting.
4. Use the **START/STOP** button to adjust the alarm minutes.
5. Press the **MODE** button to activate or deactivate the alarm. An alarm icon will appear on the display when activated.

3.4 Using the Stopwatch (Chronograph)

1. Press the **MODE** button until the stopwatch display appears (usually showing 00:00:00).
2. Press the **START/STOP** button to start the stopwatch.
3. Press the **START/STOP** button again to pause the stopwatch.
4. Press the **RESET** button to reset the stopwatch to zero.

3.5 Product Video Overview

Your browser does not support the video tag.

Video: An overview of the Gosasa Square Digital Watch, demonstrating its features and design. This video highlights the large numbers and waterproof capabilities.

4. MAINTENANCE

4.1 Water Resistance

The Gosasa Square Digital Watch is water-resistant up to 50 meters (5ATM). This means it is suitable for swimming in shallow water and cold showering. However, it is important to avoid wearing it in hot water, steam, or during long-time underwater activities such as diving, as this can compromise the water seal.



Figure 4: Water Resistance Feature

4.2 Cleaning and Care

- Clean the watch regularly with a soft, damp cloth.
- Avoid using chemical cleaners, as they may damage the watch's finish or seals.
- Store the watch in a dry place when not in use.
- Avoid exposing the watch to extreme temperatures or direct sunlight for prolonged periods.

4.3 Battery Replacement

The watch uses 1 Nonstandard Battery. When the display becomes dim or the watch stops functioning, the battery may need replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure the water resistance seal is maintained.

5. TROUBLESHOOTING

- **Display is blank or dim:** Check the battery. If the battery is low, replace it.
- **Time is incorrect:** Follow the instructions in Section 3.1 to reset the time.
- **Buttons are unresponsive:** Ensure the watch is not in a locked mode (if applicable, though this model does not specify one). Try pressing the buttons firmly. If the issue persists, the battery might be very low or there could be an internal malfunction.
- **Water inside the watch:** If moisture appears inside the watch, stop using it immediately and seek professional repair to prevent further damage.

If you encounter issues not listed here or if troubleshooting steps do not resolve the problem, please contact customer support.

6. SPECIFICATIONS

Feature	Specification
Model Name	SKF2016
Item Model Number	2016
Display Type	Digital
Watch Movement Type	Japanese Quartz
Water Resistance Depth	50 Meters (5ATM)
Case Material	ABS
Band Material	TPU (Polyurethane)
Mirror Material	Glass / Resin
Clasp Type	Buckle

Feature	Specification
Case Diameter	31 mm
Case Thickness	10 mm
Band Width	20 mm
Overall Watch Length	245 mm
Item Weight	0.05 Kilograms (1.76 ounces)
Power Source	Battery Powered (1 Nonstandard Battery required)
Additional Features	Alarm, Chronograph, Easy Reader, Shock Resistant, Timer, EL Light

7. WARRANTY AND SUPPORT

Gosasa offers a **12-month after-service** for this product. If you have any questions or require assistance with your watch, please contact Gosasa customer support. For returns or exchanges, a 30-day no-reason return and exchange policy is available through the seller. For further assistance, please refer to the seller's contact information on the purchase platform.