

WOCKODER R608

WOCKODER R608 Vinyl Record Player Instruction Manual

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your WOCKODER R608 Vinyl Record Player. Please read this manual thoroughly before using the product to ensure correct operation and to prevent damage. Keep this manual for future reference.

WHAT'S IN THE BOX

Carefully unpack all components and ensure you have the following items:

- Turntable Unit R608
- Power Adapter (DC 5V 1000mA)
- 45 RPM Adapter
- Instruction Manual (this document)
- Detachable Dust Cover

Note: Please use only the original power adapter provided. Do not use an adapter that exceeds the specified voltage and current.


PRODUCT FEATURES

- **Three-Speed Turntable:** Supports 33, 45, and 78 RPM playback for 7", 10", and 12" vinyl records.
- **Built-in Stereo Speakers:** Provides integrated audio output.
- **Bluetooth Receiver:** Allows wireless streaming of audio from compatible devices.
- **Multiple Connectivity Options:** Includes AUX input, headphone jack, and RCA line out for versatile audio connections.
- **Belt-Driven Anti-Vibration System:** Designed to reduce shock and improve sound quality.
- **Auto Stop Function:** Automatically stops the turntable when a record finishes playing.
- **Removable Dust Cover:** Protects records and the turntable from dust.

COMPONENT IDENTIFICATION

Familiarize yourself with the various parts of your record player:

VINTAGE LOOKING WITH MODERN TECHNOLOGY

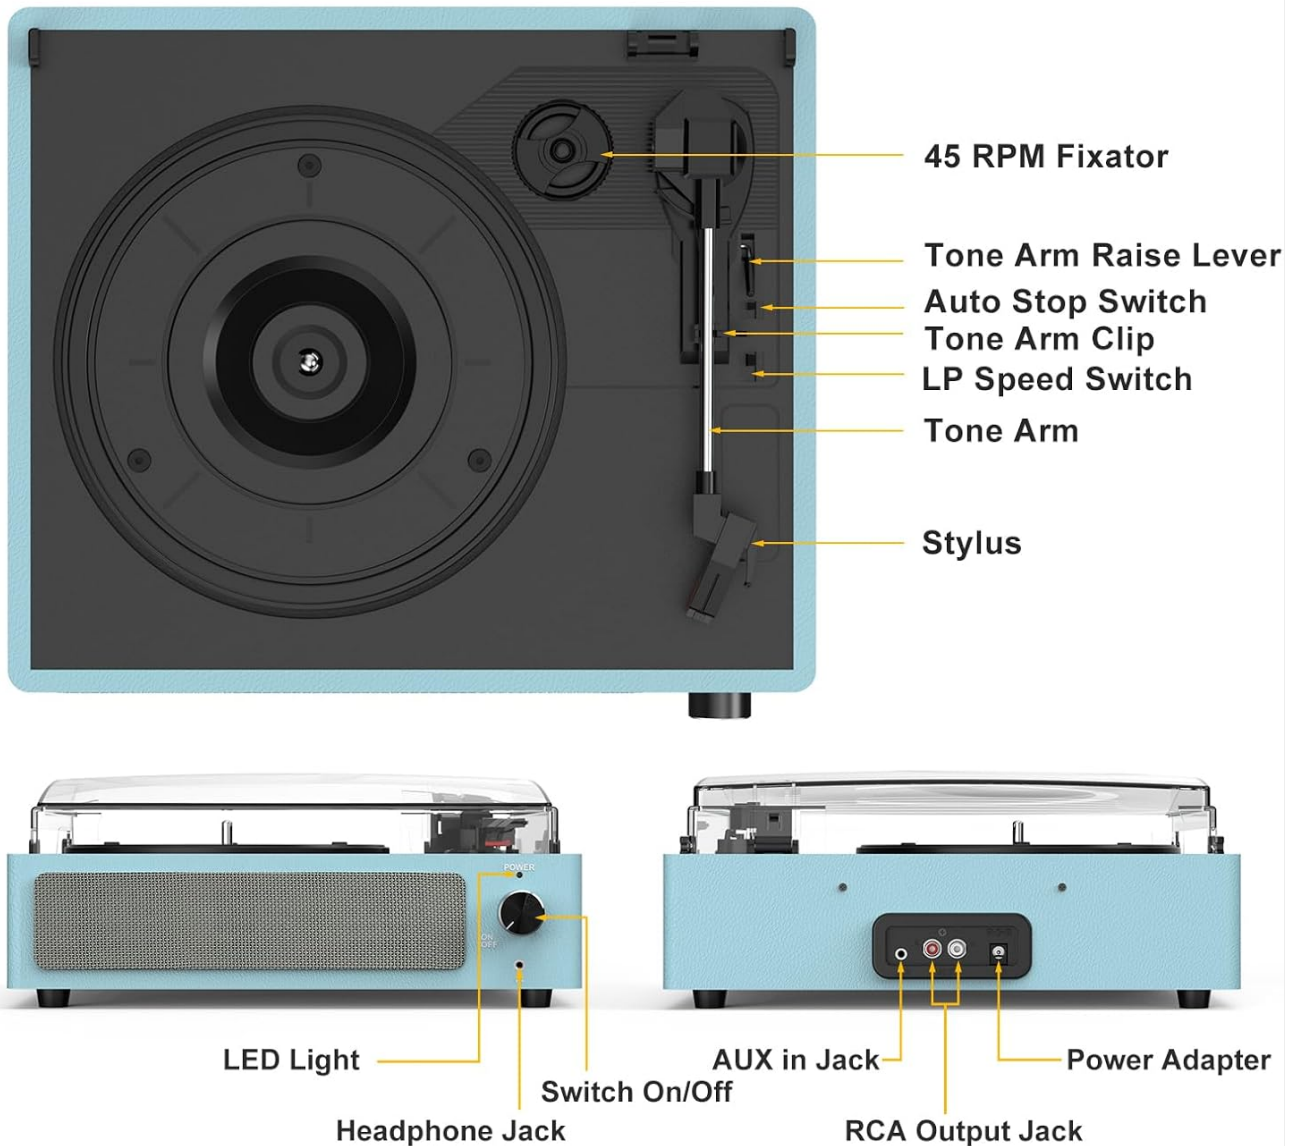

Description of Components:

- **45 RPM Fixator:** Used to secure 7-inch records with large center holes.
- **Tone Arm Raise Lever:** Lifts and lowers the tone arm gently onto the record.
- **Auto Stop Switch:** Engages or disengages the automatic stop function.
- **Tone Arm Clip:** Secures the tone arm when not in use.
- **LP Speed Switch:** Selects playback speed (33, 45, or 78 RPM).
- **Tone Arm:** Holds the stylus and tracks the record grooves.
- **Stylus:** The needle that reads the record grooves.
- **LED Light:** Indicates power and mode status.
- **Switch On/Off / Volume Knob:** Turns the unit on/off and adjusts the volume.
- **Headphone Jack:** For connecting headphones.

- **AUX In Jack:** For connecting external audio sources via a 3.5mm cable.
- **RCA Output Jack:** For connecting to external speakers or an amplifier.
- **Power Adapter Port:** Connects to the DC 5V power adapter.

SETUP INSTRUCTIONS

1. **Unpack the Unit:** Carefully remove the record player and all accessories from the packaging.
2. **Place the Unit:** Position the record player on a stable, level surface away from direct sunlight, heat sources, and excessive vibration.
3. **Install Dust Cover:** Attach the detachable dust cover to the hinges at the back of the unit.
4. **Remove Stylus Protector:** Gently remove the white plastic stylus protector from the stylus assembly. Be careful not to bend the stylus.
5. **Connect Power:** Insert the DC plug of the power adapter into the Power Adapter Port on the back of the unit. Plug the AC adapter into a wall outlet.

OPERATING INSTRUCTIONS

Playing Vinyl Records

1. **Power On:** Turn the On/Off/Volume knob clockwise to power on the unit. The LED indicator will light up.
2. **Select Speed:** Set the LP Speed Switch to the appropriate speed (33, 45, or 78 RPM) for your record. Use the 45 RPM adapter for 7-inch singles with large center holes.
3. **Place Record:** Place your vinyl record on the turntable platter.
4. **Auto Stop:** If desired, set the Auto Stop Switch to ON. The turntable will stop automatically when the record finishes. If set to OFF, the turntable will continue to spin.
5. **Position Tone Arm:** Release the Tone Arm Clip. Gently lift the tone arm using the Tone Arm Raise Lever. Move the tone arm over the desired track of the record.
6. **Lower Tone Arm:** Slowly lower the tone arm onto the record using the Tone Arm Raise Lever. The music will begin to play.
7. **Adjust Volume:** Rotate the On/Off/Volume knob to adjust the sound level.
8. **After Playback:** Once the record finishes (or you manually stop it), lift the tone arm using the lever, return it to its rest, and secure it with the Tone Arm Clip. Turn the On/Off/Volume knob counter-clockwise to power off the unit.

BUILT-IN STEREO SPEAKER & BLUETOOTH



Streaming music
wirelessly from your
phone, tablets and etc

Built-in speaker setup,
don't worry about no
speakers at home.

This image illustrates the three-speed capability of the record player, supporting 7-inch (45 RPM), 10-inch (78 RPM), and 12-inch (33 RPM) vinyl records.



WIRELESS
CONNECTIVITY



AUX-IN &
HEADPHONE JACK



BUILT-IN
SPEAKER



THREE-SPEED
VINYL PLAYER



RCA OUTPUT
TO CONNECT



COME WITH 45
SPEED ADAPTER

This image provides a detailed view of key features such as the stable stylus, the belt-driven mechanism with spring for anti-vibration, and the auto-stop button.

Bluetooth Mode

1. **Activate Bluetooth:** Turn the On/Off/Volume knob clockwise to power on the unit. The unit will automatically enter Bluetooth pairing mode, indicated by a flashing blue LED light and an audible announcement.
2. **Pair Device:** On your mobile device (smartphone, tablet, etc.), enable Bluetooth and search for available devices. Select "WOCKODER R608" from the list.
3. **Confirm Connection:** Once paired, the blue LED light will become solid, and you will hear a confirmation sound.
4. **Play Music:** Start playing music on your connected device. The audio will stream through the record player's built-in speakers.
5. **Adjust Volume:** Use the On/Off/Volume knob on the record player and/or your connected device to adjust the volume.



7"
45RPM

10"
78RPM

12"
33RPM



THREE SPEED PLAYER

Play 7"/10"/12" vinyl,
support 33/45/78 RPM

This image demonstrates the Bluetooth streaming functionality, allowing you to play music from your smartphone or other devices wirelessly.

AUX Input

To play audio from an external device (e.g., MP3 player, CD player) through the record player's speakers:

1. **Connect Cable:** Plug one end of a 3.5mm audio cable (not included) into the headphone jack or line-out port of your external device. Plug the other end into the AUX In Jack on the back of the record player.
2. **Select Mode:** The unit should automatically switch to AUX mode. If not, ensure no record is playing and Bluetooth is disconnected.
3. **Play Music:** Start playing music on your external device.
4. **Adjust Volume:** Adjust the volume using the On/Off/Volume knob on the record player and/or the volume control on your external device.

RCA Line Out

To connect the record player to external speakers or an amplifier for enhanced sound:

1. **Connect RCA Cables:** Connect RCA audio cables (not included) to the RCA Output Jacks (red for right

channel, white for left channel) on the back of the record player.

2. **Connect to External System:** Connect the other end of the RCA cables to the corresponding audio input jacks on your external amplifier or powered speakers.
3. **Adjust Volume:** Control the volume primarily through your external audio system.

Headphone Output

For private listening:

1. **Connect Headphones:** Plug your headphones into the Headphone Jack on the front of the unit.
2. **Adjust Volume:** Adjust the volume using the On/Off/Volume knob.



This image highlights the various connectivity options and features of the record player, including wireless Bluetooth, AUX input, headphone output, RCA output, and the 45 RPM adapter.

MAINTENANCE

Cleaning the Unit

- Wipe the exterior with a soft, slightly damp cloth. Do not use abrasive cleaners or solvents.
- Keep the dust cover clean to prevent dust from settling on the platter and records.

Cleaning the Stylus

- Use a soft brush, specifically designed for stylus cleaning, and brush gently from back to front.
- Avoid touching the stylus with your fingers.

Record Care

- Handle records by their edges to avoid touching the grooves.
- Store records vertically in their sleeves in a cool, dry place.
- Clean records regularly with a record cleaning brush or solution.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power adapter not connected; outlet not working; unit off.	Ensure power adapter is securely connected to unit and a working outlet. Turn the On/Off/Volume knob clockwise.
No sound from speakers	Volume too low; incorrect mode selected; external speakers not connected properly (if using RCA out).	Increase volume. Ensure correct mode (Phono, Bluetooth, AUX) is active. Check RCA connections and external speaker power/volume.
Record skipping	Record is dirty or scratched; stylus is dirty or worn; unit is not level; excessive vibration.	Clean the record. Clean or replace the stylus. Place the unit on a stable, level surface. Avoid placing near vibrating objects.
Incorrect playback speed	LP Speed Switch set incorrectly.	Adjust the LP Speed Switch to the correct RPM (33, 45, or 78) for your record.
Bluetooth connection issues	Device too far; Bluetooth not enabled on device; unit already paired to another device.	Ensure your device is within range. Enable Bluetooth on your device. Disconnect from other Bluetooth devices.
Loud Bluetooth announcement/flashing light	Normal operation when in Bluetooth pairing mode or when a record finishes playing.	This is an intended feature. To avoid the announcement, ensure a record is playing or the unit is powered off when not in use.

SPECIFICATIONS

- **Brand:** WOCKODER
- **Model Name:** R608
- **Color:** Sky Blue
- **Material:** Plastic
- **Maximum Rotational Speed:** 78 rpm
- **Motor Type:** DC Motor
- **Power Source:** Corded Electric

- **Voltage:** 5 volts
- **Connectivity Technology:** Bluetooth
- **Signal-to-Noise Ratio:** 60 dB
- **Compatible Devices:** Headphone (via jack)

WARRANTY AND SUPPORT

This WOCKODER R608 Vinyl Record Player comes with a **1 Year Warranty** from the date of purchase.

For technical support, warranty claims, or any questions regarding your product, please refer to the contact information provided on the product packaging or the official WOCKODER website. Please retain your proof of purchase for warranty service.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question