

[Manuals.plus](#) /

› [Kircuit](#) /

› Instruction Manual for Kircuit AC Adapter for Sylvania Monavi Flex #72949-0 Lamp

Kircuit AC Adapter for Sylvania Monavi Flex #72949-0

Instruction Manual

Kircuit AC Adapter for Sylvania Monavi Flex #72949-0 Adjustable Lamp

PRODUCT OVERVIEW

This manual provides essential information for the safe and effective use of your Kircuit AC Adapter, designed as a compatible replacement power supply for the Sylvania Monavi Flex #772949-0 Adjustable Lamp. This adapter converts standard AC wall power into the DC power required by your device, enabling operation and battery charging.



Image: The Kircuit AC Adapter, a black rectangular unit with a two-prong US plug, connected to a black DC power cord with a yellow-tipped

barrel connector. The adapter label shows "KIRCUT AC/DC ADAPTOR INPUT: 100-240V AC 50/60Hz 0.3A".

SAFETY INFORMATION

- Ensure the adapter's voltage and current ratings match your device's requirements.
- Do not expose the adapter to water, moisture, or extreme temperatures.
- Avoid dropping or subjecting the adapter to strong impacts.
- Do not attempt to disassemble or repair the adapter. Refer to qualified personnel for service.
- Unplug the adapter from the power outlet when not in use for extended periods.
- Keep out of reach of children.

SETUP

1. **Verify Compatibility:** Confirm that your device, specifically the Sylvania Monavi Flex #72949-0 Adjustable Lamp, requires a DC power supply with the specifications provided by this Kircuit adapter.
2. **Inspect Adapter:** Before first use, visually inspect the adapter and its cord for any signs of damage, fraying, or exposed wires. Do not use if damaged.
3. **Connect to Device:** Insert the DC barrel connector of the Kircuit AC Adapter firmly into the power input port of your Sylvania Monavi Flex #72949-0 Adjustable Lamp.
4. **Connect to Power Outlet:** Plug the two-prong AC plug of the adapter into a standard 100V-240V AC electrical wall outlet.



Image: Two Kircuit AC Adapters are shown, one upright and one on its side, highlighting the compact design and the two-prong plug. The label with input/output specifications is visible on the top adapter.

OPERATING INSTRUCTIONS

Once the Kircuit AC Adapter is properly connected to both your Sylvania Monavi Flex #72949-0 Adjustable Lamp and a power outlet, your device should receive power. The adapter is designed for continuous operation, providing stable power to your lamp.

- The adapter will automatically convert the AC input to the required DC output for your device.
- No user interaction is required for power conversion.
- If your device has a battery, the adapter will facilitate charging while connected and powered.



Image: The Kircuit AC Adapter is shown plugged into a white power strip on a wooden desk, next to a calculator and a small potted plant, demonstrating a typical use environment.

MAINTENANCE

The Kircuit AC Adapter requires minimal maintenance to ensure its longevity and optimal performance.

- **Cleaning:** Disconnect the adapter from both the power outlet and your device before cleaning. Use a soft, dry cloth to wipe the exterior. Do not use liquid cleaners or abrasive materials.
- **Storage:** When not in use, store the adapter in a cool, dry place, away from direct sunlight and extreme temperatures. Avoid tightly coiling the cord to prevent damage.
- **Cord Care:** Regularly check the power cord for any kinks, cuts, or signs of wear. Do not bend the cord sharply at the connector points.



Image: The Kircuit AC Adapter is displayed with its black power cord neatly coiled, indicating a cord length of 6.5 feet. The adapter's main body and DC connector are visible.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device not powering on/charging.	Adapter not properly plugged in. Power outlet is not active. Device's power input port is damaged. Adapter is faulty.	Ensure adapter is fully inserted into both the device and the wall outlet. Test the outlet with another working appliance. Inspect the device's power port for debris or damage. If possible, test the adapter with another compatible device or use a different adapter with your device to isolate the issue.

Problem	Possible Cause	Solution
Adapter feels unusually hot.	Overload or short circuit.	Disconnect immediately. Ensure the device is compatible and not drawing excessive power.
	Poor ventilation.	Ensure the adapter is in an open area with adequate airflow.
Flickering power to device.	Loose connection.	Check all connections for tightness.
	Damaged cord.	Inspect the cord for any visible damage. Replace if damaged.

SPECIFICATIONS

Feature	Detail
Brand	Kircuit
Input Voltage	100V-240V AC
Input Frequency	50/60Hz
Input Current	0.3A
Output	(Specific output voltage/current not provided on label or in product data)
Special Feature	Travel
Main Power Connector Type	2 Pin (US Standard)
Cord Length	Approximately 6.5 ft

Note: Specific output voltage and current are typically printed on the adapter label. Please refer to your adapter for precise output specifications.

WARRANTY AND SUPPORT

For information regarding warranty coverage and technical support for your Kircuit AC Adapter, please refer to the seller's return policy or contact the manufacturer directly.

- **Return Policy:** The buybox winner indicates a 30-day return policy for refund/replacement. Please check the specific terms with your retailer.
- **Manufacturer:** Shenzhen Waweis Technology Co., Ltd
- **Seller:** LGM DYstore (via Amazon.com)
- For further assistance, you may visit the [Kircuit brand page on Amazon](#) or contact the seller directly through your purchase platform.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question