

## Milex MCV004

# Milex Corded Stick Vacuum MCV004 User Manual

Model: MCV004

## IMPORTANT SAFETY INSTRUCTIONS

---

Please read all instructions carefully before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always ensure the power supply matches the voltage specified on the rating label.
- Do not use the vacuum cleaner on wet surfaces or to pick up liquids.
- Do not pick up burning or smoking objects, such as cigarettes, matches, or hot ashes.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Unplug from the electrical outlet when not in use and before cleaning or servicing.
- Do not use with a damaged cord or plug. If the cord is damaged, it must be replaced by the manufacturer or a qualified service agent to avoid a hazard.
- This appliance is for household use only.

## PRODUCT OVERVIEW

---

The Milex Corded Stick Vacuum MCV004 is a versatile 2-in-1 cleaning appliance designed for efficient dry vacuuming. It features a compact, lightweight design and a multi-cyclone system for consistent suction power. It can be used as a full-size stick vacuum or converted into a handheld unit for various cleaning tasks.

### Components Included:

- Main Vacuum Unit (Motor and Dust Cup Assembly)
- Extension Stick
- Floor Brush Head
- Crevice Tool / Small Brush (often integrated or separate)
- Reusable Dirt Cup
- Reusable Sponge Filter

- Power Cord with Plug



Image: Exploded view of the Milex Corded Stick Vacuum showing the main unit, dust cup, filter, and other detachable parts.

## SETUP AND ASSEMBLY

---

The Milex Corded Stick Vacuum can be assembled in two configurations: as a stick vacuum or as a handheld vacuum.

### Assembling the Stick Vacuum:

1. Insert the extension stick firmly into the main vacuum unit until it clicks into place.
2. Attach the floor brush head to the other end of the extension stick, ensuring it is securely fastened.
3. Ensure the dust cup and filter are correctly installed in the main unit.



Image: The Milex Corded Stick Vacuum assembled for floor cleaning.

### **Assembling the Handheld Vacuum:**

1. Detach the extension stick from the main vacuum unit if it is already assembled.
2. Directly attach the floor brush head or the crevice tool/small brush to the main vacuum unit.
3. Ensure the dust cup and filter are correctly installed.



Image: The Milex Corded Stick Vacuum configured as a handheld unit with a brush attachment.

## OPERATING INSTRUCTIONS

---

Follow these steps to operate your Milex Corded Stick Vacuum.

1. Ensure the vacuum is correctly assembled for your desired cleaning task (stick or handheld).
2. Plug the power cord into a suitable electrical outlet (AC 220-240V, 50/60Hz).
3. Locate the ON/OFF switch on the main vacuum unit.
4. Press the switch to the 'ON' position to start the vacuum.
5. Begin vacuuming the desired surface. For optimal performance, move the vacuum slowly and steadily.
6. When finished, press the switch to the 'OFF' position and unplug the power cord from the outlet.

**Note:** This is a corded vacuum cleaner. Always ensure the power cord is safely managed during operation to prevent tripping hazards and damage to the cord.

## MAINTENANCE

---

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner.

### Emptying the Dust Cup:

1. Ensure the vacuum is unplugged from the power outlet.
2. Locate the quick-release button for the dust cup on the main vacuum unit.
3. Press the quick-release button to detach the dust cup.
4. Hold the dust cup over a waste bin and empty its contents.
5. Reattach the dust cup to the main unit, ensuring it clicks securely into place.

### Cleaning the Reusable Sponge Filter:

1. After emptying the dust cup, remove the sponge filter from inside the dust cup.
2. Rinse the sponge filter under cool, running water until the water runs clear.
3. Allow the filter to air dry completely for at least 24 hours before reinserting it into the dust cup. Do not use the vacuum with a wet filter.
4. Once dry, place the filter back into the dust cup and reattach the dust cup to the main unit.

**Recommendation:** Clean the filter after every 3-5 uses, or more frequently if vacuuming fine dust or pet

hair, to maintain strong suction.

## TROUBLESHOOTING

---

If you encounter issues with your vacuum cleaner, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Vacuum does not turn on.	Not plugged in; Power outlet fault; Power switch off.	Ensure plug is fully inserted; Test outlet with another appliance; Turn power switch to 'ON'.
Loss of suction.	Dust cup full; Filter clogged; Blockage in hose/attachments.	Empty dust cup; Clean or replace filter; Check for and remove blockages.
Unusual noise.	Blockage; Damaged component.	Check for and remove blockages; If noise persists, discontinue use and contact support.

## SPECIFICATIONS

---

- **Model:** MCV004
- **Brand:** Milex
- **Type:** Corded Stick Vacuum (2-in-1 Handheld)
- **Power:** AC 220-240V, 50/60Hz, 500W
- **Dust Capacity:** 0.5 Liters
- **Filter Type:** Reusable Sponge Filter (Cartridge type)
- **Special Features:** Lightweight, Portable, Multi-cyclone system, Bagless
- **Surface Recommendation:** All floors
- **Color:** Red; Grey
- **Product Dimensions (L x W x H):** 41L x 17.8W x 23.4H centimetres (Main unit with attachments may vary)

## WARRANTY AND SUPPORT

---

For warranty information or technical support, please refer to the documentation provided at the time of purchase or contact Milex customer service directly. Keep your proof of purchase for any warranty claims.

For further assistance, please visit the official Milex website or contact their authorized service centers.