

RM-Series C40227DVB

RM Series Remote Control

INSTRUCTION MANUAL

1. Introduction

This manual provides comprehensive instructions for the RM Series replacement remote control. This remote is designed to operate all functions of your original remote control for compatible GOODMANS TV models, including C40227DVB, C40227FT2V6, G22230F-LED, G24230F, G24230F-LED, G28227FLED, G28227F-LED, G32227DVB-LED, G32227F-LED, and G32227FT2V2. It requires no programming; simply insert batteries, and it is ready for use.

The RM Series remote controls are assembled and tested in the UK, utilizing the latest chip-sets to ensure accurate infrared code matching with the original remote. All buttons are clearly labelled to correspond directly with their functions, eliminating the need for constant manual reference.

2. Product Overview

The RM Series remote control features a robust design for durability and ease of use. Below are images illustrating the remote's layout and components.





Figure 2.1: Front view of the RM Series remote control, showing all buttons and their labels. The remote is black with white and colored button labels.





Figure 2.2: Back view of the RM Series remote control with the battery compartment cover removed, revealing the slot for two AAA

batteries.





Figure 2.3: Back view of the RM Series remote control with the battery compartment cover securely installed.

Button Layout:

- **Power Button:** Located at the top right, used to turn the TV on or off.
- **Number Pad (0-9):** For direct channel input.
- **Navigation Cluster:** Includes directional arrows (Up, Down, Left, Right) and an 'OK' button for menu navigation and selection.
- **Volume Control (VOL +/-):** Adjusts the audio volume.
- **Channel Control (P +/-):** Changes TV channels.
- **Playback Controls:** REC, PLAY, PAUSE, STOP, PREV, REW, FWD, NEXT for media playback.
- **Menu/Exit/Back:** Buttons for accessing menus, exiting screens, and going back.
- **Dedicated App Buttons:** Includes buttons for popular streaming services like NETFLIX and YouTube (if present on your specific model).
- **Color Buttons:** Red, Green, Yellow, Blue buttons for specific functions within menus or applications.

3. Setup

The RM Series remote control is designed for immediate use without any programming or setup. Follow these simple steps to begin using your remote:

1. **Open the Battery Compartment:** Locate the battery cover on the back of the remote control. Slide or press the latch to open it.
2. **Insert Batteries:** Insert two (2) AAA batteries into the compartment, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
3. **Close the Battery Compartment:** Replace the battery cover, ensuring it clicks securely into place.
4. **Test the Remote:** Point the remote control towards your compatible GOODMANS TV and press the Power button. The TV should respond.

No further setup is required. The remote is now ready to operate your television.

4. Operating Instructions

To operate your television using the RM Series remote control, ensure there is a clear line of sight between the remote's infrared emitter (located at the top front of the remote) and the TV's infrared receiver.

Basic Functions:

- **Power On/Off:** Press the **POWER** button.
- **Volume Adjustment:** Press **VOL+** to increase volume, **VOL-** to decrease volume.
- **Channel Change:** Press **P+** to go to the next channel, **P-** to go to the previous channel. Use the number pad for

direct channel entry.

- **Mute:** Press the **MUTE** button to silence the TV audio. Press again to unmute.
- **Menu Navigation:** Use the directional arrow buttons (**▲ ▼ ◀▶**) to navigate through on-screen menus. Press **OK** to confirm a selection.
- **Source/Input:** Press the **SOURCE** button to cycle through available input sources (HDMI, AV, etc.).
- **Exit:** Press the **EXIT** button to close menus or on-screen displays.
- **Back:** Press the **BACK** button to return to the previous screen or menu.

Advanced Functions:

- **Media Playback:** Use **PLAY**, **PAUSE**, **STOP**, **REC**, **PREV**, **REW**, **FWD**, **NEXT** buttons for controlling media playback on compatible devices or TV functions.
- **Dedicated App Access:** If your TV supports it, press buttons like **NETFLIX** or **YouTube** to directly launch these applications.
- **EPG (Electronic Program Guide):** Press **EPG** to view the program guide.
- **Text/Teletext:** Press **TEXT** to access teletext services.
- **Subtitle:** Press **SUBTITLE** to enable or disable subtitles.

5. Maintenance

Proper care and maintenance will ensure the longevity of your RM Series remote control.

- **Cleaning:** Wipe the remote control with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. If the remote will not be used for an extended period, remove the batteries to prevent leakage.
- **Avoid Drops:** While designed for sturdiness, avoid dropping the remote control, as this can damage internal components.

6. Troubleshooting

If you experience issues with your RM Series remote control, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Remote is not working.	Batteries are dead or inserted incorrectly. Obstruction between remote and TV. Remote's infrared emitter is blocked.	Replace batteries with new AAA batteries, ensuring correct polarity (+/-). Remove any objects blocking the line of sight to the TV's IR receiver. Ensure your hand or other objects are not covering the top front of the remote.
Remote works intermittently.	Low battery power. Interference from other electronic devices.	Replace batteries. Move other electronic devices that might be causing interference.
Specific buttons are not responding.	Button malfunction. TV model incompatibility for that specific function.	Ensure the button is pressed firmly. Verify your TV model is listed as compatible for all functions. While this remote is designed to operate ALL functions, some very specific smart TV features might require the original remote if not standard IR commands.

7. Specifications

- Model:** C40227DVB (Compatible with various GOODMAN models)
- Brand:** RM-Series
- Connectivity Technology:** Infrared (IR)
- Controller Type:** Button Control
- Power Source:** 2 x AAA Batteries (not included)
- Maximum Range:** Approximately 10 Metres (33 feet)
- Colour:** Black
- Package Dimensions:** 23 x 4.8 x 2.1 cm (approx.)
- Item Weight:** 110 g (approx.)
- Special Feature:** Wireless, No programming required
- Country of Origin:** China (Assembled and tested in the UK)
- Compliance:** CE and ROHS compliant

8. Warranty and Support

The RM Series remote control is a high-quality replacement product designed for reliability and long-term use. It undergoes vigorous testing and is assembled and checked in the UK to ensure superior quality.

For any issues or inquiries regarding your RM Series remote control, please contact the seller or manufacturer directly through your purchase platform. Please refer to your purchase documentation for specific return or support policies.

© 2023 RM Series. All rights reserved.