



Manuals.plus /

› **RM-Series** /

› RM Series Remote Control User Manual

RM-Series 22E92NH22

RM Series Remote Control User Manual

COMPATIBLE WITH THOMSON TVs

Model: 22E92NH22

INTRODUCTION

This manual provides essential information for the setup, operation, and maintenance of your RM Series replacement remote control. Designed to fully replicate the functions of your original THOMSON remote, this unit requires no programming and is ready for use upon battery insertion. It is specifically engineered to ensure all buttons are correctly labelled, providing an intuitive user experience.

SETUP

Inserting Batteries

The RM Series remote control requires two (2) AAA batteries (not included) for operation. Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

Note: This remote control is a dedicated replacement and does not require any programming or setup. It is ready to use immediately after battery insertion.





Image: Rear view of the remote control, showing the closed battery compartment.





Image: Rear view of the remote control with the battery compartment open, illustrating where to insert the AAA batteries.

OPERATING INSTRUCTIONS

The RM Series remote control is designed to operate all fixed button functions of your original THOMSON remote. Its buttons are clearly labelled to correspond directly with their intended functions, eliminating the need for complex instructions or constant manual reference.





Image: Front view of the RM Series remote control, displaying its full button layout.

Basic Functions

- **Power Button:** Located at the top, typically red, to turn the TV on or off.
- **Number Buttons (0-9):** For direct channel selection.
- **Volume Up/Down (VOL +/-):** Adjusts the audio volume.
- **Channel Up/Down (P +/-):** Changes TV channels.
- **Menu Button:** Accesses the TV's main menu.
- **Navigation Buttons (Arrows & OK):** Used to navigate menus and confirm selections.
- **Source/Input Button:** Switches between different input sources (e.g., HDMI, AV).
- **Mute Button:** Silences the TV audio.

The remote operates using infrared technology and has a maximum effective range of 10 metres. Ensure a clear line of sight between the remote control and the TV's infrared receiver for optimal performance.

MAINTENANCE

Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Avoid using abrasive cleaners, solvents, or strong chemicals, as these can damage the remote's finish or internal components.

Battery Replacement

Replace batteries when the remote's performance degrades, such as reduced range or unresponsive buttons. Always replace both batteries simultaneously with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

Storage

When not in use for extended periods, it is advisable to remove the batteries to prevent leakage, which could damage the remote control.

TROUBLESHOOTING

Remote Not Responding

- **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity (+/-).
- **Replace Batteries:** If batteries are old or depleted, replace them with fresh AAA batteries.
- **Line of Sight:** Ensure there are no obstructions between the remote control and the TV's infrared receiver.
- **Remote Sensor:** Confirm the TV's remote sensor is not blocked or dirty.

Intermittent Operation

- This often indicates low battery power. Replace the batteries.
- Ensure you are within the maximum operating range of 10 metres.

SPECIFICATIONS

Brand	RM-Series
Model Name	THOMSON 22E92NH22
Item Model Number	22E92NH22
Connectivity Technology	Infrared
Special Feature	Wireless
Controller Type	Button Control
Number of Buttons	45
Maximum Range	10 Metres
Batteries Required	2 AAA batteries
Package Dimensions	22 x 4.9 x 2.5 cm
Weight	100 g
Country of Origin	China
Compatible Devices	26E90NH22, 26E92NH22, 32E90NH22, 32E92NH22, 32E92NH22C, 32E92NH22W, 40E90NH22, 46E91NF32, 06019W49A000X, 06-019W49-A000X

WARRANTY INFORMATION

Specific warranty details for this product are not provided in the available information. Please refer to your purchase documentation or contact the retailer for warranty terms and conditions.

CUSTOMER SUPPORT

For further assistance or inquiries regarding your RM Series remote control, please contact the retailer or the manufacturer directly. Contact information is typically available on the product packaging or the seller's website.

