

## eKids Wi-554TR

# eKids Trolls Band Together Karaoke Machine (Model Wi-554TR)

Instruction Manual

## 1. INTRODUCTION

---

This manual provides essential information for the safe and effective operation of your eKids Trolls Band Together Karaoke Machine, Model Wi-554TR. This portable Bluetooth speaker with a wired microphone is designed for children to enjoy singing along to their favorite music. Please read these instructions thoroughly before use and retain them for future reference.



Figure 1: Front view of the eKids Trolls Band Together Karaoke Machine with the included wired microphone.

## 2. PACKAGE CONTENTS

- eKids Trolls Band Together Karaoke Machine
- 1 Wired Microphone
- USB Charging Cable

## 3. SETUP

### 3.1 Charging the Device

The karaoke machine features a built-in rechargeable lithium-ion battery. Before first use, fully charge the device using the provided USB charging cable. Connect the small end of the USB cable to the charging port on the back of the unit and the larger end to a standard USB power adapter (not included) or a computer's USB port. The charging indicator light will illuminate during charging and turn off when fully charged.



Figure 2: Rear view of the karaoke machine, highlighting the USB charging port and other controls.

### 3.2 Connecting the Microphone

Plug the wired microphone into one of the two microphone jacks located on the front of the unit. Ensure the microphone's ON/OFF switch is set to 'ON' for operation.





Figure 3: The wired microphone plugged into the karaoke machine, ready for use.

## 4. OPERATING INSTRUCTIONS

### 4.1 Power On/Off

Press and hold the **Power Button** (usually marked with a power symbol) on the front panel to turn the unit ON or OFF.

### 4.2 Bluetooth Pairing

1. Turn on the karaoke machine. It will automatically enter Bluetooth pairing mode.
2. On your Bluetooth-enabled device (smartphone, tablet, etc.), go to the Bluetooth settings.
3. Select the device named "**BT-553**" from the list of available devices.
4. Once paired, you will hear an audible confirmation.

### 4.3 EZ Link Feature

The EZ Link feature allows for quick access to Trolls playlists on your preferred streaming service (app

required). After pairing your device via Bluetooth, simply press the dedicated **EZ Link Button** on the karaoke machine to automatically connect to Trolls music.

#### 4.4 Volume and Echo Control

- Use the **Volume Up (+)** and **Volume Down (-)** buttons to adjust the overall music volume.
- Use the **Mic Volume Up (+)** and **Mic Volume Down (-)** buttons to adjust the microphone volume.
- Press the **Echo Button** to add an echo effect to your singing.

#### 4.5 Multi-colored LED Light Show

The karaoke machine features multi-colored LED lights that synchronize with the music, enhancing the performance experience. The lights activate automatically when the unit is powered on and music is playing.



Figure 4: A child enjoying the karaoke machine, demonstrating the interactive light show.

### 5. RECORDING FUNCTION

---

You can record your performances directly onto a USB drive (not included). Insert a USB drive into the dedicated USB port on the front panel. Press the **Record Button** to begin recording. Press it again to stop. Your recordings will be saved as MP3 files on the USB drive.





Figure 5: Overview of the karaoke machine's features, including the USB port for recording.

## 6. OFFICIAL PRODUCT VIDEO

Video 1: An official product overview of the eKids Trolls Band Together Karaoke Machine, demonstrating its key features and functionality.

## 7. MAINTENANCE

### 7.1 Cleaning

Wipe the unit with a soft, dry cloth. Do not use liquid cleaners or abrasive materials. Ensure all ports are dry before charging or connecting accessories.

### 7.2 Storage

When not in use, store the karaoke machine in a cool, dry place away from direct sunlight and extreme temperatures. Disconnect the microphone and charging cable before storage.

## 8. TROUBLESHOOTING

- **No Power:** Ensure the unit is fully charged. If the issue persists, try a different USB charging cable or power adapter.
- **No Sound:** Check the master volume and microphone volume levels. Ensure the microphone is switched ON. Verify that your Bluetooth device is properly paired and playing music.
- **Bluetooth Not Connecting:** Make sure the karaoke machine is in pairing mode. Turn off and on your device's Bluetooth, then try pairing again. Ensure no other devices are currently connected to the karaoke machine.
- **Recording Issues:** Ensure a compatible USB drive is inserted and has sufficient free space.




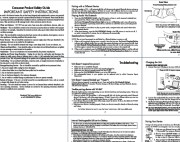
## 9. SPECIFICATIONS


 
Brand	eKids
Model Number	Wi-554TR
Item Weight	2.66 pounds
Product Dimensions	8.18 x 4.09 x 11 inches
Batteries	1 Lithium Ion battery (included)
Power Source	Battery Powered
Connector Type	USB
Compatible Devices	Personal Computer, Radio, Smartphone, Tablet
Included Components	Microphone

## 10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the product packaging or visit the official eKids website. Keep your purchase receipt as proof of purchase for any warranty claims.

### Related Documents - Wi-554TR

	<p><a href="#">eKids 554 Series Bluetooth Karaoke with EZ Link User Manual</a></p> <p>This manual provides instructions for the eKids 554 Series Bluetooth Karaoke with EZ Link, covering setup, operation, maintenance, and troubleshooting. Learn how to connect via Bluetooth, use USB mode, record audio, and utilize the EZ Link app for music playlists.</p>
	<p><a href="#">eKids Bluetooth Karaoke Microphone with EZ Link Technology (Model: Di-B24EN.EXv1M) - User Guide</a></p> <p>User guide for the eKids Bluetooth Karaoke Microphone with EZ Link Technology (Model: Di-B24EN.EXv1M). Learn about setup, charging, Bluetooth connection, EZ Link app usage, controls, warranty, and troubleshooting.</p>
	<p><a href="#">eKids Bluetooth Karaoke with EZ Link Model 554 Series User Manual</a></p> <p>Comprehensive user manual for the eKids Bluetooth Karaoke with EZ Link (Model 554 Series). Learn how to set up, use USB and Bluetooth modes, record audio, install the EZ Link app, and troubleshoot common issues. Includes warranty information and FCC compliance details.</p>
	<p><a href="#">Ekids iHome Wi-B67 Trolls Portable Bluetooth Speaker User Manual</a></p> <p>Comprehensive user manual for the Ekids iHome Wi-B67 Trolls Portable Bluetooth Speaker, covering safety instructions, operation, troubleshooting, and battery disposal.</p>

	<p><a href="#">eKids 553 Series Bluetooth MP3 Karaoke with 2 Microphones: User Manual</a></p> <p>User manual for the eKids 553 Series Bluetooth MP3 Karaoke system, covering setup, operation modes (USB, MP3, Bluetooth), microphone usage, charging, troubleshooting, and warranty information.</p>
	<p><a href="#">Pokémon Walkie Talkies PK-207.EXv24 User Guide</a></p> <p>User guide for the Pokémon Walkie Talkies PK-207.EXv24, featuring static-free extended range and an easy push-to-talk button. Includes setup, battery installation, and FCC compliance information.</p>