

Accutime SPD4935AZ

Accutime Spiderman Ghost Spider Kids Smartwatch Instruction Manual

Model: SPD4935AZ

INTRODUCTION

This manual provides comprehensive instructions for the Accutime Spiderman Ghost Spider Kids Smartwatch, Model SPD4935AZ. Designed for children aged 3 and up, this interactive touchscreen smartwatch offers a range of engaging features while prioritizing safety by operating without Wi-Fi, calling, or texting capabilities. It combines educational learning with entertainment, making it an ideal first smart device for young users.

WHAT'S IN THE BOX

- Accutime Spiderman Ghost Spider Kids Smartwatch
- Built-in Rechargeable Battery (pre-installed)
- USB Charging Cable

KEY FEATURES

- **Touchscreen Display:** Easy-to-navigate interface for young users.
- **Selfie Camera:** Capture photos and videos directly from the wrist.
- **Photo Album Viewer:** Browse saved pictures.
- **Video Player:** Watch recorded videos.
- **Voice Recorder:** Record and play back audio messages.
- **Games:** Multiple pre-loaded interactive games for entertainment.
- **Alarm Clock:** Set reminders for daily activities.
- **Calculator:** Basic arithmetic functions.
- **Pedometer:** Tracks steps taken, promoting physical activity.
- **Changeable Watch Faces:** Customize the display with various Spiderman-themed designs.
- **Safety Focused:** No Wi-Fi, calling, or texting capabilities.
- **Rechargeable Battery:** Long-lasting power with included USB charging.

SETUP

Initial Charging

Before first use, fully charge the smartwatch for at least three hours to ensure optimal battery performance. Locate the USB charging port on the side of the watch. Connect the provided USB charging cable to the watch and a compatible USB power source (e.g., computer USB port, USB wall adapter).



Side view of the smartwatch, highlighting the USB charging port for easy access.

OPERATING INSTRUCTIONS

Power On/Off

Press and hold the side button to power the smartwatch on or off.

Touchscreen Navigation

The smartwatch features a responsive touchscreen. Swipe left or right to navigate through different applications and features. Tap on an icon to select and open an application.

Changing Watch Faces

From the home screen, press and hold the display to cycle through various Spiderman-themed watch

faces. Release your finger when the desired watch face appears.



The smartwatch offers a variety of changeable watch faces, allowing personalization of the display.

Using the Camera

Tap the camera icon to open the camera application. Press the on-screen button to take photos or start/stop video recording. The camera is located at the top of the watch face.

Accessing Games and Tools

Swipe through the main menu to find icons for games, pedometer, alarm, calculator, voice recorder, and other tools. Tap the respective icon to launch the desired function.



The smartwatch packaging illustrates the range of features available, including camera, video, games, and pedometer.

Official Product Video

Watch this video for a quick overview of the iTime Kids Interactive Watch features, including games, pedometer, alarm, and camera functions.

MAINTENANCE

Cleaning

To clean the smartwatch, gently wipe the screen and strap with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.

Water Resistance

This smartwatch is NOT water-resistant. Avoid exposure to water, including rain, splashes, and submersion, as this can cause permanent damage to the device. Treat it with the same care as a mobile phone.

Troubleshooting

Watch Not Turning On

If the watch does not turn on, ensure it is fully charged. Connect it to the USB charging cable and allow it to charge for at least three hours. If the issue persists after charging, contact customer support.

Screen Malfunction After Water Exposure

If the screen turns white or the watch stops functioning after exposure to water, this indicates water damage. As the device is not water-resistant, such damage is typically irreversible. Do not attempt to dry it with rice or other methods, as internal components may already be compromised. Contact customer support for potential replacement options, though water damage may not be covered under warranty.

Specifications

Model Name	SPIDERMAN Smart Watch
Brand	Accutime
Item Model Number	SPD4935AZ
Screen Size	40 Millimeters
Shape	Square
Operating System	Custom
Special Features	Alarm Clock, Audio Recording, Camera, Pedometer, Time Display
Connectivity Technology	Bluetooth (for internal functions, not external device connection)
Wireless Communication Standard	Bluetooth (for internal functions, not external device connection)
Battery Type	1 Lithium Ion battery (included)
GPS	No GPS
Item Weight	0.22 Kilograms (approx. 7.8 ounces)
Manufacturer	Accutime Watch Corp.
Date First Available	August 23, 2023

Warranty and Support

Warranty Information







The Accutime Spiderman Ghost Spider Kids Smartwatch comes with a one-year warranty from Accutime Watch Corp. This warranty covers manufacturing defects under normal use. Please retain your proof of purchase for warranty claims.

Customer Support

For any questions, technical assistance, or warranty claims, please contact Accutime Watch Corp. customer support. Refer to the product packaging or the official Accutime website for the most current

contact information.

Related Documents - SPD4935AZ

	<p>Accutime Interactive Smartwatch User Manual - Features, Setup, and Troubleshooting</p> <p>Comprehensive user manual for the Accutime Interactive Smartwatch. Learn how to set up, use features like camera, games, alarm, pedometer, and settings. Includes troubleshooting and safety warnings.</p>
	<p>Accutime Interactive Watch User Guide</p> <p>User guide for the Accutime Interactive Watch, covering power functions, clock faces, status icons, battery charging, games, camera, video, pedometer, album viewer, time tools (alarm, stopwatch, timer), voice recorder, calculator, and settings. Includes troubleshooting and splash-proof information.</p>
	<p>Interactive Watch User Guide</p> <p>A user guide for the Interactive Watch, covering features such as powering on/off, clock faces, status bar icons, battery recharging, splash-proofing, games, camera, video recording, pedometer, album viewer, time tools (alarm, stopwatch, timer), voice recorder, calculator, and settings.</p>
	<p>Accutime Interactive Watch User Guide</p> <p>Comprehensive user guide for the Accutime Interactive Watch, covering power functions, status icons, battery charging, splash-proofing, games, time tools (alarm, stopwatch, timer), camera, video, pedometer, album viewer, voice recorder, calculator, settings, storage, and troubleshooting.</p>
	<p>Accutime Interactief Horloge Handleiding</p> <p>Officiële handleiding voor het Accutime interactieve horloge. Ontdek functies, specificaties, veiligheidsinstructies en onderhoudstips voor uw apparaat.</p>
	<p>Accutime Interactive Watch User Manual - Features, Settings, and Safety</p> <p>Comprehensive user guide for the Accutime Interactive Watch, detailing how to use its features including camera, video, stopwatch, timer, voice recorder, calculator, and settings. Includes important safety warnings and recycling instructions.</p>