

## BRIGHT NEXA

# BRIGHT NEXA 750W Mixer Grinder Instruction Manual

Model: NEXA

## 1. INTRODUCTION AND IMPORTANT SAFETY INSTRUCTIONS

Thank you for choosing the BRIGHT NEXA 750W Mixer Grinder. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your appliance. Please read all instructions carefully before first use and retain this manual for future reference.

### 1.1 Important Safety Precautions

- Always ensure the mixer grinder is unplugged from the power outlet before assembling, disassembling, cleaning, or when not in use.
- Do not immerse the motor unit, cord, or plug in water or any other liquid.
- Keep hands, spatulas, and other utensils away from the blades during operation to prevent injury and damage to the appliance.
- Ensure the jar lid is securely fastened before operating the mixer grinder.
- Do not operate the appliance if the power cord or plug is damaged, or if the appliance malfunctions or has been dropped or damaged in any manner. Contact customer service for assistance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Use the mixer grinder only with the specified voltage of 230V AC.
- A slight burning smell may occur during the first few uses. This is normal and due to the motor varnish heating up for the first time. It will dissipate after a few uses.
- The mixer grinder is equipped with an overload circuit breaker. If the motor stops due to overloading, switch off the appliance, unplug it, reduce the load in the jar, wait a few minutes, and then restart.
- This mixer is not suitable for egg whisking.

## 2. WHAT'S IN THE BOX

Your BRIGHT NEXA Mixer Grinder package includes the following components:

- 1 x Main Mixer Grinder Unit
- 1 x Liquidising Jar (1 liter capacity)
- 1 x Dry Grinder Jar (100 ml capacity)
- 1 x Chutney Jar (100 gms capacity)

### 3. PRODUCT OVERVIEW

The BRIGHT NEXA Mixer Grinder is designed for efficient and versatile kitchen tasks, featuring a powerful 750W high torque motor and a durable shock-proof ABS body. It comes with three stainless steel jars for various grinding and blending needs.



*Image: The BRIGHT NEXA Mixer Grinder main unit with the 1-liter liquidising jar, 100ml dry grinding jar, and 100g chutney jar.*

#### 3.1 Key Features

- Powerful 750 Watts High Torque Motor for efficient grinding.
- Shock-proof ABS Body for enhanced safety and durability.
- 3 Speed Control with Incher (Pulse) function for precise operation.
- Unbreakable Jar Covers for secure and leak-proof operation.
- Food-grade Rubber Gasket for hygiene and tight sealing.
- Dynamically Balanced Blades for smooth and consistent performance.
- Flow Breaker Jars with Easy Grip Handle for effective grinding and comfortable handling.

## JAR Details leak proof jar

SINCE 1988

**Bright**<sup>®</sup>

— mixer grinder

**Capacity**  
**1 Ltr.**

**Liquidizing Jar with Fruit Filter**  
Blend easily pulp-free drinks for goodness in every sip!



**Capacity**  
**100 ml.**

**Dry Grinding Jar**  
Grind spices with our efficient Dry Grinding Jar.



**Capacity**  
**100 gms.**

**Chutney Jar**  
Perfect Blend herbs and spices for a mouthwatering taste.



*Image: Detailed view of the three jars, highlighting their capacities: 1-liter liquidising jar, 100ml dry grinding jar, and 100g chutney jar.*

## 4. SETUP AND FIRST USE

### 4.1 Unpacking and Placement

1. Carefully unpack all components from the packaging.
2. Place the main mixer grinder unit on a stable, flat, and dry surface, away from heat sources and water.

3. Ensure the power switch is in the 'OFF' position before plugging in.

## 4.2 Attaching Jars

1. Select the appropriate jar for your task.
2. Align the jar's locking tabs with the slots on the main unit.
3. Gently place the jar onto the unit and twist clockwise until it locks securely into place.
4. Place the lid firmly on the jar, ensuring it is properly sealed.

## 4.3 Before First Use

Before using your mixer grinder for the first time, wash all jars, lids, and blades thoroughly with mild detergent and water. Rinse and dry completely. Wipe the main motor unit with a damp cloth.

# 5. OPERATING INSTRUCTIONS

---

## 5.1 General Operation

1. Prepare your ingredients and place them into the selected jar. Do not overfill the jar beyond its maximum capacity mark.
2. Secure the lid tightly onto the jar.
3. Place the jar onto the main unit and lock it into position by twisting clockwise.
4. Plug the mixer grinder into a standard 230V AC power outlet.
5. Turn the speed control knob to the desired speed setting (1, 2, or 3). For short bursts or to clear ingredients from the blades, use the 'Incher' (Pulse) function.
6. Allow the motor to cool down if operating for extended periods. Do not run continuously for more than 5 minutes.
7. Once grinding or blending is complete, turn the speed control knob to 'OFF' and unplug the appliance from the power outlet.
8. Carefully remove the jar from the main unit and then remove the lid to access the processed ingredients.

## 5.2 Using the Jars

- **Liquidising Jar (1 Ltr):** Ideal for blending liquids, making fruit juices, milkshakes, purees, and batters.
- **Dry Grinder Jar (100 ml):** Suitable for grinding dry spices, coffee beans, nuts, and grains. Ensure ingredients are completely dry.
- **Chutney Jar (100 gms):** Perfect for preparing small quantities of chutneys, pastes, and wet masalas.

# 6. MAINTENANCE AND CLEANING

---

Regular cleaning and maintenance will ensure the longevity and optimal performance of your BRIGHT NEXA Mixer Grinder.

## 6.1 Cleaning the Main Unit

- Always unplug the appliance before cleaning.
- Wipe the exterior of the main motor unit with a soft, damp cloth.

- Do not use abrasive cleaners or immerse the motor unit in water.
- Ensure the unit is completely dry before storing or next use.

## 6.2 Cleaning Jars and Blades

- Remove the jars and lids from the main unit.
- Wash the jars, lids, and blades with warm water and a mild dishwashing detergent.
- Exercise extreme caution when handling the blades as they are very sharp.
- Rinse thoroughly under running water and allow them to air dry completely or wipe with a clean cloth.
- Do not use steel wool or harsh scouring pads, as they may scratch the stainless steel.

## 6.3 Storage

Store the mixer grinder and its accessories in a clean, dry place, away from direct sunlight and out of reach of children.

# 7. TROUBLESHOOTING

If you encounter any issues with your mixer grinder, please refer to the following troubleshooting guide before contacting customer service.

Problem	Possible Cause	Solution
Mixer grinder does not start.	<ol style="list-style-type: none"> <li>1. Power cord not properly plugged in.</li> <li>2. Jar not locked correctly.</li> <li>3. Overload protector tripped.</li> </ol>	<ol style="list-style-type: none"> <li>1. Ensure the power cord is securely plugged into a working outlet.</li> <li>2. Twist the jar clockwise until it locks into place.</li> <li>3. Switch off, unplug, reduce load, wait 2-3 minutes, then restart.</li> </ol>
Burning smell during initial use.	Motor varnish heating up for the first time.	This is normal and will dissipate after a few uses. Ensure proper ventilation.
Motor stops during operation.	Overloading of the motor.	Switch off, unplug, reduce the quantity of ingredients in the jar, wait for the motor to cool down (approx. 2-3 minutes), then restart.
Leakage from jar.	<ol style="list-style-type: none"> <li>1. Lid not properly secured.</li> <li>2. Gasket not seated correctly or damaged.</li> <li>3. Jar overfilled.</li> </ol>	<ol style="list-style-type: none"> <li>1. Ensure the lid is firmly pressed down and locked.</li> <li>2. Check the rubber gasket for proper seating or damage. Replace if necessary.</li> <li>3. Do not fill the jar beyond its maximum capacity.</li> </ol>

# 8. TECHNICAL SPECIFICATIONS

Below are the detailed technical specifications for the BRIGHT NEXA 750W Mixer Grinder:

# Extensive tests to ensure the Bright Quality standards

SINCE 1988  
**Bright**<sup>®</sup>  
— mixer grinder

## Technical Specifications:

### Domestic Electric-food mixers (Liquidizers & Grinders)

750 Watts, 230V, 50 Hz, Single Phase, ac,

Class - I, Pollution Degree-I, Ordinary (IPX0),

Rating: Short term (30 Minutes), Class of Insulation - "H",

Liquidizer: 1.0 Ltrs, Dry Grinder : 100 ml.

Normal Load: 100 GMS, Urad dal well soaked in water.

Note: NOT SUITABLE FOR EGG WHISKING TEST.

## MADE IN INDIA



*Image: Technical specifications and quality certifications for the BRIGHT NEXA Mixer Grinder.*

- **Model:** NEXA
- **Power:** 750 Watts
- **Voltage:** 230 Volts AC, 50 Hz, Single Phase
- **Motor RPM:** 18000 (no load)
- **Jars Included:**
  - Liquidising Jar: 1 Liter
  - Dry Grinder Jar: 100 ml
  - Chutney Jar: 100 gms
- **Jar Material:** Stainless Steel
- **Body Material:** ABS (Shock-proof)
- **Blade Material:** Stainless Steel
- **Speed Control:** 3 Speed with Incher (Pulse)
- **Product Dimensions:** 21D x 21W x 48H Centimeters
- **Item Weight:** 3 kg 560 g

- **Pollution Degree:** I
- **Insulation Class:** H

## 9. WARRANTY AND CUSTOMER SUPPORT

---

### 9.1 Warranty Information

The BRIGHT NEXA Mixer Grinder comes with a **24-month warranty on the motor** from the date of purchase. This warranty covers manufacturing defects in the motor under normal household use. Please retain your purchase receipt as proof of purchase for warranty claims.

### 9.2 Customer Support

For any queries, assistance, or to report a problem with your mixer grinder, please contact our customer care:

- **Manufacturer:** Micro Appliances
- **Contact Number:** +919321832141
- **Address:** Goregoan (W), Mumbai-104
- **Online Store:** Visit the [BRIGHT Store on Amazon](#) for more information.