

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Fujitsu General](#) /
- › [Fujitsu General nocria AS-AH223N-W Air Conditioner User Manual](#)

Fujitsu General AS-AH223N-W

Fujitsu General nocria AS-AH223N-W Air Conditioner User Manual

Brand: Fujitsu General | **Model:** AS-AH223N-W

1. INTRODUCTION AND SAFETY INFORMATION

This manual provides essential instructions for the safe and efficient operation of your Fujitsu General nocria AS-AH223N-W air conditioner. Please read it thoroughly before installation and use, and keep it for future reference.

Important Safety Instructions:

- Ensure the unit is installed by a qualified professional to prevent electric shock, fire, or injury.
- Do not attempt to repair or modify the unit yourself. Contact authorized service personnel.
- Always disconnect power before cleaning or performing maintenance.
- Do not insert fingers or objects into the air inlet/outlet.
- Keep children away from the unit and remote control.
- Use only the specified power supply voltage (100V).



Image of the Fujitsu General nocria AS-AH223N-W wall-mounted air conditioner indoor unit.

2. SETUP AND INSTALLATION

The Fujitsu General nocria AS-AH223N-W is a wall-mounted air conditioner. Professional installation is highly recommended to ensure proper function and safety.

2.1 Installation Overview:

- **Indoor Unit Placement:** Select a location that allows for even air distribution and is away from direct sunlight or heat sources. Ensure sufficient space around the unit for maintenance.
- **Outdoor Unit Placement:** Position the outdoor unit in a well-ventilated area, away from obstacles that could impede airflow.
- **Electrical Connection:** Connect the unit to a dedicated 100V power supply circuit as per local electrical codes.
- **Drainage:** Ensure proper drainage for condensate water from both indoor and outdoor units.

2.2 Initial Power-On:

1. After installation is complete, ensure all connections are secure.
2. Turn on the main power supply to the air conditioner.
3. The unit may perform an initial self-check.

2.3 Remote Control Setup:

Insert two AAA batteries (not included) into the remote control, observing the correct polarity. The remote control is pre-paired with the unit.

3. OPERATING INSTRUCTIONS

Familiarize yourself with the remote control buttons and display for optimal use of your air conditioner.

3.1 Basic Operation Modes:

- **COOL Mode:** For cooling the room. Set your desired temperature using the temperature adjustment buttons.
- **HEAT Mode:** For heating the room. Set your desired temperature.
- **DRY Mode:** For dehumidifying the room. The fan speed is automatically controlled.
- **FAN Mode:** Circulates air without cooling or heating. Fan speed can be adjusted.

3.2 Temperature and Fan Speed Adjustment:

- Use the **TEMP ▲ / ▼** buttons on the remote control to adjust the desired temperature.
- Press the **FAN SPEED** button to cycle through available fan speeds (Auto, Low, Medium, High).

3.3 Timer Functions:

The unit features basic ON/OFF timer functions. Refer to your remote control's specific buttons for setting these timers.

4. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your air conditioner. Always turn off the main power supply before performing any maintenance.

4.1 Air Filter Cleaning:

1. Open the front panel of the indoor unit.
2. Remove the air filters.
3. Clean the filters using a vacuum cleaner or wash them with lukewarm water. Allow them to dry completely in a shaded area.
4. Reinstall the dry filters and close the front panel.
5. *Recommended frequency:* Every two weeks or more often depending on usage and air quality.

4.2 Exterior Cleaning:

Wipe the indoor unit's exterior with a soft, dry cloth. For stubborn dirt, use a cloth dampened with mild detergent, then wipe with a dry cloth. Do not use harsh chemicals, abrasive cleaners, or hot water.

4.3 Seasonal Checks:

- Before seasonal use, ensure the outdoor unit's air inlet/outlet is free from obstructions (leaves, debris).

- Check for any unusual noises or odors during operation. If detected, contact service.

5. TROUBLESHOOTING

Before contacting service, please check the following common issues and solutions:

Problem	Possible Cause	Solution
Unit does not operate.	No power supply. Remote control batteries are dead.	Check the circuit breaker. Replace remote control batteries.
Insufficient cooling/heating.	Dirty air filters. Doors/windows open. Air inlet/outlet blocked.	Clean air filters. Close doors and windows. Remove obstructions.
Unusual noise.	Loose parts. Unit not level.	Contact a qualified technician for inspection.
Water leakage from indoor unit.	Clogged drain hose. Improper installation.	Contact a qualified technician for inspection and repair.

If the problem persists after trying these solutions, turn off the power supply and contact your dealer or an authorized service center.

6. SPECIFICATIONS

Technical specifications for the Fujitsu General nocria AS-AH223N-W air conditioner.

Feature	Detail
Model Number	AS-AH223N-W
Type	Wall-mounted
Estimated Room Size	Primarily for 6 tatami mats
Power Supply	100V / Parallel type
Cooling Capacity (Approx.)	Up to 9 tatami mats (6-9 tatami mats)
Heating Capacity (Approx.)	Up to 6 tatami mats (5-6 tatami mats)
Indoor Unit Dimensions (W x H x D)	790 x 280 x 206 mm
Outdoor Unit Dimensions (W x H x D)	663(+68) x 541 x 290(+63) mm <i>*Values in parentheses include valve covers and mounting feet.</i>
Special Features	Cooling and Heating Functionality

7. WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or contact your point of purchase. Keep your purchase receipt as proof of purchase.

For technical support, service, or inquiries, please contact Fujitsu General customer service or your authorized dealer. Contact details can typically be found on the manufacturer's official website or in your product documentation.