

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [OhO sunshine](#) /
- › [OhO Smart Glasses Instruction Manual](#)

### OhO sunshine 628N

## OhO Smart Glasses Instruction Manual

Model: 628N

### INTRODUCTION



The OhO Smart Glasses are innovative eyewear designed for capturing high-quality video and photos from a first-person perspective. Featuring a 1080P Ultra Full HD camera and built-in 32GB memory, these glasses are ideal for outdoor sports, travel, and everyday activities. The transitional lenses automatically adjust tint based on light conditions, providing UV400 protection and blue light blocking capabilities for eye comfort and safety.

This manual provides detailed instructions on setting up, operating, and maintaining your OhO Smart Glasses to ensure optimal performance and longevity.

### WHAT'S IN THE Box



The OhO Smart Glasses package typically includes the following items:

- OhO Smart Glasses (Model 628N)
- USB Charging Cable
- Cleaning Cloth
- Protective Carrying Case
- User Manual (this document)
- Built-in 32GB Micro SD Card (pre-installed)
- Built-in Rechargeable Battery

## SETUP

### 1. Initial Charging

Before first use, fully charge your OhO Smart Glasses. Connect the provided USB charging cable to the charging port on the glasses and to a USB power source (e.g., computer USB port or wall adapter). The charging indicator light will show the charging status. A full charge typically takes approximately 2-3 hours.

### 2. Memory Card

The glasses come with a built-in 32GB Micro SD card. Ensure it is properly seated before use. Do not attempt to remove or insert the card forcefully.

### 3. Date and Time Setup

To set the correct date and time stamp for your recordings, connect the glasses to a computer using the USB cable. Locate the "config.txt" file within the SETTING folder on the glasses' storage. Open this file and edit the first line from 'N' to 'Y' to enable settings updates. Adjust the date and time as needed within the file, then save and safely eject the device. The settings will update upon the next power cycle.

## OPERATING INSTRUCTIONS

### Power On/Off

To power on the glasses, press and hold the power button located on the temple. An indicator light will illuminate. To power off, press and hold the power button again until the light extinguishes.



The OhO Smart Glasses feature a discreet camera integrated into the frame, allowing for hands-free recording. The power button and indicator lights are located on the inner side of the temple for easy access and discreet operation.

## Video Recording

1. Ensure the glasses are powered on.
2. Press the video recording button (usually a dedicated button or a short press of the power button after power-on).
3. The indicator light will typically blink or change color to indicate recording is in progress. Refer to the specific light patterns in your quick start guide for detailed feedback.
4. To stop recording, press the video recording button again. The indicator light will return to its standby state.

The glasses record video in 1080P Ultra Full HD resolution. Recording time is approximately 60 minutes on a full charge. Videos are saved directly to the built-in 32GB memory.

## Product Overview Video

Your browser does not support the video tag.

This video demonstrates the key features and operation of the OhO Smart Glasses, including power on/off, recording functions, and overall design. It provides a visual guide to understanding the product's capabilities.

## Photo Capture

While in standby mode or during video recording, a quick press of the photo button (if available, or a specific combination with the power button) will capture a still image. The indicator light may flash briefly to confirm the photo has been taken.

## Connecting to a Computer

To access recorded videos and photos, connect the OhO Smart Glasses to your computer using the supplied USB cable. The glasses will appear as a removable storage device. You can then drag and drop files to your computer for viewing and backup.



Connecting the glasses to a computer allows for easy transfer of recorded media. The device functions as a standard USB storage drive, making file management straightforward.

## Audio Recording Settings

If you experience issues with audio recording, connect the glasses to your computer. Navigate to the "config.txt" file in the SETTING folder. Ensure the first line is set to 'Y' for updates. Locate the line related to Audio settings and change 'N' to 'Y' to enable audio recording. Save the file, safely eject the device, and restart the glasses for changes to take effect.

## Transitional Lenses



The OhO Smart Glasses are equipped with transitional lenses that automatically adjust their tint based on UV light exposure. They will change from clear to dark grey outdoors under sunshine and revert to clear indoors. These lenses also provide UV400 protection and blue light blocking for eye safety and comfort.

## MAINTENANCE

- Cleaning:** Use the provided cleaning cloth to gently wipe the lenses and frame. Avoid using abrasive materials or harsh chemicals that could damage the lenses or electronic components.
- Storage:** When not in use, store the glasses in their protective carrying case to prevent scratches and damage. Keep them away from extreme temperatures and direct sunlight.
- Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the glasses regularly, even if not in constant use.
- Water Resistance:** The glasses are water-resistant, not waterproof. Avoid submerging them in water or exposing them to heavy rain.

## TROUBLESHOOTING

Problem	Possible Cause / Solution
---------	---------------------------

Problem	Possible Cause / Solution
Lenses falling out easily.	Ensure lenses are securely seated in the frame. If the issue persists, contact customer support.
Scratched lenses upon arrival.	Inspect the product immediately upon receipt. If lenses are scuffed or scratched, contact customer support for assistance.
No 32GB card included.	The 32GB Micro SD card is built-in. Connect the glasses to a computer to verify its presence and accessibility. If not detected, contact customer support.
Video quality is poor or jerky.	The glasses lack image stabilization. Minimize sudden movements during recording. Ensure sufficient lighting for optimal video quality.
Date/Time stamp is incorrect.	Connect to a computer, open "config.txt" in the SETTING folder. Change the first line from 'N' to 'Y', adjust date/time, save, and safely eject. Restart glasses.
No audio in recordings.	Connect to a computer, open "config.txt" in the SETTING folder. Change the first line from 'N' to 'Y'. Locate the audio setting line and change 'N' to 'Y'. Save, safely eject, and restart glasses.
Cannot change video resolution.	Ensure the first line of "config.txt" is set to 'Y' before attempting to change resolution settings. Save and restart the device.

## SPECIFICATIONS

Feature	Detail
Model Number	628N
Video Resolution	1080P Ultra Full HD
Memory Storage	Built-in 32GB Micro SD Card
Battery Life (Video Recording)	Approximately 60 minutes
Lens Type	Transitional (photochromic), UV400, Blue Light Blocking
Connectivity	USB
Operating System Compatibility	iOS, Android (for file transfer via computer)
Item Weight	1.28 ounces (0.08 Pounds)
Battery Type	Lithium Polymer (500 Milliamp Hours)

## **WARRANTY AND SUPPORT**

For warranty information, technical support, or any inquiries regarding your OhO Smart Glasses, please refer to the contact details provided with your purchase or visit the official OhO sunshine website.

*OhO sunshine is committed to providing high-quality products and customer satisfaction.*