

Lehoo Castle 789-7

Lehoo Castle Electronic Nerf Target System

Model: 789-7
Brand: Lehoo Castle

1. INTRODUCTION

The Lehoo Castle Electronic Nerf Target System (Model 789-7) is an upgraded digital target designed for use with Nerf blasters and similar foam dart guns. It features four targets, an automatic reset system, and realistic sound effects to enhance your shooting practice and game experience. This manual provides essential information for proper setup, operation, and maintenance of your target system.



Figure 1: Leahoo Castle Electronic Nerf Target System Overview

2. PACKAGE CONTENTS

Please check the package to ensure all items are present:

- 1 x Shooting Base with 4 Targets
- 20 x Foam Darts
- 2 x Dart Wristbands
- 1 x Small Screwdriver
- 1 x Instruction Manual



Figure 2: Package Contents and Dimensions



Figure 3: Included Accessories

3. SETUP

3.1 Battery Installation

1. Locate the battery compartment on the underside of the shooting base.
2. Use the provided small screwdriver to open the battery compartment cover.
3. Insert 3 x AA batteries (not included) into the compartment, ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.



Figure 4: Battery Compartment (refer to manual for specific location)

3.2 Target Assembly

The four shooting targets are pre-assembled onto the base. Ensure they are securely upright before use.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

Press the **ON/OFF** button located on the front of the base to turn the target system on or off. The LCD screens will light up when powered on.

4.2 Game Modes

The target system offers 4 distinct game modes. Press the **MODE** button to cycle through the modes, and press **CONFIRM** to select your desired mode.

- **Single-player Normal Mode:** Shoot any target to earn points. Maximum score is 999 points.
- **Single-player Random Mode:** Shoot the target that lights up randomly. Maximum score is 999 points.
- **Multiplayer Normal Mode:** Two players take turns shooting any target to earn points.
- **Multiplayer Random Mode:** Two players take turns shooting the randomly lit target.



Figure 5: Single-player Normal Mode



Figure 6: Multiplayer Mode

4.3 Time Adjustment

The initial countdown is set to 120 seconds. You can adjust the time up to 960 seconds by pressing the **TIME+** or **TIME-** buttons.

4.4 Automatic Target Reset

When all four targets are hit, they will automatically rebound to their upright position, allowing for continuous play without manual resetting.



Figure 7: Automatic Target Reset Function

4.5 Sound Effects

The target system features realistic gunshot sounds and hit effects, providing an immersive experience during play.

Your browser does not support the video tag. Please update your browser.

Video 1: Demonstration of Lehou Castle Electronic Nerf Target system in use, showing its features and game modes.

Your browser does not support the video tag. Please update your browser.

Video 2: Showcase of the Lehou Castle Electronic Nerf Target, including its automatic reset function and sound effects.

Your browser does not support the video tag. Please update your browser.

Video 3: Demonstration of the Lehou Castle Electronic Nerf Target's scoring system and various play options.

5. SAFETY INFORMATION

- For external use only.
- Do not aim blasters at eyes or face.
- Use only official foam darts or darts specifically designed for this product.
- Keep small parts away from young children to prevent choking hazards.
- Adult supervision is recommended during play.

6. MAINTENANCE

- Clean the target system with a soft, dry cloth. Do not use abrasive cleaners or immerse in water.
- Remove batteries if the device will not be used for an extended period to prevent leakage.
- Store the target system in a cool, dry place away from direct sunlight.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Target not powering on	Batteries incorrectly installed or depleted.	Check battery polarity or replace with new AA batteries.

Problem	Possible Cause	Solution
Targets not resetting automatically	Obstruction preventing targets from resetting or mechanism issue.	Ensure no debris is blocking the target mechanism. If problem persists, contact customer support.
No sound effects	Volume too low or speaker malfunction.	Check if there's a volume control (if applicable) or replace batteries.

8. SPECIFICATIONS

Feature	Detail
Brand	Lehoo Castle
Model Number	789-7
Age Range	Child
Number of Targets	4
Game Modes	4 (Single-player Normal, Single-player Random, Multiplayer Normal, Multiplayer Random)
Power Source	Battery
Battery Type	3 x AA batteries (not included)
Material Type	Polyester (referring to target material, main body is plastic)
Item Weight	550 Grams
Item Dimensions	32.3 x 9.1 x 17 centimeters
Educational Objective	Enhance hand-eye coordination, self-confidence, patience, and social skills

9. WARRANTY AND SUPPORT

This product comes with a 2-year manufacturer's warranty.

For further assistance, troubleshooting, or warranty claims, please visit the official Lehoo Castle store or contact their customer support:

Official Brand Store: [Lehoo Castle Amazon Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question