

[Manuals.plus](#) /

› [HCDZ](#) /

› HCDZ Replacement Remote Control for SAKOBS SKB02 DS6402 DS6402L DS6601P DS6601 DS6405P DS6402-SKB02 Instruction Manual

HCDZ SKB02 DS6402 DS6402L DS6601P DS6601 DS6405P DS6402-SKB02

HCDZ Replacement Remote Control Instruction Manual

For SAKOBS SKB02, DS6402, DS6402L, DS6601P, DS6601, DS6405P, DS6402-SKB02 Home Theater Surround Sound
Mini Sound Bar Audio System

1. SETUP AND BATTERY INSTALLATION

This replacement remote control requires two AAA batteries (not included) for operation. No programming is needed; the remote will function immediately once batteries are correctly installed.

Battery Installation Steps:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open.
3. Insert two new AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



This image illustrates the back of the remote control with the battery cover removed, clearly showing the two slots for AAA batteries and their polarity markings.

2. OPERATING INSTRUCTIONS

The HCDZ replacement remote control is designed for immediate use with compatible SAKOBS Home Theater Surround Sound Mini Sound Bar Audio Systems without any complex setup or programming.

Basic Operation:

- **Point and Operate:** Direct the remote control towards the infrared (IR) sensor of your SAKOBS audio system.
- **Range:** The remote operates effectively within a maximum range of 10 meters (approximately 33 feet) from the audio system. Ensure no obstructions are between the remote and the device's IR sensor.
- **Button Functions:** Each button on the remote corresponds to a specific function on your audio system. Refer to your SAKOBS audio system's original manual for detailed button functionalities.



This image displays the full front panel of the HCDZ replacement remote control, highlighting the layout of its various function buttons.

3. MAINTENANCE AND CARE

Proper care ensures the longevity and reliable performance of your remote control.

- **Environmental Conditions:** Avoid leaving the remote control in extremely hot or humid environments, as this can cause malfunction or damage.
- **Battery Usage:** Do not mix new batteries with old ones. Always replace all batteries with new ones simultaneously.
- **Direct Sunlight:** Do not expose the remote's sensor to direct sunlight or strong lighting apparatuses, as this may interfere with its operation.
- **Long-Term Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent potential damage from battery leakage and corrosion.
- **Cleaning:** Use a soft, dry cloth to clean the remote control. Avoid using liquid cleaners or abrasive materials.

4. TROUBLESHOOTING

If you experience issues with your remote control, try the following troubleshooting steps:

- **Remote Control Malfunctions:** If the remote is unresponsive, replace the batteries with new ones.
- **Battery Terminals:** Check that the battery terminals inside the compartment are clean and that the batteries are inserted with correct polarity.
- **Out of Range:** Ensure you are within the 10-meter operating range of your audio system. Move closer to the device if necessary.
- **Obstructions:** Remove any objects or obstructions between the remote control and the infrared (IR) sensor on your SAKOBS audio system.
- **Device Power:** Verify that the power cord to your SAKOBS audio system is securely plugged in and the device is turned on.

5. SPECIFICATIONS

Brand	HCDZ
-------	------

Compatible Devices	SAKOBS SKB02, DS6402, DS6402L, DS6601P, DS6601, DS6405P, DS6402-SKB02 Home Theater Surround Sound Mini Sound Bar Audio System
Connectivity Technology	Infrared (IR)
Maximum Range	10 Meters (approx. 33 feet)
Controller Type	Button Control
Battery Type	AAA
Number of Batteries Required	2 (not included)
Special Feature	No programming needed, works out of the package

6. WARRANTY INFORMATION

This HCDZ replacement remote control comes with a**90-day warranty** from the date of purchase. Please retain your proof of purchase for any warranty claims.

7. SUPPORT

For further assistance or specific questions regarding your SAKOBS audio system, please refer to the original instruction manual provided with your audio device. For issues directly related to the HCDZ replacement remote control, please contact the seller or manufacturer.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CGJ95JD7>

More documents and user manuals: <https://manuals.plus/>