

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

- › [SAMSUNG](#) /
- › SAMSUNG Galaxy Tab S6 Lite (SM-P613) User Manual

## SAMSUNG SM-P613

# SAMSUNG Galaxy Tab S6 Lite (SM-P613) User Manual

Model: SM-P613 | Wi-Fi Version

## INTRODUCTION

---

This manual provides essential information for the proper use and maintenance of your SAMSUNG Galaxy Tab S6 Lite (SM-P613). Please read this manual thoroughly before operating the device to ensure safe and optimal performance. Keep this manual for future reference.



*Image: SAMSUNG Galaxy Tab S6 Lite tablet in Oxford Gray, shown with its accompanying S Pen stylus. The tablet features a 10.4-inch display.*

## SETUP

---

### 1. Unboxing and Initial Inspection

- Carefully remove all components from the packaging.
- Verify that all items listed in the 'What's in the Box' section are present: SAMSUNG Galaxy Tab S6 Lite, S Pen, and Fast Car Charger Bundle.

- Inspect the tablet and accessories for any signs of damage.

## 2. Initial Charging

- Connect the Fast Car Charger to the tablet's USB-C port.
- Plug the charger into a power source.
- Allow the tablet to charge until the battery indicator shows a full charge before first use.

## 3. Powering On/Off

- **To Power On:** Press and hold the Power button (located on the side) until the SAMSUNG logo appears.
- **To Power Off:** Press and hold the Power button, then select 'Power off' from the options on the screen.
- **To Restart:** Press and hold the Power button, then select 'Restart' from the options.

## 4. S Pen Setup

- The S Pen is ready for use out of the box. No separate charging or pairing is required.
- Attach the S Pen magnetically to the side of the tablet for storage.

# OPERATING INSTRUCTIONS

---

## 1. Basic Navigation

- **Touch Gestures:** Use tap, swipe, pinch-to-zoom, and long-press gestures to interact with the screen.
- **Home Screen:** The central hub for apps and widgets. Swipe left or right to access additional screens.
- **Notification Panel:** Swipe down from the top of the screen to access notifications and quick settings.

## 2. Connecting to Wi-Fi

1. Go to 'Settings' > 'Connections' > 'Wi-Fi'.
2. Toggle the Wi-Fi switch to 'On'.
3. Select your desired Wi-Fi network from the list.
4. Enter the network password if prompted, then tap 'Connect'.

## 3. Using the S Pen

- **Air Command:** Hover the S Pen over the screen and press the S Pen button to open the Air Command menu for quick access to features like Create note, Smart select, Screen write, and Live message.
- **Writing and Drawing:** Use the S Pen directly on the screen for precise input in compatible applications.
- **Screen Off Memo:** Quickly jot down notes even when the screen is off by detaching the S Pen.

## 4. Camera Functions

- Open the 'Camera' app from the home screen or app drawer.
- Tap the shutter button to take a photo.
- Switch between front (5 MP) and rear (8 MP) cameras using the camera switch icon.
- Explore various modes like Photo, Video, Pro, Panorama, and Food.

## 5. Storage Management

- Your tablet comes with 64 GB of internal storage.
- To check storage usage, go to 'Settings' > 'Battery and device care' > 'Storage'.
- You can expand storage using a microSD card (sold separately) via the microSD card slot.

## MAINTENANCE

---

### 1. Cleaning Your Tablet

- Use a soft, lint-free cloth to clean the screen and body of the tablet.
- Avoid using harsh chemicals, abrasive cleaners, or aerosol sprays.
- For stubborn smudges, slightly dampen the cloth with water or a screen-specific cleaning solution.

### 2. Software Updates

- Regularly check for and install software updates to ensure optimal performance, security, and access to new features.
- Go to 'Settings' > 'Software update' > 'Download and install'.

### 3. Battery Care

- Avoid exposing the tablet to extreme temperatures.
- Use only SAMSUNG-approved chargers and cables.
- For long-term storage, charge the battery to approximately 50% to prolong its lifespan.

## TROUBLESHOOTING

---

### 1. Device Not Powering On

- Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on.
- Perform a forced restart: Press and hold the Power button and Volume Down button simultaneously for more than 7 seconds.

### 2. Wi-Fi Connection Issues

- Restart your Wi-Fi router and the tablet.
- Forget the network in 'Settings' > 'Connections' > 'Wi-Fi' and reconnect.
- Ensure you are within range of the Wi-Fi signal.

### 3. S Pen Not Responding

- Ensure the S Pen is properly attached to the tablet's magnetic holder when not in use.
- Restart the tablet.
- Check if the S Pen tip is damaged or worn. Replacement tips may be available from SAMSUNG.

### 4. Apps Crashing or Freezing

- Close and reopen the app.
- Clear the app's cache: 'Settings' > 'Apps' > [Select App] > 'Storage' > 'Clear cache'.
- Ensure the app is updated to its latest version.

## SPECIFICATIONS

Feature	Specification
Model Number	SM-P613
Display Size	10.4 Inches
Screen Resolution	2000x1200 pixels
Operating System	Android 13
Processor Brand	Unisoc
Flash Memory Size	64 GB
Rear Webcam Resolution	8 MP
Front Webcam Resolution	5 MP (based on common S6 Lite specs)
Wireless Type	802.11ac
Item Weight	1.56 pounds
Product Dimensions	9.63 x 6.07 x 0.28 inches
Color	Black (Oxford Gray in product title, but 'Black' in specs)

## WARRANTY AND SUPPORT

For warranty information, technical support, and service inquiries, please visit the official SAMSUNG support website or contact SAMSUNG customer service directly. Details regarding your product's specific warranty coverage can typically be found on the SAMSUNG website or within the product packaging.

You can find support resources at: [www.samsung.com/us/support/](http://www.samsung.com/us/support/)