

[Manuals.plus](#) /

› [Pickering](#) /

› Pickering ELEGANCE200 Portable Speaker Instruction Manual

Pickering ELEGANCE200

Pickering ELEGANCE200 Portable Speaker Instruction Manual

Model: ELEGANCE200

INTRODUCTION

The Pickering ELEGANCE200 is a versatile portable speaker system designed for various audio needs. It features a total power output of 200 Watts and offers multiple audio source options including Bluetooth, FM Radio, AUX input, USB, TF Card, and TWS (True Wireless Stereo) functionality. This manual provides detailed instructions for setting up, operating, and maintaining your ELEGANCE200 speaker.



Image: Front view of the Pickering ELEGANCE200 speaker, showcasing its integrated LED lighting on the woofers.

SETUP

1. Unpacking

- Carefully remove all components from the packaging.
- Verify that all accessories are present: ELEGANCE200 speaker, wired microphone, remote control, and power adapter.
- Retain the packaging for future transport or storage.

2. Powering On and Charging

- The ELEGANCE200 can operate on its internal battery or via a 220V AC power source.

- To charge the battery, connect the power adapter to the speaker's power input and then to a standard 220V AC outlet. The charging indicator will illuminate.
- For initial use, it is recommended to fully charge the speaker for approximately 4-6 hours.
- To power on, locate the 'POWER ON/OFF' switch on the control panel and set it to the 'ON' position.

3. Initial Connections

- **Microphone:** Connect the wired microphone to one of the 6.35mm microphone input jacks on the control panel.
- **AUX Input:** For connecting external devices like smartphones or laptops, use a 3.5mm mini-jack cable to connect to the 'AUX LINE' input.



Image: Detailed view of the ELEGANCE200 control panel, showing USB, TF card slots, AUX input, microphone inputs, and various control knobs, alongside the remote control.

OPERATING INSTRUCTIONS

1. Mode Selection

Press the 'MODE' button on the control panel or remote control to cycle through available input modes: Bluetooth (BT), FM Radio, USB, TF Card, and AUX.

2. Bluetooth Pairing (BT5.0)

1. Switch the speaker to Bluetooth mode. The LCD screen will display 'BT' and a pairing indicator will flash.
2. On your mobile device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select 'ELEGANCE200' from the list of devices.
4. Once paired, the speaker will emit a confirmation sound, and the Bluetooth indicator will stop flashing. You can now play audio from your device.

3. FM Radio

1. Switch the speaker to FM Radio mode. The LCD screen will display the frequency.
2. Press and hold the 'PLAY/PAUSE' button (or 'SCAN' on the remote) to automatically scan and save available FM stations.
3. Use the 'PREV' and 'NEXT' buttons to navigate between saved stations.

4. USB/TF Card Playback

1. Insert a USB drive or TF (MicroSD) card into the respective slot on the control panel.
2. The speaker will automatically switch to USB or TF mode and begin playing audio files. If not, press the 'MODE' button to select the correct source.
3. Use the 'PLAY/PAUSE', 'PREV', and 'NEXT' buttons to control playback.

5. TWS (True Wireless Stereo) Function

The TWS function allows you to connect two ELEGANCE200 speakers wirelessly for a stereo sound experience.

1. Ensure both ELEGANCE200 speakers are powered on and in Bluetooth mode, but not yet paired with any device.
2. On one of the speakers, press and hold the 'TWS' button (or the dedicated TWS button on the remote control).
3. The speaker will search for the other ELEGANCE200. Once connected, a confirmation sound will be heard.
4. Now, pair your mobile device with the primary speaker (the one you initiated TWS pairing on). Both speakers will play audio in stereo.

Connectez une 2ème MDJ identique pour obtenir un son stéréo



Connexion sans fil !



Image: Two ELEGANCE200 speakers set up for True Wireless Stereo (TWS) playback, demonstrating their ability to create an immersive audio experience.

6. Microphone Usage and Voice Priority

- Adjust the 'MIC VOL' knob to control the microphone's volume.
- Use the 'ECHO' knob to add an echo effect to your voice.
- The 'VOICE PRIORITY' function (often labeled 'MIC PRIORITY' or similar) can be activated to automatically lower the music volume when you speak into the microphone.

7. LED Lighting Control

The ELEGANCE200 features RGB LED rings on its woofers. Use the 'LED' button on the control panel or remote to cycle through different lighting modes or to turn the lights off.

8. Audio Adjustment

- **Master Volume:** Use the 'VOLUME' knob to adjust the overall sound output.
- **Bass/Treble:** Separate 'BASS' and 'TREBLE' knobs allow you to fine-tune the low and high frequencies of the

audio.

MAINTENANCE

1. Cleaning

- Ensure the speaker is powered off and unplugged before cleaning.
- Use a soft, dry cloth to wipe the exterior surfaces.
- For stubborn dirt, a slightly damp cloth can be used, followed by a dry cloth. Avoid using harsh chemicals or abrasive cleaners.

2. Storage

- Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- If storing for an extended period, charge the battery to approximately 50% every 3-6 months to prolong its lifespan.

3. Battery Care

- Avoid completely draining the battery frequently.
- Do not expose the battery to high temperatures.
- Use only the provided power adapter for charging.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is depleted; Power switch is off; Power adapter not connected.	Charge the battery; Ensure power switch is ON; Connect power adapter securely.
No sound output.	Volume is too low; Incorrect input mode selected; Device not properly connected.	Increase master volume; Select correct mode (BT, AUX, USB, TF); Reconnect device or re-pair Bluetooth.
Bluetooth pairing fails.	Speaker not in pairing mode; Device too far; Interference.	Ensure speaker is in BT mode and flashing; Move device closer; Turn off other Bluetooth devices.
Microphone not working.	Microphone not connected; MIC VOL knob is low; Microphone is faulty.	Connect microphone securely; Increase MIC VOL; Test with another microphone if available.
TWS connection issues.	Speakers not in correct mode; Too far apart; Already paired to a device.	Ensure both speakers are in BT mode and unpaired; Place speakers closer; Re-initiate TWS pairing.

SPECIFICATIONS

Feature	Detail
Total Power Output	200 Watts
Amplification	60 Watts

Feature	Detail
Woofers	2 x 16 cm (6.5 inch)
Tweeters	2 x 5 cm (2 inch)
Battery Capacity	3000mAh
Connectivity	Bluetooth (BT5.0), USB, TF Card, AUX (3.5mm mini-jack), FM Radio
Microphone Inputs	2 x 6.35mm Jack
Special Features	TWS Function, RGB LED Ring Lighting, Voice Priority, LCD Screen
Controls	Master Volume, Bass, Treble, Microphone Volume, Echo
Power Source	Battery or 220V AC
Dimensions (H x W x D)	56.5 x 31 x 31 cm
Color	Black

WARRANTY INFORMATION

This Pickering ELEGANCE200 speaker comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms, conditions, and duration of coverage. Keep your proof of purchase for any warranty claims.

CUSTOMER SUPPORT

For further assistance, technical support, or inquiries regarding your Pickering ELEGANCE200 speaker, please contact Pickering customer service. Contact details can typically be found on the product packaging or the official Pickering website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question