

MILLENNIUM M815 ChessGenius Pro 2024

MILLENNIUM M815 ChessGenius PRO User Manual

Model: M815 ChessGenius Pro 2024

INTRODUCTION

The MILLENNIUM M815 ChessGenius PRO is an intelligent chess computer designed for players of all levels, from beginners to advanced. It serves as a comprehensive chess trainer, offering various training options and adaptable difficulty levels to enhance your chess skills. This manual provides essential information for setting up, operating, and maintaining your ChessGenius PRO.

SAFETY INFORMATION

Warning:

 
- Not suitable for children under 4 years.
- To be used only under adult supervision.

WHAT'S IN THE BOX

Upon unpacking your MILLENNIUM M815 ChessGenius PRO, please ensure all components are present:

- Electronic Chess Board
- 34 Chess Pieces (including 2 extra queens)
- Storage Bag
- Quick Start Guide

WHAT'S INCLUDED

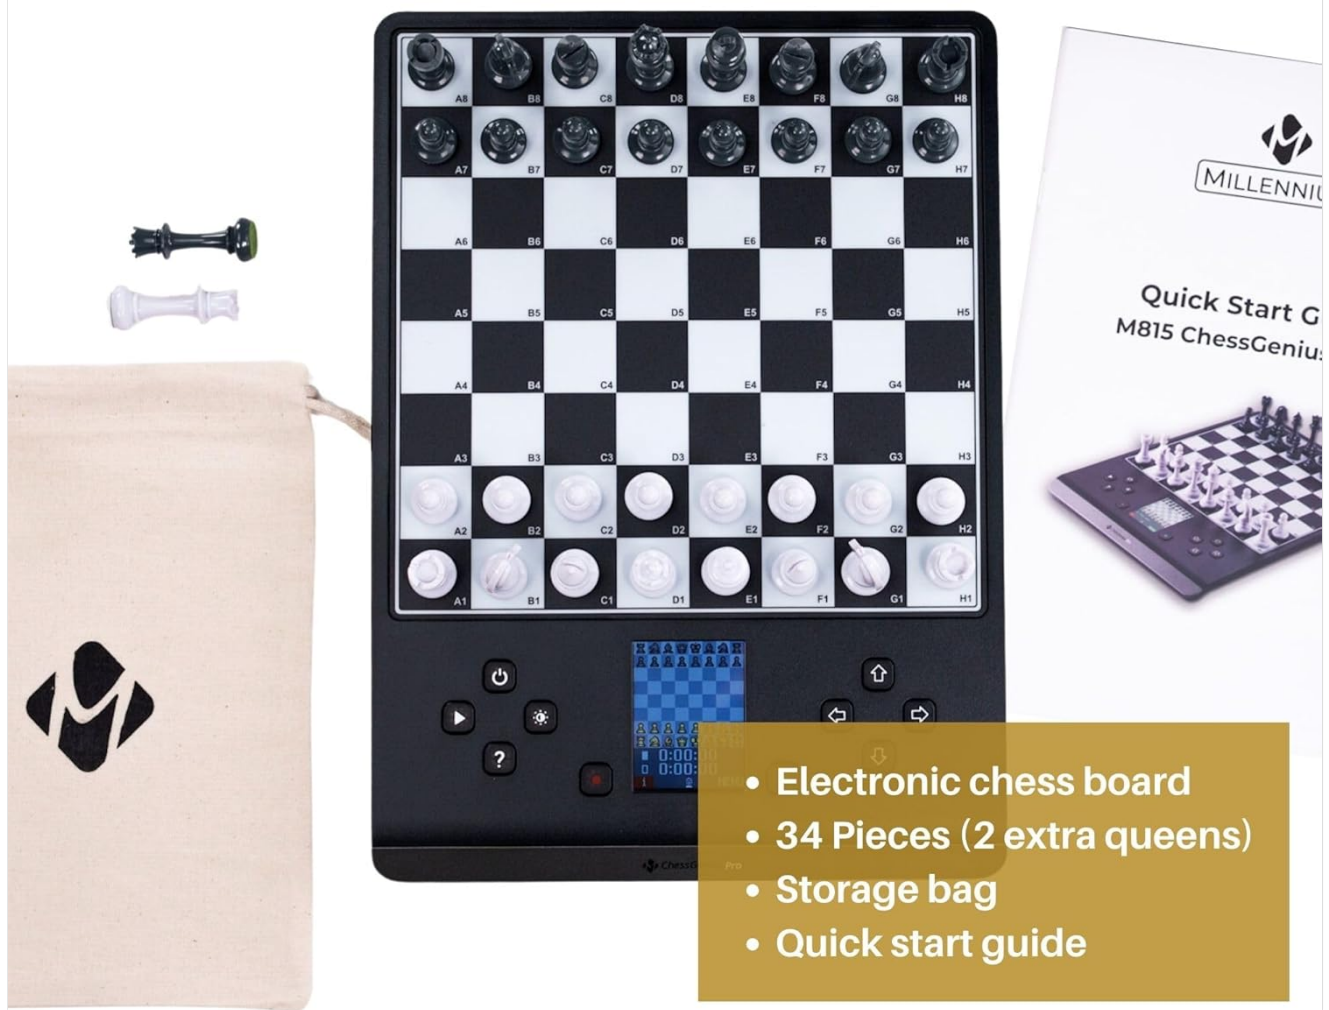

- Electronic chess board
- 34 Pieces (2 extra queens)
- Storage bag
- Quick start guide

Figure 1: Included components of the ChessGenius PRO. The package contains the electronic chess board, a full set of chess pieces with two additional queens, a fabric storage bag for the pieces, and a quick start guide.

SETUP

Powering the Device

The ChessGenius PRO can be powered by batteries for portability or an optional AC adapter for continuous play.

Battery Installation

1. Locate the battery compartment on the underside of the chess board.
2. Open the battery compartment cover.
3. Insert 4 x AA/LR06 batteries (not included), ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.



Figure 2: Battery compartment. The device requires four AA/LR06 batteries for operation, which are not included in the package. Ensure correct battery orientation during installation.

Using an AC Adapter (Optional)

An optional AC adapter can be purchased separately for direct power from a wall outlet. Connect the adapter to the designated port on the device.



Figure 3: Power flexibility. The ChessGenius PRO can be powered by 4 AA/LR06 batteries for portable use or via an optional AC adapter for home use.

Placing the Chess Pieces

Place the magnetic chess pieces on their starting positions on the board. The magnetic base ensures pieces remain stable during play, even when moving the board.



Figure 4: Magnetic pieces. The chess pieces are magnetic, ensuring they stay firmly in position on the board during play or transport.

OPERATING INSTRUCTIONS

Starting a Game

The intuitive menus and the dedicated PLAY button allow for quick game initiation. You can choose to play as White, Black, engage in a 2-player mode, or set up a game from a specific position.

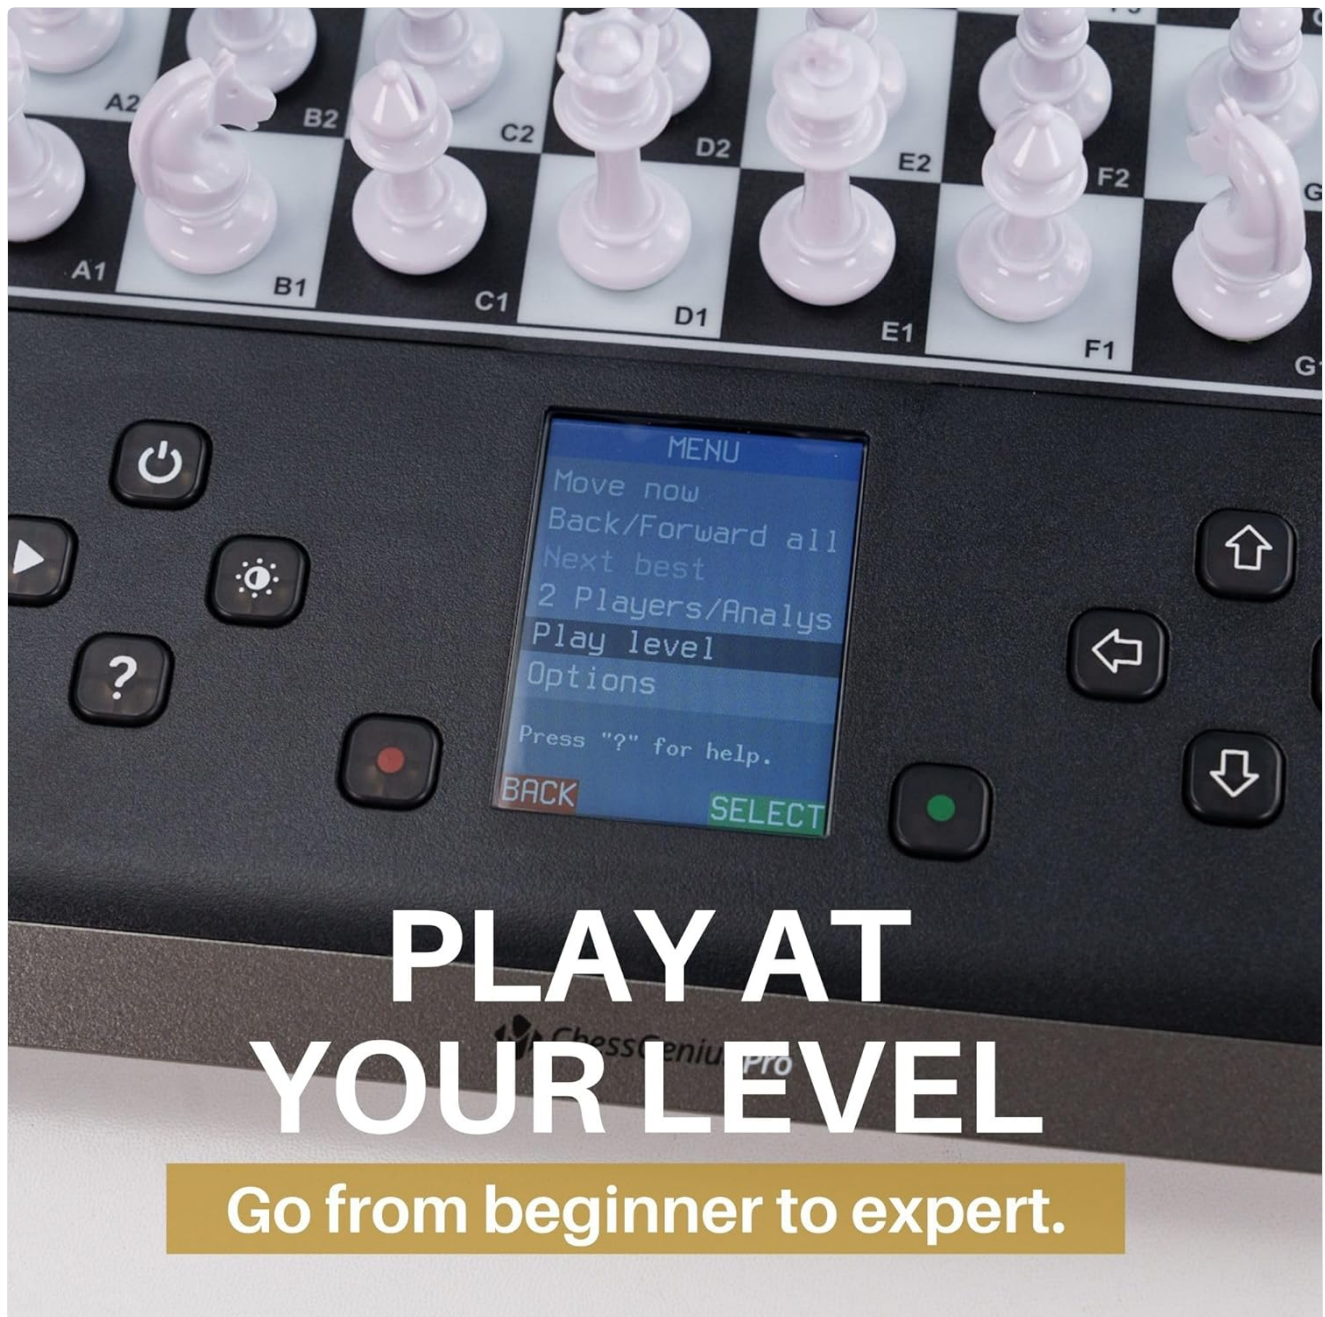 


Figure 5: Intuitive controls. The ChessGenius PRO features an intuitive menu system and a dedicated PLAY button for easy game setup and navigation.

Understanding the Display

The integrated LCD color display shows your moves, the current board state, and provides visual cues for various functions.

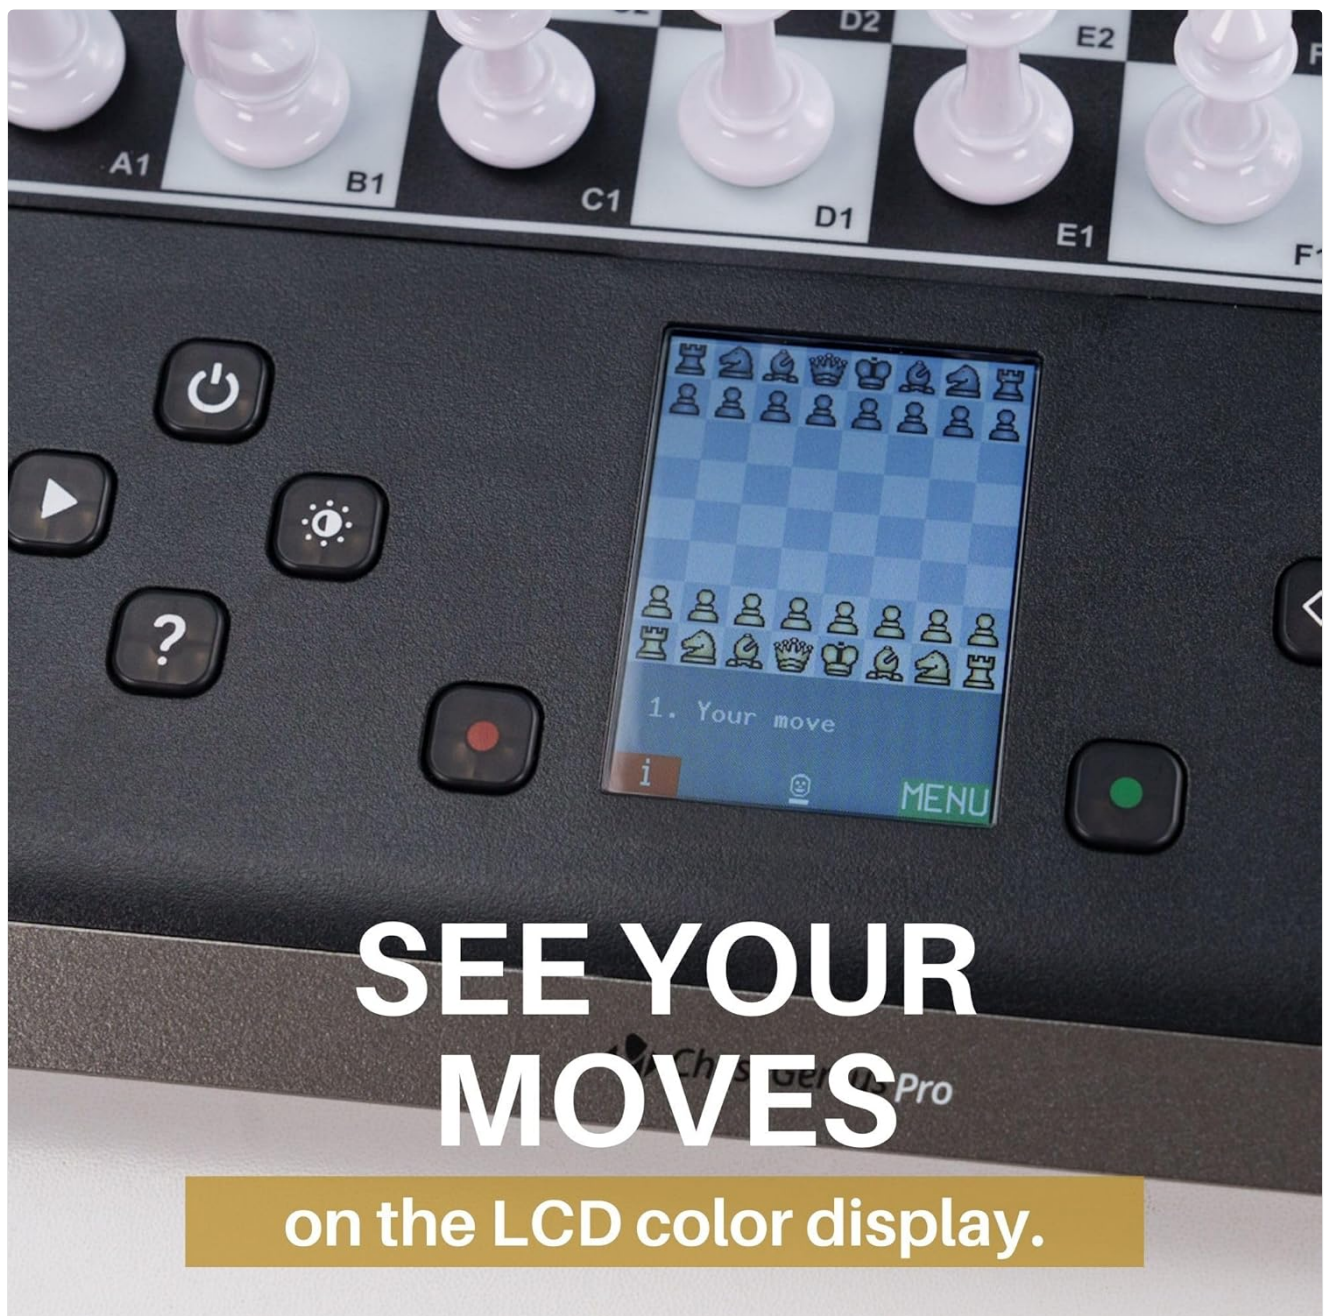 


Figure 6: LCD color display. The display provides clear visual feedback on the game state and prompts for your next move.

Playing Against the Computer

The AI adapts to your playing level, offering a realistic training partner with a playing strength of up to 2200 ELO. You can adjust the difficulty to match your skill, from beginner to master.



Figure 7: Practice strategies. The ChessGenius PRO allows users to practice and develop their chess strategies against an adaptive AI opponent.

Two-Player Mode

In two-player mode, the computer acts as an arbiter, ensuring adherence to chess rules. This is ideal for playing with a friend while still benefiting from the computer's rule enforcement.

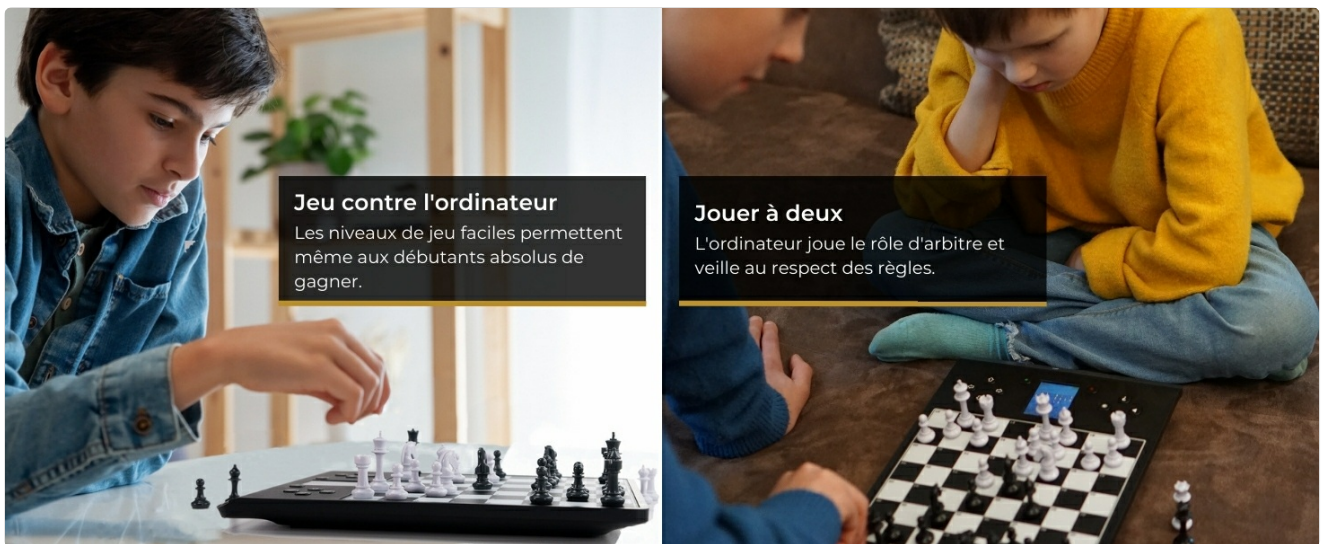 


Figure 8: Game modes. The ChessGenius PRO supports playing against the computer and a two-player mode where the computer enforces rules.

FEATURES AND TRAINING OPTIONS


The ChessGenius PRO is equipped with various features to assist and train players:


- **Move Suggestions:** Receive hints for optimal moves.
- **Bad Move Warnings:** The computer alerts you to potentially poor moves, helping you learn from mistakes.
- **Take-back Options:** Undo moves to explore different strategies or correct errors.
- **Help Button:** Press the '?' button to get assistance or suggestions during a game.
- **Opening Names Display:** The screen can display the names of chess openings as they occur, aiding in learning opening theory.





Figure 9: Help function. The '?' button provides immediate assistance and suggestions during gameplay.

Fonctions
d'apprentissage de l'IA



**Entraîneur d'échecs**
Avertit des mauvais coups

**Bouton d'aide**
Indique les coups possibles

**Propositions de trains**
Optimisent la technique de jeu


**Noms d'ouverture**
S'affichent à l'écran

Figure 10: AI learning functions. The ChessGenius PRO acts as a chess trainer, providing warnings for bad moves, suggesting optimal moves, and displaying opening names to optimize playing technique.

MAINTENANCE

To ensure the longevity and optimal performance of your ChessGenius PRO, follow these maintenance guidelines:

- **Cleaning:** Wipe the board and pieces with a soft, dry cloth. Avoid using abrasive cleaners or solvents.
- **Storage:** When not in use, store the chess pieces in the provided storage bag to prevent loss and damage. Keep the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** If the device will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the electronics.

TROUBLESHOOTING

This section addresses common issues you might encounter with your ChessGenius PRO.

Problem	Possible Cause	Solution
Device does not turn on.	Batteries are dead or incorrectly inserted. AC adapter (if used) is not properly connected or faulty.	Check battery polarity and replace with new batteries. Ensure AC adapter is securely plugged into both the device and the power outlet.
Pieces do not register on the board.	Piece not placed correctly on the center of the square. Magnetic sensor issue (rare).	Ensure each piece is centered on its square. Try restarting the device. If the problem persists, contact customer support.
Display is dim or unreadable.	Low battery power. Display settings.	Replace batteries or use AC adapter. Check display brightness settings in the menu.

SPECIFICATIONS

Brand	MILLENNIUM
Model	M815 ChessGenius Pro 2024
Recommended Age	3 years and up (Manufacturer recommended)

Number of Players	2
Languages	Spanish, English, Polish, German, Portuguese, French, Italian
Power Source	4 x AA/LR06 batteries (not included) or optional AC adapter
Main Material	Plastic
Color	Black
Product Dimensions	30L x 22W centimeters

WARRANTY AND SUPPORT




MILLENNIUM products are designed for durability and performance. For any issues or inquiries, please refer to the following information:




- **Spare Parts Availability:** Spare parts are available for 1 year from the date of purchase.
- **Customer Support:** For technical assistance or warranty claims, please contact MILLENNIUM customer support through their official website or the contact information provided in the product packaging.

OFFICIAL PRODUCT VIDEOS

No official product videos from the seller are available for this product at this time.

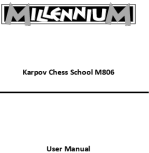Related Documents - M815 ChessGenius Pro 2024

	<p>Millennium M815 ChessGenius Pro Quick Start Guide</p> <p>Get started quickly with your Millennium M815 ChessGenius Pro chess computer. This quick start guide provides essential instructions for setup, language selection, and playing your first game. Learn about basic operations and access the full manual.</p>
	<p>Millennium eONE M841 Quick Start Guide</p> <p>A quick start guide for the Millennium eONE M841 chess computer, covering initial setup, charging, controls, and gameplay. Includes instructions in multiple languages.</p>
	<p>Millennium Karpov Chess School M806: User Manual and Chess Computer Guide</p> <p>User manual for the Millennium Karpov Chess School M806 electronic chess computer. Learn setup, game modes, special features, and technical specifications.</p>

 <p>Lucas Chess Version 1.29a</p> <p>Comprehensive guide to installing and using Lucas Chess software with Millennium eONE electronic chess boards, covering setup, engine selection, and position input via Bluetooth.</p>	<p>Lucas Chess 1.29a: Guide to Using Millennium eONE Chess Boards</p> <p>Comprehensive guide to installing and using Lucas Chess software with Millennium eONE electronic chess boards, covering setup, engine selection, and position input via Bluetooth.</p>
 <p>MILLENNIUM</p> <p>EUROPE Chess Champion M800</p> <p>User Manual</p>	<p>MILLENNIUM Europe Chess Champion M800 User Manual</p> <p>User manual for the MILLENNIUM Europe Chess Champion M800 electronic chess computer. Learn setup, game rules for Chess, Checkers, Reversi, and more, special features, and troubleshooting. Supports models M803 and M807.</p>
 <p>MILLENNIUM</p> <p>M822 ChessLink</p> <p>User manual</p>	<p>Millennium M822 ChessLink & M825 ChessVolt User Manual and Luxe Cabinet Guide</p> <p>User manual for Millennium M822 ChessLink and M825 ChessVolt chess accessories, covering setup, operation, connectivity (Bluetooth, USB) to various devices, safety guidelines, disposal, and warranty. Includes instructions for the Millennium Luxe Cabinet and component connections.</p>