

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [BCA](#) /

› [BCA Backcountry Access BC Link Mini Radio User Manual C2314001010](#)

BCA C2314001010

BCA Backcountry Access BC Link Mini Radio User Manual

Model: C2314001010

INTRODUCTION

The BCA Backcountry Access BC Link Mini Radio is a compact and user-friendly communication system designed for backcountry recreation. It prioritizes durability, ease of use, and simplicity, enabling users to maintain contact with friends, coordinate plans, and share real-time observations. This manual provides essential information for setting up, operating, and maintaining your BC Link Mini Radio.

PACKAGE CONTENTS

- BC Link Mini Radio Unit
- Rechargeable Battery (1800 mAh)
- USB-C Charging Cable
- Three Rugged Attachment Options (e.g., belt clip, carabiner leash)
- User Manual (this document)

PRODUCT OVERVIEW

The BC Link Mini Radio features a robust design with intuitive controls for reliable communication in challenging environments.



Figure 1: Front view of the BCA BC Link Mini Radio, showing the display and control buttons.

Key Components:

- **Antenna:** Integrated for signal transmission and reception.
- **Power/Volume Knob:** Located at the top, used to turn the radio on/off and adjust volume.
- **LCD Display:** Shows channel, privacy code, battery status, and other indicators.
- **Push-to-Talk (PTT) Button:** Located on the side, used to transmit your voice.
- **Menu Button:** Accesses radio settings.

- **Up/Down Buttons:** Navigate menus and adjust settings (e.g., channel, volume).
- **USB-C Charging Port:** Located on the side, protected by a cover.
- **Attachment Points:** Various points for securing the radio to gear.



Figure 2: Side view of the BCA BC Link Mini Radio, highlighting the Push-to-Talk (PTT) button.

GETTING STARTED

Battery Installation & Charging

1. Ensure the radio is powered off.
2. Locate the battery compartment cover on the back of the radio.
3. Open the cover and insert the 1800 mAh rechargeable battery, ensuring correct polarity.
4. Close the battery compartment cover securely.
5. To charge, open the protective cover on the USB-C port and connect the provided USB-C charging cable to a compatible power source. The battery indicator on the display will show charging status.

Attaching the Radio

The BC Link Mini Radio comes with multiple attachment options for versatile carrying.



Figure 3: Back view of the BCA BC Link Mini Radio, showing the integrated belt clip.

- **Belt Clip:** Securely attach the radio to your belt, backpack strap, or other gear.
- **Leash/Carabiner:** Use the included leash and carabiner to clip the radio to a zipper, loop, or other secure point on your clothing or pack, preventing accidental drops.
- The radio is designed to integrate with BCA backpacks, airbags, and vests for optimal placement and accessibility.



Figure 4: The BC Link Mini Radio conveniently attached to a backpack strap for easy access.

OPERATING INSTRUCTIONS

Power On/Off and Volume

1. To power on the radio, rotate the Power/Volume knob clockwise until you hear a click and the display illuminates.
2. To power off, rotate the knob counter-clockwise until it clicks off.
3. Adjust the volume by rotating the Power/Volume knob clockwise (increase) or counter-clockwise (decrease) while the radio is on.

Channel and Privacy Code Selection

The BC Link Mini Radio operates on 22 FRS channels and supports 121 sub-channels (privacy codes) to help minimize interference from other users.

1. Press the **Menu** button to enter the settings.
2. Use the **Up/Down** buttons to select the desired channel (1-22).
3. Press **Menu** again to select the privacy code setting. Use the **Up/Down** buttons to choose a privacy code (1-121) or select 'OFF' for no code.

4. Press **Menu** to confirm your selection and exit.
5. **Important Note on Privacy Codes:** Privacy codes do not encrypt your communication. They only filter out transmissions from other radios that are not using the same code. Anyone on the same main channel can still hear your conversation if they do not have a privacy code set or are using the 'OFF' setting.

Transmitting and Receiving

1. Ensure all radios in your group are set to the same channel and privacy code.
2. To transmit, press and hold the **PTT (Push-to-Talk)** button on the side of the radio. Speak clearly into the microphone located near the display.
3. Release the **PTT** button to stop transmitting and listen for a response.
4. The radio will automatically receive transmissions from other radios on the same channel and privacy code when the PTT button is not pressed.

MAINTENANCE AND CARE

Cleaning

Wipe the radio with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners. Ensure the USB-C port cover is closed tightly after charging to maintain water resistance.

Water Resistance

The BC Link Mini Radio is rated IPX5 water resistant, meaning it can withstand splashes and light rain. It is not designed for submersion in water. Always ensure the USB-C port cover is securely closed to prevent water ingress.

Battery Longevity

The 1800 mAh battery provides approximately 18 hours of typical use. To maximize battery life, avoid extreme temperatures and fully charge the battery before extended trips. Store the radio and battery in a cool, dry place when not in use.

TROUBLESHOOTING

- **No Power:** Ensure the battery is correctly installed and charged. Rotate the Power/Volume knob to turn on the radio.
- **No Sound/Poor Audio:** Check the volume level. Ensure all radios are on the same channel and privacy code. Verify that the microphone is not obstructed.
- **Limited Range:** FRS radios are line-of-sight devices. Range can be significantly reduced by terrain (hills, trees), buildings, and other obstructions. Optimal range is achieved in open, unobstructed areas.
- **Interference:** Change to a different channel or privacy code if you experience interference from other users.

SPECIFICATIONS

Feature	Detail
Model Number	C2314001010

Channels	22 FRS Channels + 121 Sub-channels
Battery Type	Rechargeable 1800 mAh
Battery Life	Up to 18 Hours
Charging	USB-C Port
Water Resistance	IPX5
Dimensions	6.25 x 2.5 x 1.25 inches
Weight	10.8 ounces
Talking Range Maximum	32 Mile (theoretical, actual range varies by terrain)

WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the official BCA website or contact their customer service department. Keep your proof of purchase for any warranty claims.