

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ALLIMITY](#) /

› [ALLIMITY Replacement Remote Control for EDENWOOD ED4903FHD and Compatible Models](#)

ALLIMITY QYSY-ED4903FHD-QYSY

ALLIMITY Replacement Remote Control Instruction Manual

Model: QYSY-ED4903FHD-QYSY

INTRODUCTION

This instruction manual provides essential information for the setup, operation, and maintenance of your ALLIMITY replacement remote control. This remote is designed to be compatible with various EDENWOOD television models, offering full functionality without the need for complex programming.

PRODUCT OVERVIEW



Figure 1: Front view of the ALLIMITY Replacement Remote Control. This image shows the layout of the buttons, including numerical keys, navigation pad, volume, channel controls, and dedicated Netflix button.



Figure 2: Angled view of the ALLIMITY Replacement Remote Control. This perspective highlights the ergonomic design and the arrangement of various function buttons.

SETUP

1. Battery Installation:

Locate the battery compartment on the back of the remote control. Slide the battery cover downwards to open it. Insert two AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment. Close the battery cover by sliding it back into place until it clicks.

2. Initial Use:

This ALLIMITY replacement remote control is designed for immediate use with compatible EDENWOOD TV models. No programming or pairing is required. Once batteries are installed, point the remote towards your television and begin operation.

OPERATING INSTRUCTIONS

The remote control provides full functionality for your compatible EDENWOOD television. Below are common button functions:

- **Power Button ():** Turns the television on or off.

- **Numerical Buttons (0-9):** Directly select channels.
- **Volume Up/Down (VOL+ / VOL-):** Adjusts the audio volume.
- **Channel Up/Down (CH+ / CH-):** Changes the television channel.
- **Navigation Pad (▲ ▼ ▲▶ ▼▶):** Used to navigate menus and select options. The **OK** button confirms selections.
- **BACK:** Returns to the previous menu or screen.
- **MENU:** Accesses the television's main menu.
- **Netflix Button:** Provides direct access to the Netflix application (if supported by your TV model).
- **Source/Input (TV button):** Cycles through available input sources (HDMI, AV, etc.).
- **Mute ():** Mutes or unmutes the television audio.
- **LANG:** Changes audio language.
- **SUBT.:** Toggles subtitles on or off.
- **Media Control Buttons (Play, Pause, Stop, Rewind, Fast Forward):** Control media playback.

Compatible EDENWOOD TV Models: ED3205HD, ED4903FHD, ED4303FHD, ED2400HD, ED3204HD, ED7500UHD, ED5503UHD, ED6505UHD, ED4304FHD, ED3207HD, ED6500UHD, ED4803FHD, ED3904HD, ED3905HD, ED5500UHD, ED6501UHD, ED6504UHD, ED6502UHD, ED5501UHD, ED4300UHD, ED4904FHD, ED5502UHD, ED65021UHD.

MAINTENANCE

- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA).
- **Cleaning:** To clean the remote control, gently wipe its surface with a soft, dry cloth. Do not use liquid cleaners, abrasive materials, or chemical solvents, as these may damage the remote.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not working.	Dead or incorrectly installed batteries.	Check battery orientation. Replace with fresh AAA batteries.
Remote works intermittently.	Weak batteries; obstruction between remote and TV; remote too far from TV.	Replace batteries. Ensure clear line of sight to the TV's IR receiver. Move closer to the TV.
Specific buttons not responding.	Dirt or debris under the button; remote malfunction.	Clean the remote surface. If problem persists, consider replacing the remote.
Remote does not control TV functions.	TV model not compatible.	Verify your EDENWOOD TV model is listed in the "Compatible EDENWOOD TV Models" section.

SPECIFICATIONS

- **Brand:** ALLIMITY
- **Model Number:** QYSY-ED4903FHD-QYSY

- **Connectivity Technology:** Infrared (IR)
- **Special Feature:** No programming required
- **Compatible Devices:** EDENWOOD TVs (models listed in Operating Instructions)
- **Maximum Range:** 10 Meters
- **Number of Buttons:** 25
- **Color:** Black/Silver

WARRANTY AND SUPPORT

Information regarding specific warranty terms for this ALLIMITY replacement remote control is not provided in the product details. For any issues or support inquiries, please refer to the retailer or the manufacturer's official support channels.

For further assistance, you may visit the [ALLIMITY brand page on Amazon](#) or contact your point of purchase.

© 2024 ALLIMITY. All rights reserved.