

## Yoidesu Yoidesus0mbh918dk-13

# Yoidesu Bluetooth Remote Control Page Turner User Manual

Model: Yoidesus0mbh918dk-13

## 1. INTRODUCTION

---

Thank you for choosing the Yoidesu Bluetooth Remote Control Page Turner. This device is designed to enhance your mobile experience by providing convenient wireless control for various applications, including video scrolling, e-book page turning, camera shutter activation, and more. Please read this manual carefully to ensure proper use and optimal performance.

## 2. PRODUCT OVERVIEW

---

The Yoidesu Bluetooth Remote Control Page Turner consists of a compact remote control ring and a portable charging case. The remote features multiple buttons for various functions, and the charging case provides extended battery life and a digital power display.

# WIRELESS REMOTE CONTROL

Remote control of various applications,  
freeing your hands



Image: The Yoidesu Bluetooth Remote Control Page Turner and its charging case.

# CURSOR CONTROL MODE

Tap on any corner of the screen at will

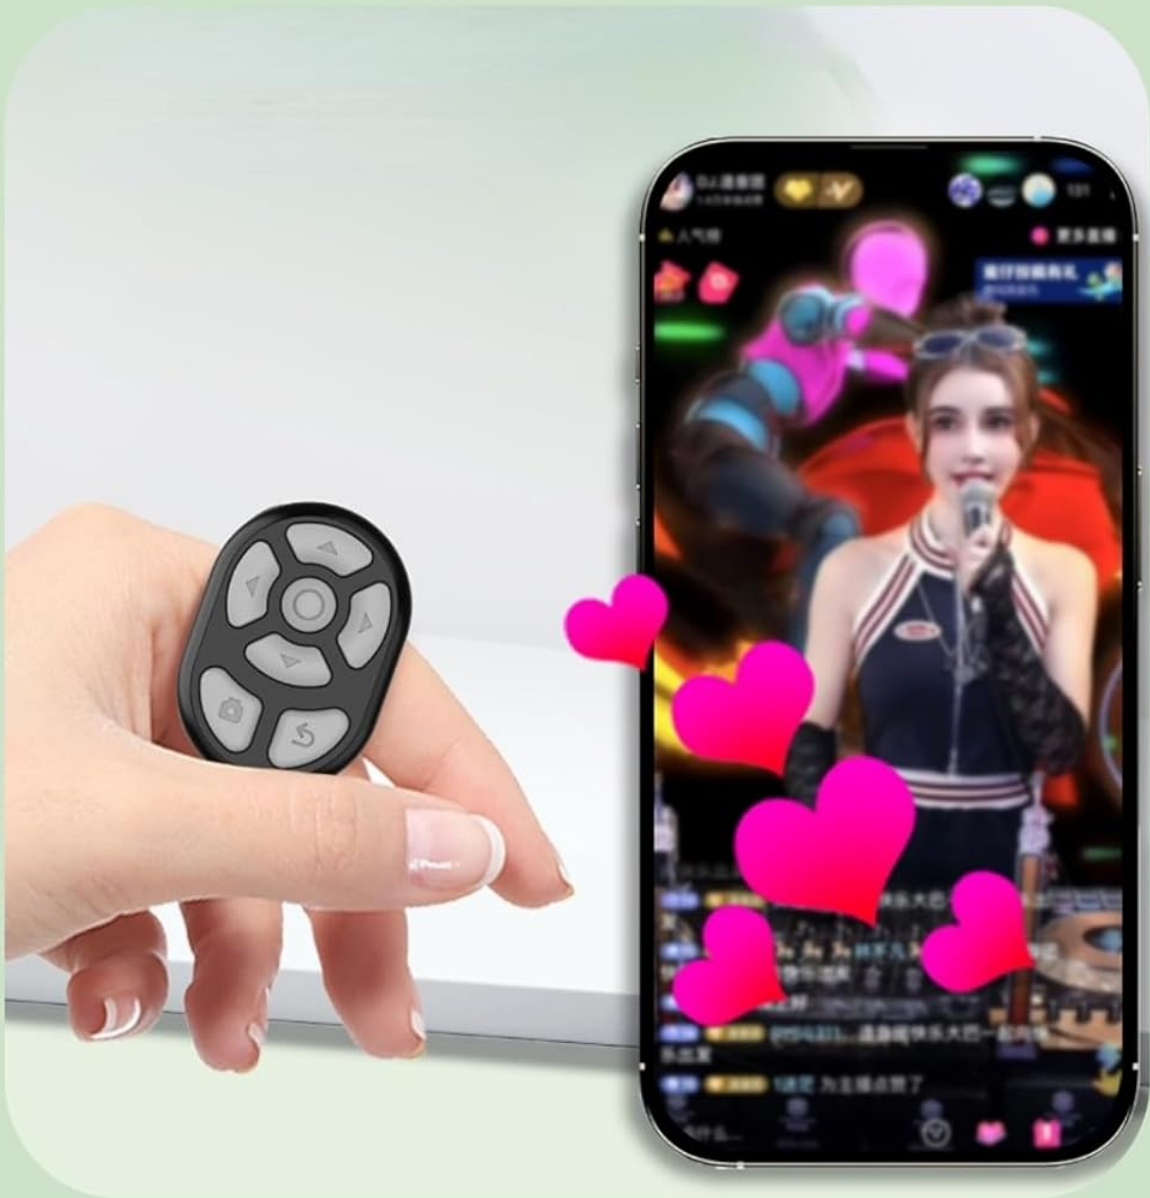


Image: A close-up view of the remote control ring, highlighting its buttons.

## 3. SETUP AND PAIRING

Follow these steps to connect your Yoidesu Remote Control Page Turner to your device:

1. **Charge the Device:** Before first use, ensure the remote control and charging case are fully charged. Place the remote control into the charging case. The LED display on the case will indicate the charging status.
2. **Activate Bluetooth:** On your smartphone or tablet, go to the settings menu and enable Bluetooth.
3. **Pair the Remote:** Take the remote control out of its charging case. It will automatically enter pairing mode. On your device, search for available Bluetooth devices. Select "Yoidesu Remote" or a similar name from the list to connect.
4. **Confirm Connection:** Once paired, your device will show a connected status. The remote control is now ready for use.

**Compatibility:** This remote control is compatible with iOS (version 15 or higher) and Android (version 8.0 or higher) cell phones and tablet devices. It also supports Harmony OS devices.

# PORTABLE MOBILE PHONE HOLDER

Sophisticated design, simplicity,  
convenience and speed



Image: The remote control and charging case displayed with various smartphones and tablets, demonstrating broad compatibility.

## 4. OPERATING INSTRUCTIONS

The Yoidesu Remote Control Page Turner offers multiple functions to enhance your interaction with mobile

devices.

## 4.1 General Remote Control Functions

- **Scrolling:** Use the up/down arrow buttons to scroll content on your screen (e.g., short videos, social media feeds, web pages).
- **Swiping:** Use the left/right arrow buttons for swiping actions.
- **Pause/Start:** The central button typically functions as a play/pause control for media.
- **Volume Control:** Specific buttons may be designated for increasing or decreasing volume.
- **Like/Tap/Back:** Dedicated buttons allow for quick actions like liking content, tapping on elements, or navigating back.

## 4.2 New Cursor Function

This mode allows for precise control of a cursor on your screen, enabling more delicate operations than standard page-turning.

1. **Activate Cursor Mode:** Refer to your device's accessibility settings or the remote's specific button (often marked with a cursor icon) to enable this function.
2. **Control Cursor:** Once activated, use the directional buttons on the remote to move the cursor around the screen.
3. **Click/Select:** Use the central button or a designated click button to select items or tap on specific areas of the screen.

# REMOTE CONNECTION

Remote control of paired devices  
within 10 meters



Image: A hand wearing the remote control ring, with a smartphone screen showing a cursor being controlled.

## 4.3 Camera and Video Recording Remote Control

The remote control can act as a shutter button for your device's camera, allowing you to take photos or start/stop video recording from a distance of up to 10 meters.

- **Open Camera App:** Launch the camera application on your smartphone or tablet.
- **Activate Shutter:** Press the designated camera button on the remote control (often marked with a camera icon) to take a picture or start/stop video recording.

# ONE TOUCH CONTROL

One button to take a picture and return to the origin without waiting



SHOT

BACK TO  
MENU



Image: A person using the remote control to capture a group photo with a smartphone mounted on a tripod.

## 4.4 E-book Page Turning

For reading applications, the remote can turn pages forward or backward, providing a hands-free reading experience.

- **Open E-book App:** Launch your preferred e-book reader application.
- **Turn Pages:** Use the left/right or up/down arrow buttons on the remote to navigate through pages.

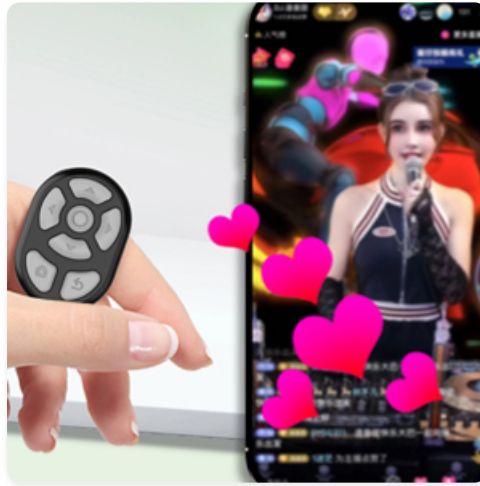


Image: The remote control positioned next to a smartphone displaying an open e-book, illustrating its page-turning capability.

## 5. CHARGING AND BATTERY LIFE

---

The Yoidesu Remote Control Page Turner is designed for extended use with its charging case.

- **Charging:** Place the remote control into its charging case to recharge. The case itself can be charged via a standard USB cable (not specified, assume USB-C or Micro-USB).
- **Battery Life:** The remote control, combined with its charging case, provides up to 120 hours of total use.
- **Power Display:** The charging case features an LED digital display to show the current power level of the case.
- **Hibernation Mode:** To conserve power, the remote control will enter a hibernation state after 15 minutes of inactivity. Press any button to wake it up.



## WITH CHARGING CASE

Charge anywhere, anytime, for up to 120 hours of continuous use

Image: The remote control inside its charging case, with an indicator for 120 hours of use and a battery icon.

## 6. MAINTENANCE

To ensure the longevity and proper functioning of your remote control:

- Keep the device dry and away from extreme temperatures.
- Clean the remote control and charging case with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.
- Store the device in its charging case when not in use to protect it and keep it charged.

## 7. SPECIFICATIONS

Feature	Detail
Brand	Yoidesu
Model Number	Yoidesus0mbh918dk-13
Connectivity Technology	Bluetooth 5.3
Operating Range	Up to 10 meters (33 feet)
Compatible Devices	iOS (15+), Android (8.0+), Harmony OS phones and tablets
Battery Life (with case)	Up to 120 hours
Special Feature	Digital Display (on charging case)
Item Weight	3.2 ounces
Package Dimensions	4.38 x 3.25 x 1.69 inches

## 8. TROUBLESHOOTING

If you encounter issues with your Yoidesu Remote Control Page Turner, please refer to the following common solutions:

- **Device not pairing:**
  - Ensure Bluetooth is enabled on your phone/tablet.
  - Make sure the remote control is charged.
  - Try turning Bluetooth off and on again on your device.
  - Restart both your phone/tablet and the remote control (by placing it back in the case and taking it out).
  - Forget the device in your Bluetooth settings and attempt to pair again.
- **Remote control unresponsive:**
  - Check if the remote control is charged.
  - Ensure it is within the 10-meter operating range of your paired device.
  - The remote may be in hibernation mode; press any button to wake it up.
  - Verify that the remote is still connected via Bluetooth.
- **Functions not working in specific apps:**
  - Some applications may require specific accessibility settings to be enabled for the remote control to function correctly. Check your device's accessibility options.
  - Ensure the app is updated to its latest version.

## 9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact Yoidesu customer service through the retailer where you purchased the product. Please have your model number (Yoidesus0mbh918dk-13) and purchase details ready when contacting support.