

[manuals.plus](#) /› [ECOPAD](#) /› [ECOPAD 10.1 inch Android 15 Tablet User Manual \(Model TH-KK12C\)](#)

ECOPAD TH-KK12C

ECOPAD 10.1 inch Android 15 Tablet User Manual

Model: TH-KK12C

1. INTRODUCTION

Welcome to the ECOPAD 10.1 inch Android 15 Tablet user manual. This guide provides essential information for setting up, operating, maintaining, and troubleshooting your new device. Please read this manual thoroughly to ensure optimal performance and longevity of your tablet.

The ECOPAD tablet is designed for a versatile digital experience, featuring a 10.1-inch IPS HD touchscreen, a quad-core processor, 12GB RAM, 64GB internal storage (expandable up to 1TB), and a 6000mAh battery. It operates on Android 15 and is GMS certified, providing access to a wide range of Google services and applications.

2. PRODUCT OVERVIEW

Familiarize yourself with the physical components and features of your ECOPAD tablet.



1.USB-C Port	5.Power On/Off	9.Headphone Jack
2.SD Card Slot	6.Reset(Reboot)	10.Speakers
3.Volume-	7.Microphone	11.Rear Camera
4.Volume+	8.Front Camera	12.Flash

Image: A detailed diagram illustrating the various ports, buttons, and features of the ECOPAD Android Tablet, including the USB-C port, SD card slot, volume controls, power button, reset button, microphone, front camera, headphone jack, speakers, rear camera, and flash.

Component Identification:

- 1. USB-C Port:** For charging and data transfer.
- 2. SD Card Slot:** For inserting a MicroSD card to expand storage.
- 3. Volume -:** Decreases audio volume.
- 4. Volume +:** Increases audio volume.
- 5. Power On/Off:** Press and hold to power on/off or restart. Short press to turn screen on/off.
- 6. Reset (Reboot):** Small pinhole for force reboot if the device becomes unresponsive.
- 7. Microphone:** For audio input during calls or recordings.
- 8. Front Camera:** For video calls and selfies (2.0MP).
- 9. Headphone Jack:** For connecting 3.5mm audio headphones.
- 10. Speakers:** For audio output.
- 11. Rear Camera:** For taking photos and videos (8.0MP).
- 12. Flash:** Provides illumination for the rear camera.

3. SETUP

3.1 Initial Charging

Before first use, fully charge your tablet using the provided USB-C cable and power adapter. The charging indicator will show the battery status.

3.2 Powering On/Off

- **To Power On:** Press and hold the Power On/Off button until the ECOPAD logo appears on the screen.
- **To Power Off:** Press and hold the Power On/Off button until the power options appear. Select "Power off."
- **To Restart:** Press and hold the Power On/Off button and select "Restart."
- **Screen On/Off:** Briefly press the Power On/Off button to turn the screen on or off without powering down the device.

3.3 Initial Setup Wizard

Upon first power-on, the tablet will guide you through the initial setup process:

1. **Language Selection:** Choose your preferred language.
2. **Wi-Fi Connection:** Connect to an available Wi-Fi network. This is crucial for downloading updates and accessing online services.
3. **Google Account:** Sign in with your Google account or create a new one. This allows access to the Google Play Store, Gmail, and other Google services.
4. **Date & Time:** Set the correct date and time, or allow the network to set it automatically.
5. **Security:** Set up a screen lock (PIN, pattern, password).

3.4 Inserting an SD Card

The tablet supports MicroSD cards up to 1TB for expanded storage.

1. Locate the SD Card Slot on the side of the tablet.
2. Gently insert the MicroSD card into the slot with the gold contacts facing down until it clicks into place.
3. The tablet will detect the new storage. You may be prompted to format the card for optimal use with the device.

Store All You Want

Download any APPS you want via Google Play Store

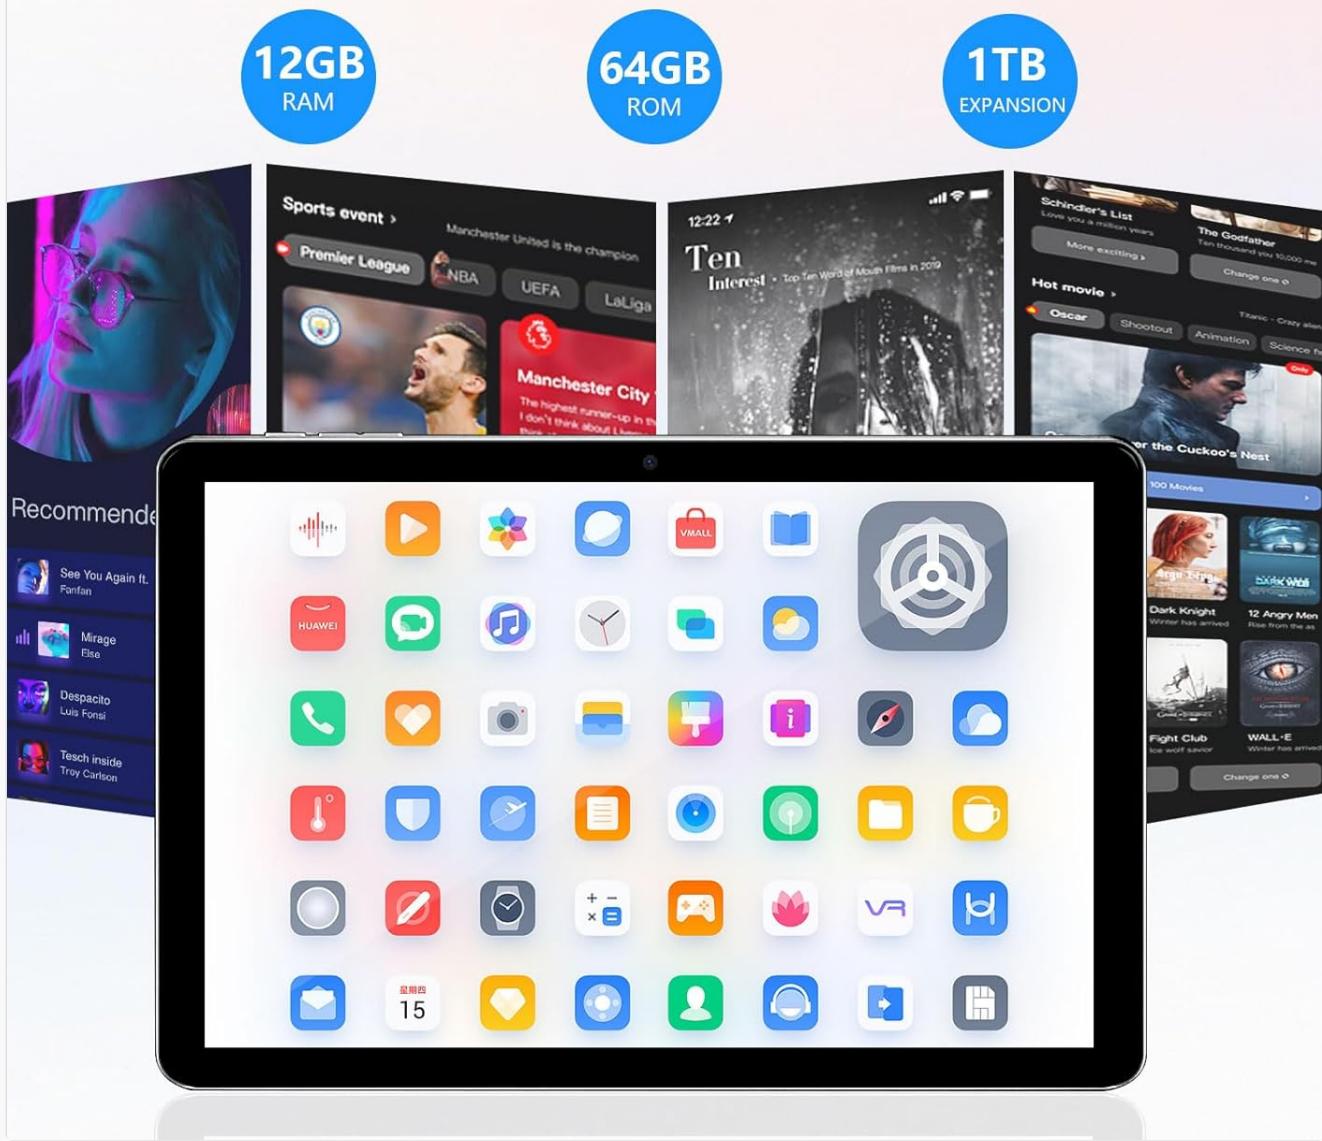


Image: An illustration of the tablet's storage capabilities, featuring icons for 12GB RAM, 64GB internal storage (ROM), and up to 1TB expandable storage via an SD card.

4. OPERATING INSTRUCTIONS

4.1 Basic Navigation

The tablet uses touch gestures for navigation:

- **Tap:** Select an item or open an app.
- **Tap & Hold:** Access contextual menus or move icons.
- **Swipe:** Scroll through pages, menus, or switch between home screens.
- **Pinch:** Zoom in or out on images and web pages.

4.2 Connecting to Wi-Fi

1. Go to **Settings > Network & internet > Wi-Fi**.
2. Toggle Wi-Fi **On**.
3. Select your desired network from the list.
4. Enter the password if prompted, then tap **Connect**.

4.3 Bluetooth Pairing

1. Go to **Settings > Connected devices > Bluetooth**.
2. Toggle Bluetooth **On**.
3. Ensure your Bluetooth device is in pairing mode.
4. Select your device from the list of available devices and follow any on-screen prompts to complete pairing.

4.4 Using the Cameras

The tablet features a 2.0MP front camera and an 8.0MP rear camera.

- Open the **Camera** app.
- Tap the camera switch icon to toggle between front and rear cameras.
- Tap the shutter button to take a photo or start/stop video recording.

10.1" 1280*800 HD Display



Image: The tablet screen showing a multi-person video conference, demonstrating its 10.1-inch 1280x800 HD display suitable for communication and media.

4.5 Managing Storage

Your tablet comes with 64GB of internal storage, expandable up to 1TB with a MicroSD card.

- To check storage usage, go to **Settings > Storage**.
- Move large files (photos, videos) to the SD card to free up internal space.
- Regularly clear cached data from apps to optimize performance.

4.6 Downloading Applications

As a GMS certified device, you can download a wide variety of applications from the Google Play Store.

1. Open the **Play Store** app.
2. Search for the desired app.

3. Tap **Install** and follow the on-screen instructions.

Android 15 & GMS Certified



Image: The tablet screen displaying various Google Mobile Services (GMS) applications, indicating its certification and access to the Google Play Store.



Image: A person using the ECOPAD Android Tablet with an attached external keyboard, demonstrating its potential for productivity tasks.

4.7 Battery Management

The 6000mAh battery provides up to 8 hours of video playback. To maximize battery life:

- Adjust screen brightness to a comfortable level.
- Turn off Wi-Fi and Bluetooth when not in use.
- Close unused applications running in the background.
- Enable battery saver mode in **Settings > Battery**.

10.1 Inch IPS HD Screen

With a 1280*800 resolution and wide viewing angle, this tablet offers an enjoyable experience for watching videos or playing games.



Image: A person comfortably watching a video on the ECOPAD Android Tablet, which is propped up on a table, demonstrating its

5. MAINTENANCE

5.1 Cleaning the Device

- Use a soft, lint-free cloth to clean the screen and body.
- Avoid using harsh chemicals or abrasive materials.
- For stubborn smudges, slightly dampen the cloth with water or a screen cleaner designed for electronics.

5.2 Software Updates

Regularly check for and install software updates to ensure your tablet has the latest features, security patches, and performance improvements.

1. Go to **Settings > System > System update**.
2. Follow the on-screen instructions to check for and install updates. Ensure your tablet is sufficiently charged or connected to power during updates.

5.3 Storage Optimization

To maintain optimal performance, manage your tablet's storage:

- Uninstall unused apps.
- Delete old photos, videos, and documents you no longer need.
- Utilize cloud storage services for backups.

5.4 Battery Care

- Avoid extreme temperatures, which can degrade battery life.
- Do not leave the tablet fully charged or fully discharged for extended periods.
- Use only the provided charger or a certified compatible charger.

6. TROUBLESHOOTING

This section addresses common issues you might encounter with your ECOPAD tablet.

6.1 Device Not Turning On

- Ensure the tablet is charged. Connect it to the charger for at least 30 minutes.
- Press and hold the Power On/Off button for 10-15 seconds to attempt a force restart.
- If unresponsive, use a thin pin to press the Reset (Reboot) button located in the pinhole.

6.2 Wi-Fi Connection Issues

- Ensure Wi-Fi is enabled in Settings.
- Restart your Wi-Fi router.
- Forget the network in tablet settings and reconnect.
- Ensure you are within range of the Wi-Fi signal.

6.3 Slow Performance

- Close unused applications running in the background.
- Clear cached data from apps (Settings > Apps & notifications > [App Name] > Storage & cache > Clear cache).
- Check available storage and free up space if necessary.
- Restart the tablet.

6.4 Battery Draining Quickly

- Reduce screen brightness.
- Disable Wi-Fi, Bluetooth, and GPS when not in use.
- Identify and close power-intensive apps (Settings > Battery).
- Ensure the tablet is running the latest software updates.

7. SPECIFICATIONS

Detailed technical specifications for the ECOPAD 10.1 inch Android 15 Tablet (Model TH-KK12C).



Image: An image showcasing the tablet's key performance features, including dual cameras, a quad-core RK3562 processor, Bluetooth 5.0, dual-band Wi-Fi, eye protection, and a 6000mAh battery, set against a scenic background.



Image: A stylized illustration of a quad-core processor, representing the tablet's internal computing power.

Feature	Specification
Brand	ECOPAD
Model Name	THTH-K12C
Operating System	Android 15
Screen Size	10.1 Inches
Screen Resolution	1280 x 800 pixels (IPS HD)
Processor	Quad-core ARM (RK3562)
RAM	12GB (4GB physical + 8GB virtual)
Internal Storage (ROM)	64GB
Expandable Storage	Up to 1TB via MicroSD card (sold separately)
Rear Camera	8.0 MP
Front Camera	2.0 MP
Battery	6000mAh Lithium Polymer (up to 8 hours video playback)
Wireless Connectivity	Dual Band Wi-Fi (802.11bgn, 2.4/5GHz), Bluetooth 5.0
Ports	USB-C, 3.5mm Headphone Jack, MicroSD Card Slot
Dimensions (LxWxH)	9.5 x 6.2 x 0.28 inches
Item Weight	2.18 pounds
Color	Silver

8. WARRANTY AND SUPPORT

8.1 Warranty Information

Your ECOPAD tablet comes with a **1-year warranty** from the date of purchase. This warranty covers manufacturing defects and ensures your product functions as intended under normal use. Please retain your proof of purchase for warranty claims.

8.2 Customer Support

For any questions, technical assistance, or warranty claims, please do not hesitate to contact our customer support team. Most inquiries are answered within 24 hours.

Please refer to the contact information provided with your purchase or visit the official ECOPAD website for support details.



Related Documents - TH-KK12C

 <p>The thumbnail image shows a digital interface for the Altimetrik Merchandise Shop. It features a 'WELCOME TO' banner at the top, followed by a photo of two people holding shopping bags. The text 'ALTIMETRIK MERCHANTISE SHOP' is prominently displayed. Below the photo, there is a description of the shop's offerings and a 'Get started to start browsing' button.</p>	<p>Altimetrik Merchandise Shop: Catalog of Promotional Products and Accessories</p> <p>Explore the Altimetrik Merchandise Shop catalog featuring a wide range of promotional products, accessories, and gifts. Browse items like pens, chargers, travel adapters, notebooks, and more, with product codes and details.</p>
 <p>The thumbnail image shows a digital interface for the DiversiTech HVAC Product Catalog. It features a red background with the text 'We've got it.' and several HVAC equipment components (pads, mounting systems, condensate management solutions) displayed. The text 'HVAC Product Catalog Issue 22' is at the top left, and the DiversiTech logo with the tagline 'Simplify your Work.' is at the bottom.</p>	<p>DiversiTech HVAC Product Catalog - Issue 22</p> <p>Explore the comprehensive range of HVAC products and accessories from DiversiTech, including equipment pads, mounting systems, condensate management solutions, and more, as detailed in Issue 22 of their product catalog. Discover quality components designed to simplify HVAC professional's work.</p>