

Artist hand 5040 Retro Barber Chair

Artist hand 5040 Retro Barber Chair Instruction Manual

Model: 5040 Retro Barber Chair

INTRODUCTION

Thank you for choosing the Artist hand 5040 Retro Barber Chair. This manual provides detailed instructions for the safe assembly, operation, and maintenance of your new barber chair. Please read this manual thoroughly before use and retain it for future reference.

SAFETY INFORMATION

Important Safety Precautions:

- Always ensure the chair is fully assembled and stable before use.
- Do not exceed the maximum weight capacity of **450 LBS**.
- Be cautious when adjusting the backrest and hydraulic pump to prevent injury.
- Keep hands and feet clear of moving parts during adjustments.
- Ensure all locking mechanisms are engaged before a client sits in the chair or before performing any services.

PRODUCT OVERVIEW

The Artist hand 5040 Retro Barber Chair is designed for comfort and durability, featuring a vintage aesthetic with modern functionality. Key features include:

- Ergonomic design for client comfort.
- 360-degree swivel with locking mechanism.
- Hydraulic pump for easy height adjustment (up to 5 inches).
- Reclining backrest up to 140 degrees with gas-piston lock.
- Heavy-duty steel frame and chrome-finished base for stability.
- High-quality, waterproof, and stain-resistant faux leather upholstery.
- Adjustable and removable headrest.
- Classic style footrest.



Image: The Artist hand 5040 Retro Barber Chair, showcasing its design and 360-degree swivel capability.

ASSEMBLY INSTRUCTIONS

The chair is designed for easy installation. All necessary accessories are included in the carton. Please note that items may arrive in two separate packages on different days. Refer to the detailed installation steps provided in the manual included with your product. A general overview of the assembly process is as follows:

1. Unpack all components and verify against the parts list.
2. Attach the hydraulic pump to the base.
3. Secure the seat frame to the hydraulic pump.
4. Install the backrest and armrests.
5. Attach the footrest assembly.
6. Insert the adjustable headrest.
7. Ensure all bolts and screws are tightened securely before use.

PRODUCT SIZE



Image: Product dimensions, illustrating the overall size and key measurements for assembly and placement.

OPERATING INSTRUCTIONS

This section details how to operate the various adjustable features of your Artist hand barber chair.

Height Adjustment

To adjust the chair's height, use the heavy-duty hydraulic pump lever located on the side. Pressing the lever down will lower the chair, while pumping it will raise the chair. The chair can be adjusted up to 5 inches in height to accommodate different client and stylist needs.

HEIGHT PINPOINT ADJUSTABLE

Adapt to customers of different heights



Image: Illustration of the hydraulic height adjustment, showing a 5.5-inch range.

Reclining Backrest

The backrest can recline up to 140 degrees. To recline, locate the gas-piston lock and release mechanism, typically a lever on the side of the chair. Engage the lever to adjust the backrest to your desired angle, then release the lever to lock it into position. Ensure the backrest is securely locked before use.

FULLY RECLINABLE

Backrest reclines up to 135°



Image: The barber chair in a fully reclined position, demonstrating the 135-degree recline capability.

360-Degree Swivel and Lock

The chair features a 360-degree swivel function, allowing for easy rotation. To lock the chair in a fixed position, engage the swivel lock mechanism, usually a foot pedal or lever near the base. Disengage to allow free rotation.

360° SWIVEL AND LOCK

Fixed in any direction you want



Image: Front and back views of the chair demonstrating the 360-degree swivel and lock function.

Adjustable Headrest

The headrest can be adjusted vertically to suit different client heights or removed completely if desired. Simply pull up or push down on the headrest to adjust its position. Ensure it is securely seated before use.

ADJUSTABLE HEADREST

Can be adjusted or remove completely if desired



Image: Close-up of the adjustable headrest, showing its vertical movement.

Footrest

The classic style footrest provides support for clients' feet. It is designed to offer extra support and permits easy rotation with the chair.

CARE OF THE ELDERLY

Offers extra support for feet and permits easy rotation



Image: Detailed view of the footrest, highlighting its design for client comfort and support.

CARE AND MAINTENANCE

Proper care and maintenance will extend the life and appearance of your barber chair.

- **Cleaning Upholstery:** The high-quality faux leather is waterproof and stain-resistant. Clean regularly with a soft, damp cloth and mild soap. Avoid harsh chemicals or abrasive cleaners that may damage the material.
- **Frame and Base:** Wipe down the chrome-finished base and steel frame with a soft, dry cloth. For stubborn marks, use a non-abrasive cleaner suitable for metal surfaces.
- **Hydraulic Pump:** Periodically check the hydraulic pump for smooth operation. If it becomes stiff, a small amount of silicone-based lubricant can be applied to the moving parts, avoiding contact with upholstery.
- **General Inspection:** Regularly inspect all bolts, screws, and connections to ensure they are tight. Tighten any loose fasteners to maintain stability and safety.

HIGH QUALITY FAUX LEATHER

1 **WATERPROOF**

2 **STAIN-RESISTANT**

3 **EASY TO CLEAN**

Image: Close-up of the high-quality faux leather, highlighting its waterproof, stain-resistant, and easy-to-clean properties.

TROUBLESHOOTING

This section addresses common issues you might encounter with your barber chair.

Problem	Possible Cause	Solution
Chair does not adjust height smoothly.	Hydraulic pump issue or low fluid.	Check the hydraulic pump lever for proper engagement. If the issue persists, contact customer support.
Backrest does not lock in position.	Gas-piston lock mechanism malfunction or improper engagement.	Ensure the reclining lever is fully engaged to lock the backrest. Inspect the mechanism for any obstructions. If broken, contact customer support.

Problem	Possible Cause	Solution
Chair feels unstable or wobbly.	Loose fasteners or uneven floor.	Check and tighten all assembly bolts and screws. Ensure the chair is placed on a flat, level surface.
Headrest does not stay in position.	Internal locking mechanism worn or damaged.	Ensure the headrest is fully inserted. If the locking mechanism is faulty, contact customer support for replacement parts.

SPECIFICATIONS

Feature	Detail
Brand	Artist hand
Model Name	5040 Retro Barber Chair
Color	Gold
Material	Metal (Frame), Leather (Seat), Sponge (Fill)
Product Dimensions (D x W x H)	24"D x 24.8"W x 40"H
Item Weight	120 Pounds
Maximum Weight Recommendation	450 Pounds
Reclining Position Count	4 (up to 140 degrees)
Swivel	360 Degrees
Assembly Required	Yes

WARRANTY AND SUPPORT

For any questions regarding your Artist hand 5040 Retro Barber Chair, including assembly, operation, or parts, please contact our customer support. While specific warranty details are not provided in this manual, please refer to your purchase documentation or contact the seller directly for warranty information.

If you have any questions or require assistance, please feel free to contact us through the "Get Order Help" option on your purchase platform. We are always online to serve you.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question