

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [Whirlpool](#) /

> [Whirlpool Intellifresh Pro IFPRO INV CNV 278 Refrigerator User Manual](#)

Whirlpool IFPRO INV CNV 278

Whirlpool Intellifresh Pro Refrigerator User Manual

MODEL: IFPRO INV CNV 278

Introduction

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your new Whirlpool Intellifresh Pro 235L Convertible Frost Free Double-Door Refrigerator, model IFPRO INV CNV 278. Please read these instructions thoroughly before using the appliance and retain them for future reference.

Your refrigerator features advanced technologies such as Intellisense Inverter Technology, a feather touch UI for temperature control, and a convertible freezer with 10-in-1 modes. It is designed to provide optimal food preservation with features like up to 2x longer vitamin preservation, up to 15 days of freshness, and a coldest freezer capability of -24°C with Fast Freeze.

Safety Information

Electrical Safety: Ensure the refrigerator is connected to a properly grounded electrical outlet. Do not use extension cords or adapters. Disconnect power before cleaning or performing any maintenance.

Ventilation: Maintain adequate clearance around the refrigerator for proper ventilation to prevent overheating and ensure efficient operation.

Children Safety: Keep children away from packaging materials. Old refrigerators must be disposed of safely to prevent children from getting trapped inside.

Flammable Materials: Do not store explosive substances or flammable materials inside or near the refrigerator.

Handling: The appliance is heavy. Use caution and proper lifting techniques when moving it. Seek assistance if necessary.

Setup

1. Unpacking

Carefully remove all packaging materials, including tape and protective films. Inspect the refrigerator for any damage incurred during transit. Retain packaging for potential future transport or service.

2. Placement

- Place the refrigerator on a firm, level floor.
- Ensure there is sufficient space around the appliance for air circulation (minimum 10 cm at the back and sides, 30 cm at the top).
- Avoid direct sunlight, heat sources (stoves, radiators), and damp areas.
- Adjust the leveling feet to ensure the refrigerator is stable and the doors close properly.



Image: Front view of the Whirlpool Intellifresh Pro refrigerator with its dimensions (158.7 cm height, 56.4 cm width, 65.5 cm depth) indicated, illustrating space requirements.

3. Initial Cleaning

Before first use, clean the interior and exterior of the refrigerator with a soft cloth and a mild detergent solution. Rinse with clean water and dry thoroughly.

4. Power Connection

Plug the refrigerator into a dedicated 230 Volt, 50 Hz, AC power outlet. Do not switch on immediately.

5. Initial Cooling Period

After plugging in, allow the refrigerator to operate for at least 2-4 hours before placing food inside. This allows the internal temperature to stabilize.

Operating Instructions

1. Temperature Control

Your refrigerator features an advanced feather touch UI panel located inside the refrigerator compartment. Use this panel to adjust the temperature settings for both the refrigerator and freezer sections. Refer to the on-screen indicators for current settings.



Image: Exterior view of the Whirlpool Intellifresh Pro refrigerator, showing the sleek design and the location of the internal UI panel behind the door.

2. Convertible Modes

The Intellifresh Pro offers 10-in-1 convertible modes, allowing you to convert the freezer compartment into a refrigerator compartment as needed. Access and select these modes via the internal UI panel. Conversion from freezer to fridge can take approximately 27 minutes.

3. Using Compartments

- **Refrigerator Compartment:** Designed for fresh food storage. The Freshflow Air Tower with strategically placed vents ensures uniform and faster cooling.
- **Freezer Compartment:** For frozen foods. Utilize the Fast Freeze setting to rapidly cool the freezer down to -24°C for quick

freezing of new items.

- **Honeycomb Crisper Cover:** This feature helps maintain optimum moisture balance for fruits and vegetables by condensing evaporated moisture, keeping them fresh for longer.



Image: Interior view of the Whirlpool Intellifresh Pro refrigerator with empty shelves and crisper drawers, highlighting the Freshflow Air Tower and storage layout.



Image: Interior view of the Whirlpool Intellifresh Pro refrigerator filled with various food items, demonstrating practical storage and organization.

Maintenance

1. Cleaning

- **Interior:** Clean regularly with a solution of mild soap and warm water. Wipe dry. Remove shelves and drawers for thorough cleaning.
- **Exterior:** Wipe surfaces with a soft, damp cloth. For stainless steel finishes, use a specialized stainless steel cleaner.
- **Door Seals:** Clean door gaskets regularly to ensure a tight seal.
- **Condenser Coils:** Periodically clean the condenser coils at the back or bottom of the refrigerator to maintain efficiency. Disconnect power before cleaning.

2. Defrosting

This is a frost-free refrigerator, meaning manual defrosting is not required. The system automatically prevents ice buildup.

3. Power Outage Management

In case of a power cut, the unique Cool Pad in the freezer helps retain cooling for up to 17 hours, preventing ice from melting and food from spoiling.

4. Microblock Technology

The refrigerator features Microblock Technology, which helps prevent up to 99.9% bacterial growth, contributing to a hygienic storage environment.

Troubleshooting

Before contacting service, review the following common issues and solutions:

Problem	Possible Cause	Solution
Refrigerator does not operate.	No power supply; power cord unplugged; circuit breaker tripped.	Check power connection; reset circuit breaker.
Refrigerator is not cooling sufficiently.	Temperature setting too high; door left open; excessive food load; poor ventilation.	Adjust temperature; ensure door is closed; reduce load; check ventilation.
Unusual noises.	Refrigerator not level; items vibrating inside; normal compressor operation.	Level the appliance; rearrange items; some noises are normal.
Water on floor or inside.	Drain tube blocked; door not sealing properly.	Clear drain tube; check door seal for obstructions.

If the problem persists after attempting these solutions, please contact customer service.

Specifications

Feature	Detail
Brand	Whirlpool
Model	IFPRO INV CNV 278 ILLUSIA STEEL(2S)-TL
Capacity	235 litres
Annual Energy Consumption	265 Kilowatt Hours Per Year
Refrigerator Fresh Food Capacity	179 litres
Freezer Capacity	52 Litres
Installation Type	Freestanding
Form Factor	Convertible
Special Features	Inverter Compressor, 10-in-1 Convertible Modes, Microblock Technology, Cool Pad
Colour	Grey
Voltage	230 Volts
Number of Drawers	4

Feature	Detail
Defrost System	Automatic (Frost Free)
Door Orientation	Left
Door Material	Steel
Number of Shelves	4
Certification	Energy Star
Material	Steel
Item Weight	47 kg
Item Dimensions (LxWxH)	65.5 x 56.4 x 158.7 Centimeters

Warranty Information

Your Whirlpool Intellifresh Pro Refrigerator comes with a manufacturer's warranty. A detailed warranty card is included with your purchase. Please refer to this card for specific terms, conditions, coverage period, and exclusions.

Keep your purchase receipt and warranty card in a safe place as proof of purchase is required for any warranty claims.

Customer Support

For technical assistance, service requests, or inquiries regarding your Whirlpool Intellifresh Pro Refrigerator, please contact Whirlpool Customer Service.

Whirlpool Customer Service:

Website: www.whirlpoolindia.com/contact-us (or relevant regional website)

Phone: Refer to your warranty card or the Whirlpool website for local contact numbers.

When contacting support, please have your model number (IFPRO INV CNV 278) and serial number ready.