

[Manuals.plus](#) /

> [EverNice](#) /

> EverNice Foot Control Pedal with Cord for Pfaff Sewing Machines (220V) - Instruction Manual

## EverNice Foot Control Pedal

# EverNice Foot Control Pedal with Cord for Pfaff Sewing Machines (220V)

Model: Foot Control Pedal | Brand: EverNice

## INTRODUCTION

---

This instruction manual provides essential information for the safe and effective use of your EverNice Foot Control Pedal with Cord. This pedal is designed as a replacement or spare part for a wide range of Pfaff sewing machine models, operating on a 220V power supply. Please read this manual thoroughly before installation and operation.

## SAFETY INFORMATION

---

- **Voltage Compatibility:** This pedal is designed for 220V electrical systems. Ensure your sewing machine and power outlet are compatible with 220V to prevent electrical hazards and damage to the device.
- **Power Disconnection:** Always unplug the sewing machine from the power outlet before connecting, disconnecting, or performing any maintenance on the foot control pedal.
- **Dry Environment:** Use the pedal in a dry environment. Avoid exposure to water or excessive moisture, which can cause electric shock or damage.
- **Cable Integrity:** Regularly inspect the cord for any signs of damage, fraying, or exposed wires. Do not use the pedal if the cord is damaged.
- **Children and Pets:** Keep the pedal and its cord out of reach of children and pets to prevent accidents.
- **Proper Placement:** Place the pedal on a stable, flat surface during use to prevent accidental movement.

## PACKAGE CONTENTS

---

- 1 x EverNice Foot Control Pedal with Cord (220V EU power plug)

## SETUP

---

1. **Verify Compatibility:** Before connecting, carefully examine the shape and dimensions of the cord end (plug) to ensure it matches the socket on your Pfaff sewing machine. Refer to the image below for detailed plug dimensions.
2. **Power Off:** Ensure your sewing machine is turned off and unplugged from the main power supply.

3. **Connect Pedal:** Insert the cord end of the foot control pedal firmly into the designated socket on your sewing machine.
4. **Connect to Power:** Plug the sewing machine's power cord into a 220V compatible electrical outlet.
5. **Test Functionality:** Turn on your sewing machine and gently press the foot pedal to ensure it controls the machine's speed as expected.



This image displays the specific dimensions of the 220V EU power plug end. Before connecting, carefully compare these measurements to your sewing machine's socket to ensure proper fit and electrical compatibility. The plug measures 33.6mm in width and 16.4mm in height. The two main pins are 2.4mm wide and 6.2mm high, with the ground pin measuring 6.5mm in width.

## OPERATING INSTRUCTIONS

---

The foot control pedal allows you to regulate the sewing speed of your machine. The harder you press the pedal, the faster the machine will sew.

1. Ensure the foot control pedal is securely connected to your sewing machine and the machine is plugged into a 220V power outlet.
2. Turn on your sewing machine using its main power switch.
3. Place your foot comfortably on the pedal.
4. Gently press down on the pedal to start sewing at a slow speed.
5. Increase pressure on the pedal to increase the sewing speed.
6. Release pressure on the pedal to slow down or stop the machine.
7. When finished sewing, turn off your sewing machine and unplug it from the power outlet.

## COMPATIBLE SEWING MACHINE MODELS

---

This EverNice Foot Control Pedal is compatible with the following Pfaff sewing machine models:

- **PFAFF SELECT:** 2.0, 3.0, 4.0, 150 SELECT, 1520, 1522, 1523, 1525, 1526, 1527, 1528, 1529, 1530, 1536, 1540, 1546, 1548
- **PFAFF DUALMATIC:** 955
- **PFAFF HOBBYMATIC:** 904, 906, 907, 916, 917, 919, 926, 927, 933, 935, 939, 946, 947, 953, 955
- **PFAFF GRITZNER:** 976
- **PFAFF 1000 Series:** 1006, 1007, 1010, 1011, 1014, 1015, 1018, 1019
- **PFAFF TIPMATIC:** 1035, 1045, 1047, 1050, 1051, 1119, 1120, 1147, 1150, 1151, 6110, 6112, 6120, 6122, 6150, 6152
- **PFAFF VARIMATIC:** 1115, 876, 894, 985
- **PFAFF NEWMATIC:** 1129
- **PFAFF 1100/1200 Series:** 1196, 1197, 1211, 1212, 1213, 1214, 1217
- **PFAFF SYNCHROMATIC:** 1216
- **PFAFF FREESTYLE:** 1522
- **PFAFF STRETCH & JEANS:** 6091
- **PFAFF HOBBYLOCK:** 790, 793, 794, 795, 796, 797, 799
- **PFAFF Classic Style Quilt:** 2027

## MAINTENANCE

- **Cleaning:** To clean the pedal, wipe it with a soft, dry cloth. Do not use liquid cleaners or immerse the pedal in water.
- **Storage:** When not in use, store the pedal in a clean, dry place, away from direct sunlight and extreme temperatures. Avoid coiling the cord too tightly to prevent damage.
- **Cord Inspection:** Periodically check the cord for any signs of wear, cuts, or damage. Replace the pedal if the cord is compromised.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Sewing machine does not start or respond to pedal.	<ul style="list-style-type: none"><li>• Pedal not properly connected.</li><li>• Sewing machine not powered on or unplugged.</li><li>• Incorrect voltage.</li><li>• Damaged pedal or cord.</li></ul>	<ul style="list-style-type: none"><li>• Ensure the pedal's plug is fully inserted into the machine's socket.</li><li>• Verify the sewing machine is plugged into a 220V outlet and its power switch is on.</li><li>• Confirm your machine is compatible with 220V.</li><li>• Inspect the cord for damage. If damaged, discontinue use and replace.</li></ul>
Inconsistent sewing speed.	<ul style="list-style-type: none"><li>• Loose connection.</li><li>• Internal pedal issue.</li></ul>	<ul style="list-style-type: none"><li>• Check all connections.</li><li>• If the issue persists, the pedal may require replacement.</li></ul>

Problem	Possible Cause	Solution
Pedal feels stiff or unresponsive.	<ul style="list-style-type: none"><li>• Debris under the pedal.</li><li>• Internal mechanism issue.</li></ul>	<ul style="list-style-type: none"><li>• Ensure no foreign objects are obstructing the pedal's movement.</li><li>• If the issue continues, the pedal may need replacement.</li></ul>

## SPECIFICATIONS

---

- **Product Type:** Foot Control Pedal with Cord
- **Brand:** EverNice
- **Voltage:** 220V
- **Plug Type:** EU Power Plug (as per dimensions provided)
- **Compatibility:** Refer to the 'Compatible Sewing Machine Models' section for a detailed list.

## WARRANTY AND SUPPORT

---

For warranty information or technical support, please refer to the documentation provided with your purchase or contact the EverNice customer service directly through their official channels. Ensure you have your purchase details and product information available when contacting support.