



Manuals.plus /

› YITAHOME /

› YITAHOME High Glossy LED Coffee Table (Model AEYIHfm2WH) Instruction Manual

YITAHOME AEYIHfm2WH

YITAHOME High Glossy LED Coffee Table (Model AEYIHfm2WH) Instruction Manual

Comprehensive guide for assembly, operation, and maintenance.

INTRODUCTION

Thank you for choosing the YITAHOME High Glossy LED Coffee Table. This manual provides detailed instructions for the safe assembly, operation, and maintenance of your new coffee table. Please read this manual thoroughly before beginning assembly or use, and retain it for future reference.

This modern coffee table features a high-gloss finish, integrated RGB LED lighting with 16 colors and 4 modes, and ample storage including four drawers and an open display shelf. Its design is intended to enhance your living space with both functionality and aesthetic appeal.

SAFETY INFORMATION

Please observe the following safety precautions to prevent injury and damage to the product:

- Always assemble the product on a clean, soft surface to prevent scratches.
- Ensure all parts are securely fastened before use. Do not overtighten screws.
- Keep small parts and packaging materials away from children.
- Do not stand or sit on the coffee table.
- Do not exceed the maximum weight recommendation of 55 kg (110 lbs) for the tabletop.
- Handle the LED strip lights and remote control with care.
- Disconnect power to the LED lights before cleaning or maintenance.

PACKAGE CONTENTS

Before assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, please contact YITAHOME customer support.

- Coffee Table Components (Engineered Wood Panels)

- Fittings Set (Screws, dowels, cam locks, etc.)
- RGB LED Strip Light Kit with Remote Control
- Assembly Guide (This manual)



Image: An exploded view of the coffee table showing various panels and drawers, indicating the components included.

SETUP AND ASSEMBLY

Assembly is required for this coffee table. Please follow the steps carefully. It is recommended to have two people for assembly.

1. **Prepare the Area:** Clear a spacious, clean, and soft area (e.g., a carpeted floor) to prevent scratching the high-gloss finish during assembly.
2. **Identify Parts:** Lay out all wooden panels and hardware. Refer to the included assembly guide for part identification.
3. **Assemble the Base:** Begin by connecting the base panels using the provided screws and dowels. Ensure all

connections are snug but do not overtighten.

4. **Install Drawer Slides:** Attach the drawer slides to the main body of the table according to the instructions. Pay attention to the orientation of the slides.
5. **Construct Drawers:** Assemble the four drawers. Insert the bottom panels and secure the back panels.
6. **Insert Drawers:** Carefully slide the assembled drawers into their respective slots.
7. **Attach Top Panel:** Secure the top panel to the main structure.
8. **Install LED Strip Lights:**
 - Clean the surface where the LED strip will be applied to ensure good adhesion.
 - Peel off the adhesive backing from the LED strip.
 - Carefully press the LED strip into the designated channel or area under the open display shelf.
 - Connect the LED strip to the power adapter and controller.
 - Plug the power adapter into a suitable electrical outlet.
9. **Final Check:** Verify that all screws are tightened and the table is stable.



Image: The coffee table with its four drawers fully extended, illustrating the internal storage capacity and smooth drawer operation.

OPERATING INSTRUCTIONS (LED LIGHTS)

The YITAHOME coffee table features integrated RGB LED lighting controlled by a remote.

Remote Control Functions:

- **Power On/Off:** Press the **ON/OFF** button to turn the lights on or off.
- **Color Selection:** Use the color buttons to select from 16 static colors.
- **Brightness Adjustment:** Use the **Brightness Up (+)** and **Brightness Down (-)** buttons to adjust the intensity of the selected color.
- **Mode Selection:**
 - **Flash:** Rapidly cycles through colors.
 - **Strobe:** Flashes a single color.
 - **Fade:** Smoothly transitions between colors.
 - **Smooth:** Gradual change between colors.
- **Speed Adjustment:** For dynamic modes, use the **Speed Up** and **Speed Down** buttons to control the transition speed.

16 COLORS AND 4 MODES

3-Color or 7-Color Jump, Strobe and Gradual



Transition Style



Remote Control



Mode Selection



Brightness Adjustment



☀️ 25%

☀️ 50%

☀️ 75%

☀️ 100%



Image: A visual representation of the remote control and examples of the coffee table illuminated in different colors and brightness levels.

MAINTENANCE

Proper care will ensure the longevity and appearance of your YITAHOME coffee table.

- **Cleaning the Surface:** Wipe the high-gloss surface with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that can damage the finish. Dry immediately with a clean, soft cloth.
- **LED Lights:** The LED strip lights are designed for long-term use. If they become dusty, gently wipe them with a dry, soft cloth. Do not use liquid cleaners directly on the LED strip.
- **Drawer Maintenance:** Periodically check drawer slides for smooth operation. If needed, a small amount of silicone-based lubricant can be applied to the slides.
- **Hardware Check:** Every few months, check all screws and fasteners to ensure they remain tight. Retighten if necessary, but do not overtighten.
- **Avoid Direct Sunlight:** Prolonged exposure to direct sunlight can cause fading or discoloration of the finish.
- **Spill Management:** Immediately wipe up any spills to prevent water damage or staining.



Round Edge for Collision Prevention



Easy-to-clean High-gloss Finish



Smooth and Silent Slide



Extra Open Storage

Image: Detailed view highlighting the rounded edges for safety and the easy-to-clean high-gloss finish of the table.

TROUBLESHOOTING

If you encounter any issues with your coffee table, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
LED lights do not turn on.	Power adapter not plugged in. Remote control battery is dead. LED strip connection is loose.	Ensure the power adapter is securely plugged into both the wall outlet and the LED controller. Replace the battery in the remote control (typically CR2025 or CR2032). Check all connections between the LED strip, controller, and power adapter.
LED remote control is unresponsive.	Remote control battery is dead. Obstruction between remote and receiver.	Replace the remote control battery. Ensure there is a clear line of sight between the remote and the LED receiver.
Drawers are stiff or do not slide smoothly.	Drawer slides are misaligned. Accumulated dust or debris in slides.	Remove the drawer and re-align it carefully. Clean the drawer slides and apply a silicone-based lubricant if necessary.
Table feels wobbly.	Loose fasteners. Uneven floor.	Check and tighten all assembly screws. Place felt pads under the legs to level the table on uneven surfaces.

SPECIFICATIONS

Feature	Detail
Model Number	AEYIHfm2WH
Brand	YITAHOME
Material	Engineered Wood
Finish	High Gloss
Color	White
Product Dimensions (D x W x H)	55 cm x 90 cm x 41.1 cm (21.7" x 35.4" x 16.2")
Item Weight	28 kg (61.7 lbs)
Maximum Weight Recommendation (Tabletop)	55 kg (110 lbs)
Storage	4 Drawers, Open Display Shelf
LED Lighting	16 Colors, 4 Dynamic Modes (Flash, Strobe, Fade, Smooth)
Assembly Required	Yes

PRODUCT SIZE

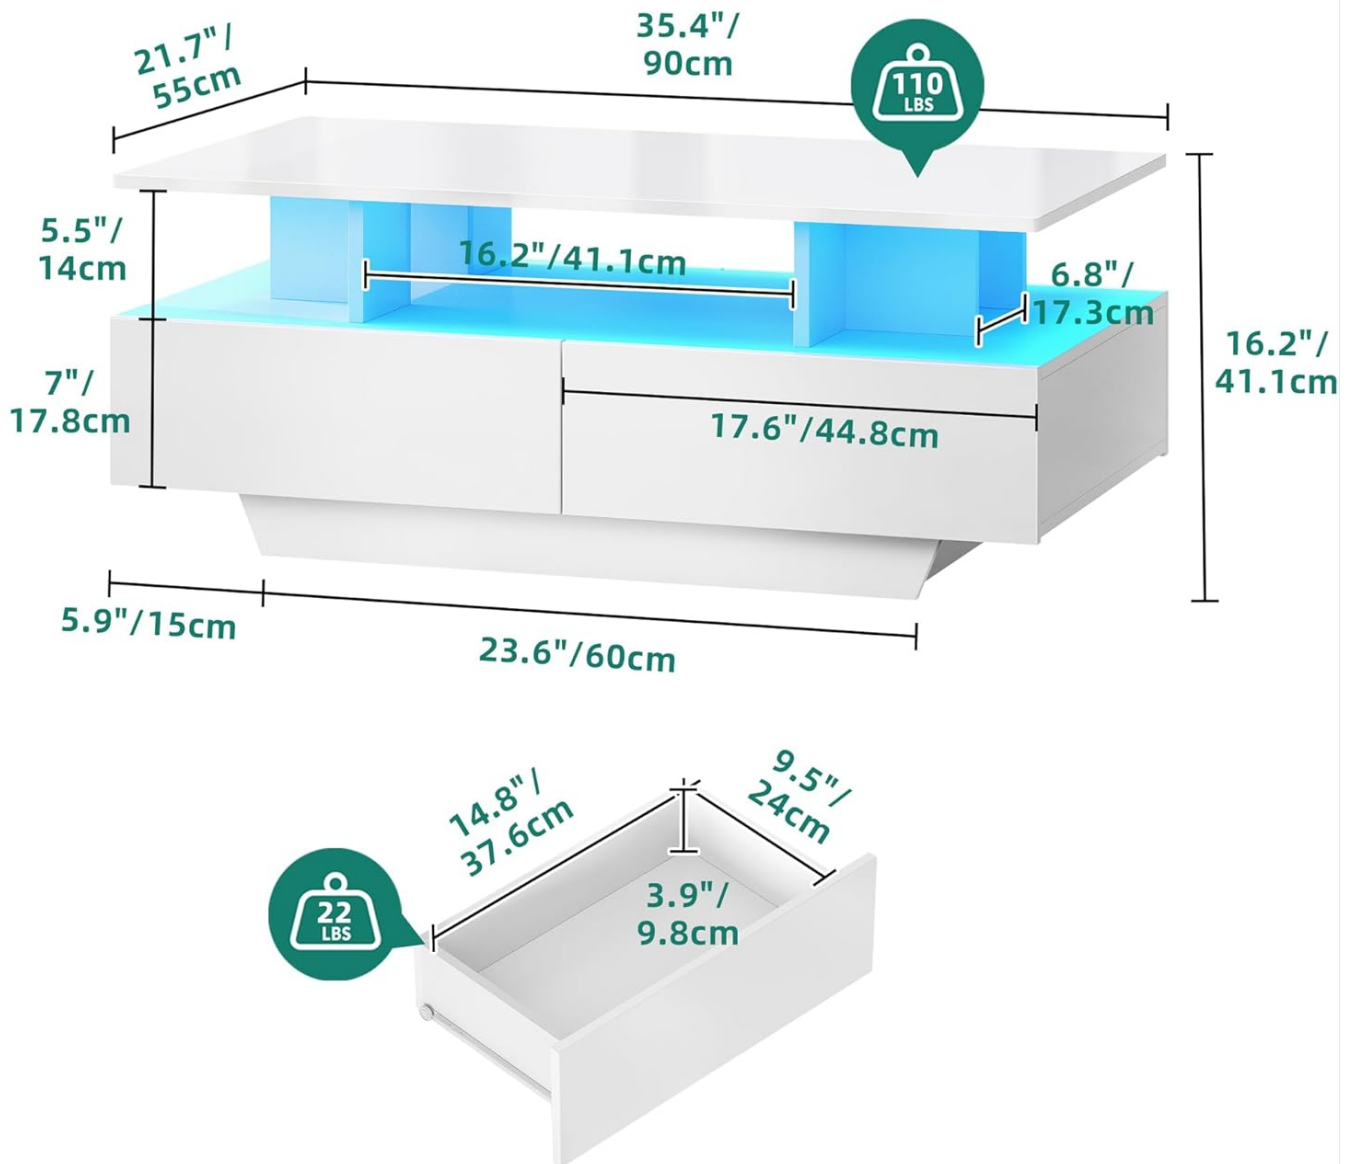


Image: A detailed diagram illustrating the dimensions of the coffee table, including length, width, height, and drawer measurements.

WARRANTY AND SUPPORT

YITAHOME products are designed for quality and durability. For specific warranty information, please refer to the documentation included with your purchase or visit the official YITAHOME website. If you have any questions, require assistance with assembly, or need to report missing/damaged parts, please contact YITAHOME customer support directly.

Contact information can typically be found on the YITAHOME website or on the packaging materials.