

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [SMETA](#) /

› [SMETA SWF-120COMBO 2.7 cu.ft Ventless Washer Dryer Combo Instruction Manual](#)

## SMETA SWF-120COMBO

# SMETA SWF-120COMBO 2.7 cu.ft Ventless Washer Dryer Combo Instruction Manual

Model: SWF-120COMBO | Brand: SMETA

## INTRODUCTION

This manual provides essential information for the safe and efficient operation of your SMETA SWF-120COMBO 2.7 cu.ft Ventless Washer Dryer Combo. This appliance is designed for compact living spaces such as apartments, RVs, dorms, homes, and campers, offering both washing and drying functionalities in a single unit.

Key features include a 2.7 cu.ft capacity, 120V operation, and a ventless drying system. The unit measures 23.4"W x 23"D x 31"H and weighs approximately 159.4 pounds. It features 16 program selections for various fabric types and flexible adjustments for wash settings.



Image: The SMETA 2-in-1 Washer and Dryer Combo, highlighting its space-saving design compared to separate units.

## IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the appliance to prevent injury or damage. Keep this manual for future reference.

- **Shipping Bolts:** Before initial use, it is critical to remove the four shipping bolts from the back of the

washing machine. Failure to do so will cause severe vibration and potential damage to the appliance during operation.

- **Load Capacity:** When drying clothes, do not exceed 13 pounds of laundry to ensure proper drying and prevent strain on the machine.
- **Electrical Safety:** Ensure the appliance is connected to a properly grounded 120V electrical outlet. Do not use extension cords.
- **Child Safety:** Keep children away from the appliance during operation. Utilize the child lock feature when available.
- **Flammable Materials:** Do not wash or dry items that have been soiled with flammable substances such as cooking oils, gasoline, or dry-cleaning solvents.

**Warning: Please remove 4 shipping bolts before use, otherwise the washer will shake violently!**

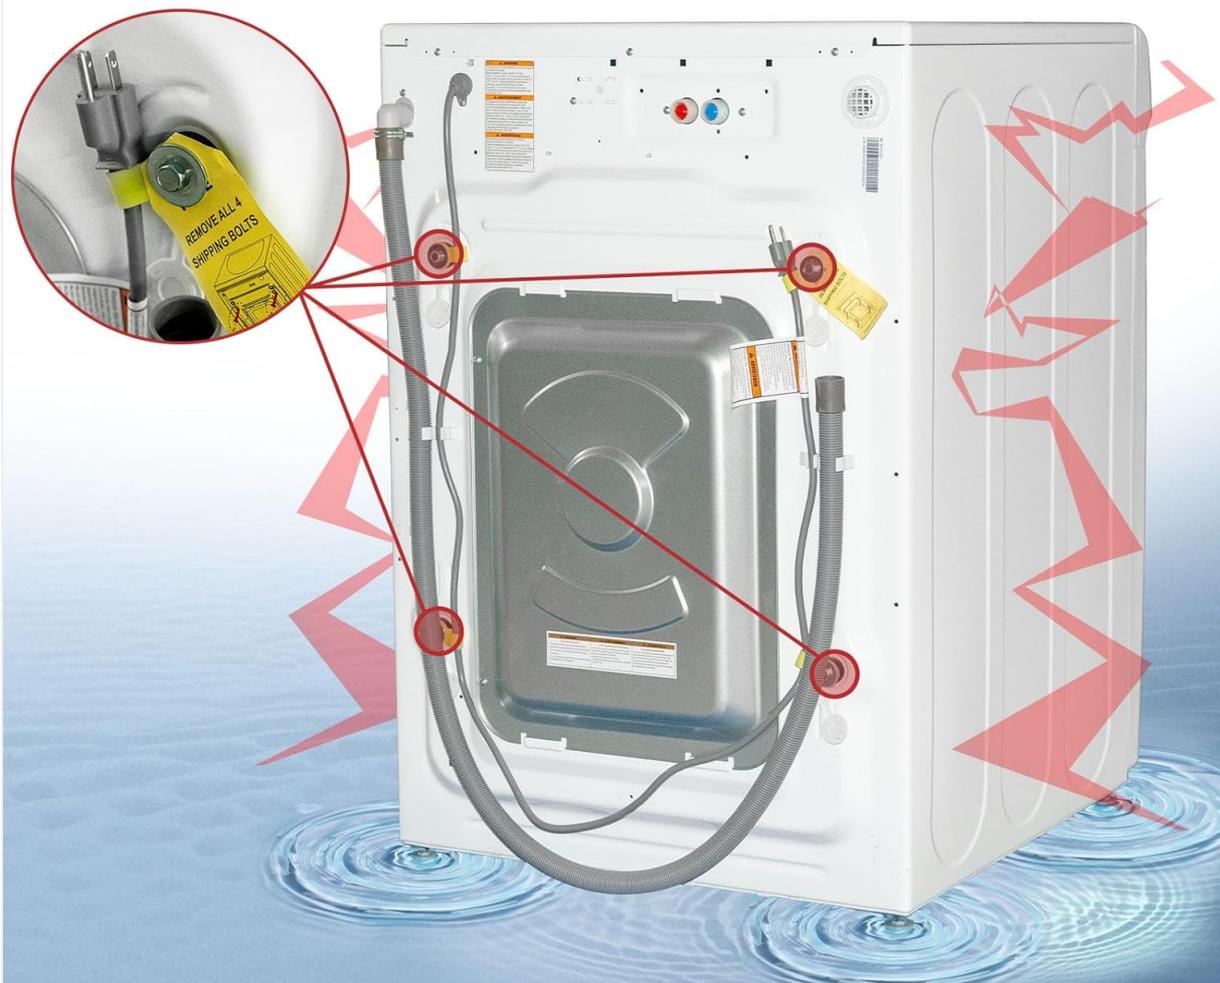


Image: A diagram illustrating the location of the four shipping bolts on the back of the washer, with a warning about violent shaking if not removed.

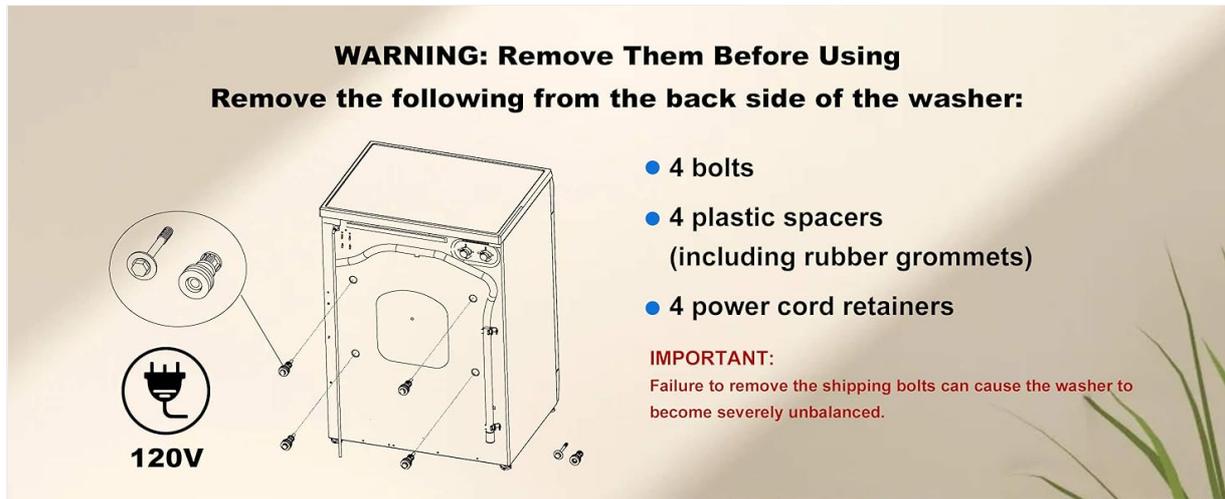


Image: A detailed diagram showing the removal of 4 bolts, 4 plastic spacers, and 4 power cord retainers from the back of the washing machine, emphasizing the importance of this step to prevent imbalance.

## SETUP AND INSTALLATION

### Unpacking and Initial Preparation:

1. Carefully remove all packaging materials.
2. **Remove Shipping Bolts:** Locate and remove the four shipping bolts, plastic spacers, and power cord retainers from the rear of the appliance. These are essential for safe transport but must be removed before operation. Refer to the safety section for visual guidance.
3. Place the appliance on a firm, level surface. Adjust the leveling feet if necessary to ensure stability and minimize vibration.

### Placement:

Due to its compact size (23.4"W x 23"D x 31"H), this ventless washer dryer combo can be installed in various locations, including under counters, in closets, or in dedicated laundry areas in apartments, RVs, and dorms. Ensure adequate clearance for door opening and ventilation.

## Compact Size & Greater Capacity



Image: The SMETA Washer Dryer Combo with key dimensions labeled: 33.5"H, 23.4"W, 25.2"D, and a capacity of 2.7 cu.ft or 27 lbs.

### Water and Electrical Connections:

- Connect the hot and cold water inlet hoses to the corresponding valves and to the appliance. Ensure connections are tight to prevent leaks.
- Connect the drain hose to a suitable drain pipe or utility sink.
- Plug the power cord into a grounded 120V electrical outlet.

### OPERATING YOUR APPLIANCE

#### Control Panel Overview:

The appliance features an intuitive control panel with a central knob for program selection and an LED display for settings and cycle status. Additional buttons allow for fine-tuning of wash and dry parameters.

# 17 Program

## Design for Different Fabrics



Image: Close-up of the SMETA Washer Dryer Combo's control panel, showing the program selection knob and LED display with various fabric types and settings.

### Loading Laundry:

- Open the front-load door.
- Load clothes loosely into the drum. Do not overload, especially for drying cycles (max 13 lbs for drying).
- Add detergent and fabric softener to the appropriate compartments in the dispenser drawer.
- Close the door securely.

### Selecting a Program:

1. Press the **On/Off** button to power on the appliance.
2. Turn the program selection knob to choose one of the 16 available programs (e.g., Normal/Cotton, Delicates, Wool, Baby Wear, Heavy Duty, etc.).
3. Use the **Time Save**, **Delay**, **Temp**, **Spin**, **Soil**, and **Dry** buttons to customize settings as needed.
4. For combined wash and dry cycles, ensure the desired dry setting (Auto Dry or Timed Dry) is selected.
5. Press the **Start/Pause** button to begin the cycle.

The "Add a garment" function allows you to pause the cycle and add forgotten items. The "Child Lock" feature can be activated to prevent accidental changes to settings.



Image: An illustration of the control panel highlighting flexible adjustment options for washing time, rinse number, spin speed, water temperature, and dry temperature.

## Official Product Video: How to Use SMETA Washer and Dryer Combo

Your browser does not support the video tag.

Video Description: This video demonstrates the basic steps for operating the SMETA Washer Dryer Combo, including powering on, selecting a program, and adjusting settings. It provides a visual guide to using the control panel and starting a wash/dry cycle.

## PROGRAMS AND CYCLES

Your appliance offers 16 specialized programs to cater to various fabric types and laundry needs. Select the appropriate program for optimal cleaning and care.

Program	Description
Normal/Cotton	Standard wash for everyday cotton items.
Perm Press	Designed to reduce wrinkles in permanent press fabrics.
Heavy Duty	For heavily soiled and durable items.
Bulky/Large	Suitable for large items like blankets and comforters.
Sports Wear	Optimized for athletic apparel.
Spin Only	Extracts excess water from clothes without washing.
Rinse & Spin	Adds an extra rinse and then spins.
Tub Clean	Self-cleaning cycle for the washer drum.
Quick Wash	For lightly soiled items needing a fast wash.
Delicates	Gentle cycle for delicate garments.
Wool	Specialized cycle for wool items.
Baby Wear	High-temperature cleaning for baby clothes.

Program	Description
Sanitary	Effectively eliminates bacteria with high heat.
Cold Wash	Washes with cold water to save energy.
Auto Dry	Automatically dries clothes to a preset dryness level.
Timed Dry	Allows manual selection of drying time.

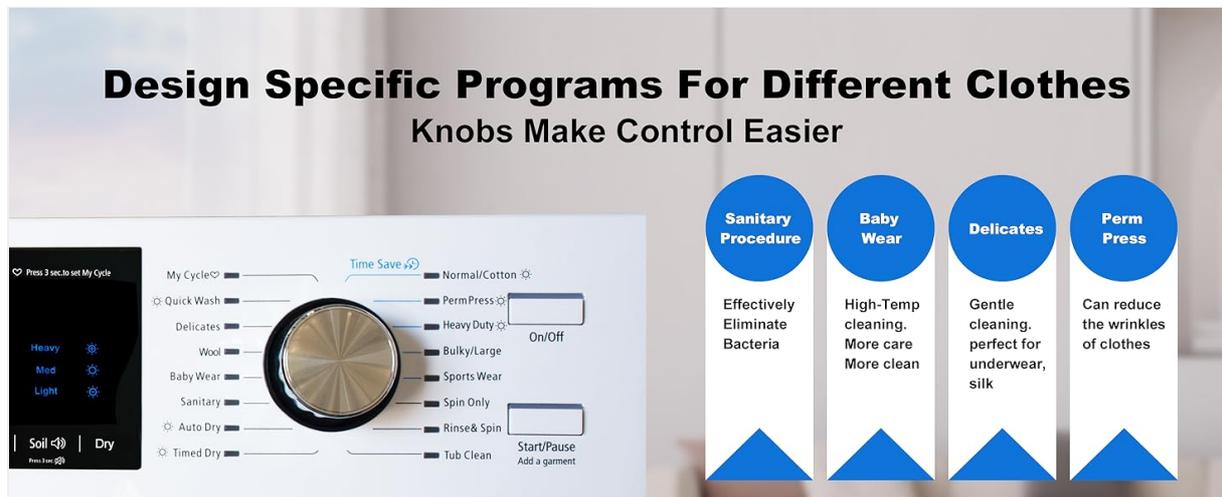


Image: The control panel illustrating specific programs such as Sanitary, Baby Wear, Delicates, and Perm Press, with descriptions of their functions.

## MAINTENANCE

### Cleaning the Lint Filter/Gasket:

Regularly inspect and clean the rubber gasket around the door opening. Lint and debris can accumulate here, especially after drying cycles. Wipe it clean with a damp cloth to prevent odors and ensure proper sealing.

### Tub Cleaning:

Utilize the "Tub Clean" cycle periodically to remove detergent residue and prevent mold or mildew buildup inside the drum. Follow the instructions in the appliance's full manual for specific recommendations on frequency and cleaning agents.

### Exterior Cleaning:

Wipe the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the finish.

## TROUBLESHOOTING

If you encounter issues with your appliance, please refer to the following common troubleshooting tips. For more detailed solutions, consult the comprehensive user manual or contact customer support.

- **Appliance Not Starting:** Ensure the power cord is securely plugged in, the door is fully closed, and the "On/Off" button has been pressed. Check if a circuit breaker has tripped.
- **Excessive Vibration:** Verify that all four shipping bolts have been removed. Ensure the appliance is level and on a stable surface.

- **Clothes Not Drying Completely:** Check that the load size does not exceed 13 pounds. Select an appropriate drying program (Auto Dry or Timed Dry) and ensure the lint filter/gasket is clean.
- **Water Leaks:** Inspect water inlet and drain hose connections for tightness. Check the door gasket for any obstructions or damage.

## SPECIFICATIONS

Feature	Detail
Brand	SMETA
Model Number	SWF-120COMBO
Capacity	2.7 Cubic Feet
Item Weight	159.4 pounds (72.45 Kilograms)
Product Dimensions (D x W x H)	25.2"D x 23.4"W x 33.5"H
Voltage	120 Volts
Maximum Rotational Speed	1400 RPM
Number of Washing Cycles	16
Number of Drying Cycles	16
Special Feature	Ventless Drying
Laundry Appliance Drum Material	Stainless Steel
Access Location	Front Load
Controls Type	Knob
Color	White

● **2-In-1**  
**Washer and Dryer Combo**  
**More space saving**



Image: A full front view of the SMETA SWF-120COMBO 2.7 cu.ft Ventless Washer Dryer Combo in white.



# 1400 RPM Spin Speed

Efficient and Cleaner  
Energy & Time Saving

**Stainless Steel Tube**



Image: An interior view of the stainless steel drum, emphasizing the 1400 RPM high spin speed for efficient washing and drying.

## Official Product Video: Washer and Dryer Combo Overview

Your browser does not support the video tag.

Video Description: This video provides a general overview of the Washer and Dryer Combo, showcasing its features and compact design.

## WARRANTY AND SUPPORT

### Warranty Information:

For information regarding product warranty, please refer to the documentation included with your purchase or contact the manufacturer directly. Extended protection plans may be available from third-party providers.

### Customer Support:

For any questions, technical assistance, or service requests, please contact SMETA Electric Appliances Co.,Ltd. The seller offers customer support and 30-day easy returns.

- **Seller:** SMETA Electric Appliances Co.,Ltd
- **Returns:** 30-day easy returns available.