

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Philips](#) /
- › [Philips Senseo Select Coffee Pod Machine CSA240/05 User Manual](#)

Philips CSA240/05

Philips Senseo Select Coffee Pod Machine CSA240/05 User Manual

Model: CSA240/05

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your Philips Senseo Select Coffee Pod Machine, model CSA240/05. Please read this manual thoroughly before first use and retain it for future reference.

2. SAFETY INSTRUCTIONS

Always observe basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Do not immerse the appliance, plug, or power cord in water or any other liquid.
- Keep the appliance out of reach of children.
- Do not operate the appliance if the plug, power cord, or the appliance itself is damaged.
- Place the appliance on a stable, flat, heat-resistant surface, away from hot gas or electric burners.
- Unplug the appliance before cleaning and when not in use.
- Do not open the appliance housing. Repairs should only be performed by authorized service personnel.

3. PRODUCT OVERVIEW

The Philips Senseo Select Coffee Pod Machine CSA240/05 is designed for convenient preparation of single-serve coffee. Key features include Intensity Plus for varied coffee strengths, a Memo Function to save preferred settings, and Crema Plus technology for a fine crema layer.



This image displays the Philips Senseo Select Coffee Pod Machine in Silk White, actively brewing two cups of coffee into glass mugs. The machine features a modern design with a white and wood-grain finish, and visible controls for coffee intensity and memo function.

Components:

- Water reservoir
- Pod holder (for 1 or 2 pods)
- Coffee spout
- Drip tray with grid
- Control panel (On/Off button, 1-cup button, 2-cup button, Intensity Plus slider, Memo button)

- Lid

4. SETUP (FIRST USE)

1. **Unpack:** Remove all packaging materials and stickers from the appliance.
2. **Rinse:** Rinse the water reservoir, pod holders, and drip tray with hot water and a mild detergent.
3. **Fill Water Reservoir:** Fill the water reservoir with fresh, cold tap water up to the MAX indication.
4. **First Rinse Cycle:**
 - Place a bowl under the coffee spout.
 - Do not place any coffee pods in the pod holder.
 - Close the lid and ensure it is locked.
 - Plug the appliance into a grounded wall socket.
 - Press the On/Off button. The 1-cup and 2-cup buttons will flash slowly.
 - Press the 2-cup button to start the rinse cycle. The machine will dispense hot water.
 - Repeat this process twice.
5. Your Senseo machine is now ready for use.

5. OPERATING INSTRUCTIONS

5.1 Making Coffee

1. **Fill Water Reservoir:** Fill the water reservoir with fresh, cold tap water.
2. **Insert Pod:** Open the lid and place one or two Senseo coffee pods into the appropriate pod holder. Ensure the pod is centered.
3. **Close Lid:** Close the lid firmly until it locks.
4. **Place Cup(s):** Place one or two cups under the coffee spout.
5. **Power On:** Press the On/Off button. The 1-cup and 2-cup buttons will flash slowly, indicating the machine is heating up. They will light up continuously when ready.
6. **Select Coffee:** Press the 1-cup button for one cup or the 2-cup button for two cups. The machine will start brewing.
7. **Enjoy:** Once brewing is complete, the machine will automatically switch off to save energy.

5.2 Intensity Plus Function

The Intensity Plus slider allows you to choose between different coffee strengths:

- **Classic:** For a standard, balanced coffee.
- **Intense:** For a stronger, richer coffee.
- **Espresso:** For a small, concentrated shot.

Simply move the slider to your desired intensity before pressing the 1-cup or 2-cup button.

5.3 Memo Function

The Memo Function allows you to save your preferred coffee volume for each intensity setting.

1. **Select Intensity:** Move the Intensity Plus slider to your desired setting (Classic, Intense, or

Espresso).

2. **Start Brewing:** Press and hold the 1-cup or 2-cup button (depending on whether you want to save a 1-cup or 2-cup setting).
3. **Release Button:** Release the button when the desired amount of coffee has been dispensed into your cup. The machine will beep twice to confirm the setting has been saved.
4. The next time you select that intensity and cup quantity, the machine will brew to your saved volume.

6. MAINTENANCE

6.1 Cleaning

- **Daily Cleaning:** After each use, rinse the pod holder, drip tray, and water reservoir under hot running water. These parts are also dishwasher-safe.
- **Exterior:** Wipe the exterior of the machine with a damp cloth. Do not use abrasive cleaning agents or solvents.
- **Coffee Spout:** Regularly check the coffee spout for any blockages and clean if necessary.

6.2 Descaling

Regular descaling is crucial for maintaining optimal performance and extending the lifespan of your Senseo machine. The CALC indicator light will illuminate when descaling is required.

1. **Prepare Descaling Solution:** Use a Senseo-specific descaling agent or a citric acid-based descaler. Follow the instructions on the descaling agent packaging for mixing with water.
2. **Perform Descaling Cycle:** Refer to the detailed descaling instructions provided in the full product manual or on the Philips support website for your specific model. This typically involves running several cycles with the descaling solution and then several rinse cycles with fresh water.
3. **Important:** Never use vinegar as a descaling agent, as it can damage your machine.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Machine does not turn on.	Not plugged in; power outage.	Check power connection; verify power supply.
Coffee is not hot enough.	Machine not preheated; cold cups.	Wait for buttons to stop flashing; preheat cups with hot water.
Coffee flow is slow or blocked.	Pod holder or spout blocked; machine needs descaling.	Clean pod holder and spout; perform descaling cycle.
Water leaks from machine.	Water reservoir not correctly placed; damaged seal.	Ensure reservoir is seated properly; contact customer support if seal is damaged.

8. SPECIFICATIONS

- **Model:** CSA240/05

- **Power:** 1450 Watts
- **Voltage:** 230 Volts
- **Water Tank Capacity:** 0.9 Liters
- **Product Dimensions:** 30.6 x 15 x 31 cm (D x W x H)
- **Weight:** 2 kg
- **Material:** Plastic (37% bio-based plastic)
- **Special Features:** Auto Shut-Off, Programmable, Removable Tank, Water Filter (optional)

9. WARRANTY AND SUPPORT

This Philips Senseo appliance comes with a standard manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including warranty period and coverage details.

For technical support, spare parts, or service, please visit the official Philips website or contact Philips customer service in your region. You may need your model number (CSA240/05) and proof of purchase when contacting support.

Online Support: www.philips.com/support