

## Sennheiser ACCENTUM

# Sennheiser ACCENTUM Wireless Noise-Cancelling Headphones User Manual

Model: ACCENTUM (700175)

Brand: Sennheiser

## 1. INTRODUCTION

---

The Sennheiser ACCENTUM Wireless Noise-Cancelling Headphones are engineered to deliver a superior audio experience with adaptive active noise cancellation. Designed for comfort during extended use, these over-ear headphones feature a lightweight build, soft cushions, and 42mm transducers. They offer seamless multipoint Bluetooth connectivity and intuitive touch controls, making them suitable for various activities such as music listening, gaming, and travel. The integrated microphones and advanced chip technology ensure clear communication, even in noisy environments, complemented by an impressive battery life for wireless audio enjoyment throughout the day.



Figure 1.1: Sennheiser ACCENTUM Wireless Noise-Cancelling Headphones (White variant).

## 2. PACKAGE CONTENTS

---

Please check that all items listed below are included in your package:

- Sennheiser ACCENTUM Wireless Over-Ear Headphones
- USB-C Charging Cable
- Carrying Pouch
- Quick Guide / Safety Guide (Instruction Manual)



Figure 2.1: Retail packaging for Sennheiser ACCENTUM Wireless Headphones.

### 3. PRODUCT OVERVIEW

Familiarize yourself with the physical components and controls of your ACCENTUM headphones.





Figure 3.1: Side view of the headphone, highlighting the control buttons and USB-C charging port.

## 3.1 Controls and Indicators

- **Power Button:** Located on the right earcup, used for powering on/off and Bluetooth pairing.
- **Volume Up/Down Buttons:** Adjusts audio volume.
- **Multi-function Button:** Controls playback, calls, and voice assistant.
- **ANC/Transparency Button:** Toggles between Active Noise Cancellation and Transparency Mode.
- **USB-C Port:** For charging the headphones.
- **LED Indicator:** Displays battery status, pairing status, and charging status.

## 4. SETUP

---

### 4.1 Charging the Headphones

Before first use, fully charge the headphones. A full charge takes approximately 3 hours and provides up to 50 hours of playback. A quick 10-minute charge can provide up to 5 hours of playback.

1. Connect the supplied USB-C cable to the USB-C port on the headphone and to a power source (e.g., computer USB port or USB wall adapter).
2. The LED indicator will show the charging status. It typically glows amber during charging and turns green when fully charged.

Your browser does not support the video tag.

Video 4.1: This video demonstrates the charging process and highlights the 50-hour battery life and quick charge feature of the Sennheiser ACCENTUM Wireless headphones.

### 4.2 Bluetooth Pairing

To connect your headphones to a Bluetooth device:

1. Ensure the headphones are powered off.
2. Press and hold the Power button for approximately 4 seconds until the LED indicator flashes blue and red, indicating pairing mode.
3. On your device (smartphone, laptop, etc.), enable Bluetooth and search for new devices.
4. Select "Sennheiser ACCENTUM" from the list of available devices.
5. Once connected, the LED indicator will flash blue.

The headphones support multipoint connectivity, allowing simultaneous connection to two Bluetooth devices. To connect a second device, repeat the pairing process. The headphones will intelligently switch between devices.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Power On/Off

- **Power On:** Press and hold the Power button for 2 seconds. The LED will flash blue.
- **Power Off:** Press and hold the Power button for 2 seconds. The LED will flash red and then turn off.

### 5.2 Active Noise Cancellation (ANC) and Transparency Mode

The ACCENTUM headphones feature Hybrid Active Noise Cancellation to minimize ambient noise and Transparency Mode to stay aware of your surroundings.

- Press the dedicated ANC/Transparency button once to toggle between ANC On, Transparency Mode



**Every day, any environment**



**Hybrid  
ANC**



**Transparency  
mode**

Figure 5.1: The headphones offer Hybrid ANC and Transparency Mode for adaptable listening in any environment.

### 5.3 Audio Playback

- **Play/Pause:** Press the Multi-function button once.
- **Next Track:** Press the Multi-function button twice.
- **Previous Track:** Press the Multi-function button three times.
- **Volume Up:** Press the Volume Up button.
- **Volume Down:** Press the Volume Down button.

### 5.4 Call Management

- **Answer/End Call:** Press the Multi-function button once.
- **Reject Call:** Press and hold the Multi-function button for 2 seconds.

### 5.5 Voice Assistant

- **Activate Voice Assistant:** Press the Multi-function button for 2 seconds.

## 6. MAINTENANCE

## 6.1 Cleaning

- Clean the headphones with a soft, dry cloth.
- Do not use cleaning agents or solvents.
- The ear pads can be gently wiped with a damp cloth and mild soap solution, then dried thoroughly.

## 6.2 Storage

- When not in use, store the headphones in the provided carrying pouch to protect them from dust and damage.
- Avoid storing in extreme temperatures or high humidity.



**Long-listening  
comfort**



**Ergonomic  
design**



**Folds  
flat**

Figure 6.1: The ergonomic and foldable design ensures long-listening comfort and easy storage.

## 7. TROUBLESHOOTING

If you encounter issues with your headphones, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Headphones do not power on.	Low battery.	Charge the headphones fully.
Cannot pair via Bluetooth.	Headphones not in pairing mode; device Bluetooth off; too many paired devices.	Ensure headphones are in pairing mode (flashing blue/red LED). Turn Bluetooth on your device. Forget previous pairings on your device and try again.
No sound or low volume.	Volume too low; headphones not connected; audio source issue.	Increase volume on headphones and connected device. Re-establish Bluetooth connection. Check audio source.
ANC not effective.	Ear pads not sealed properly; very high-frequency noise.	Adjust headphones for a snug fit. ANC is most effective against low-frequency ambient noise.

## 8. SPECIFICATIONS

<b>Model Name</b>	ACCENTUM
<b>Product Model Number</b>	700175
<b>Connectivity Technology</b>	Wireless (Bluetooth)
<b>Headphone Style</b>	Over-Ear
<b>Noise Control</b>	Hybrid Noise Cancelling
<b>Frequency Response</b>	22 KHz
<b>Sensitivity</b>	106 dB
<b>Charging Time</b>	3 Hours
<b>Battery Life</b>	Up to 50 hours
<b>Item Weight</b>	222 grams
<b>Material</b>	Plastic
<b>Water Resistance Level</b>	Non-waterproof
<b>Control Method</b>	Touch, Voice Control
<b>Included Components</b>	USB-C Cable, Instruction Manual

## 9. SAFETY INFORMATION

Please read the following safety information carefully to ensure safe and optimal use of your Sennheiser ACCENTUM headphones:

- Do not listen at high volume levels for long periods to prevent hearing damage.
- Do not use the headphones in situations where inability to hear ambient sounds could be dangerous (e.g., while driving, cycling, or walking in traffic).

- Keep the headphones and accessories out of reach of children and pets.
- Do not expose the headphones to water, moisture, or extreme temperatures.
- Only use accessories specified by Sennheiser.
- Do not attempt to open or repair the headphones yourself.

## **10. WARRANTY AND SUPPORT**

---

Sennheiser products are manufactured to the highest quality standards. In the unlikely event of a defect, your product is covered by Sennheiser's warranty policy. Please refer to the official Sennheiser website for detailed warranty terms and conditions specific to your region.

For technical support, FAQs, and further assistance, please visit the official Sennheiser support page or contact their customer service.

[Visit the Sennheiser Brand Store on Amazon](#)