



Manuals.plus /

› **Blaupunkt** /

› Blaupunkt BH41 Bluetooth Wireless Over-Ear Headphones User Manual

## Blaupunkt BH41

# Blaupunkt BH41 Bluetooth Wireless Over-Ear Headphones User Manual

Model: BH41

## INTRODUCTION

---

Thank you for choosing the Blaupunkt BH41 Bluetooth Wireless Over-Ear Headphones. This manual provides essential information for setting up, operating, and maintaining your headphones to ensure optimal performance and longevity. Please read this manual carefully before using the product.

## SAFETY INFORMATION

---

To prevent damage to your headphones or injury to yourself, please observe the following safety precautions:

- Do not expose the headphones to extreme temperatures, humidity, or corrosive environments.
- Avoid dropping or subjecting the headphones to strong impacts.
- Do not disassemble or attempt to repair the headphones yourself. This will void the warranty.
- Clean the headphones with a soft, dry cloth only. Do not use liquid cleaners.
- Listen at moderate volume levels to prevent hearing damage.
- Keep out of reach of children.

## PACKAGE CONTENTS

---

Please check that all items are present in your package:

- Blaupunkt BH41 Wireless Over-Ear Headphones
- Charging Cable (USB Type-C)
- 3.5mm Audio Cable
- User Manual (this document)

## PRODUCT OVERVIEW

Familiarize yourself with the components and controls of your Blaupunkt BH41 headphones.



**Image:** Front view of the Blaupunkt BH41 Wireless Over-Ear Headphones in Metallic Black. The headphones feature large earcups, a padded headband, and the Blaupunkt logo on the side of the earcup.

### Controls and Ports:

- **Power Button/Multi-function Button:** Used for power on/off, play/pause, answer/end calls, and activating voice assistant.
- **Volume Up Button:** Increases volume, long press for next track.
- **Volume Down Button:** Decreases volume, long press for previous track.
- **LED Indicator:** Displays power, charging, and Bluetooth status.
- **Microphone:** For hands-free calls.
- **USB Type-C Charging Port:** For charging the headphones.
- **3.5mm Audio Jack:** For wired connection.


## SETUP

---

### 1. Charging the Headphones

Before first use, fully charge your headphones.

1. Connect the USB Type-C charging cable to the charging port on the headphones.
2. Connect the other end of the cable to a USB power adapter (not included) or a computer's USB port.
3. The LED indicator will glow red during charging and turn off or change color (e.g., blue) when fully charged.
4. A full charge typically takes approximately 2-3 hours.

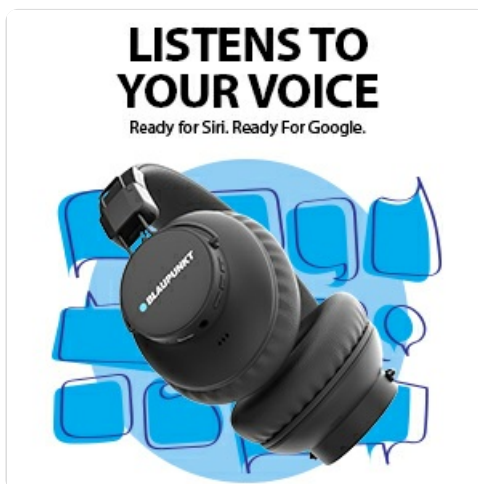

**Image:** A close-up of the Blaupunkt BH41 headphone earcup, highlighting its controls and indicating voice assistant compatibility. This image represents the integrated features and ease of use.

### 2. Bluetooth Pairing

Pair your headphones with your Bluetooth-enabled device.

1. Ensure the headphones are charged and turned off.
2. Press and hold the Power/Multi-function button for approximately 5-7 seconds until the LED indicator flashes blue and red alternately, indicating pairing mode.
3. On your device (smartphone, tablet, computer), enable Bluetooth and search for available devices.
4. Select "Blaupunkt BH41" from the list of found devices.
5. Once successfully paired, the LED indicator will flash blue slowly, and you may hear an audible confirmation.
6. The headphones will automatically reconnect to the last paired device when turned on, if Bluetooth is enabled on the device.

### 3. Wired Connection (Aux Mode)

You can use the headphones with a 3.5mm audio cable when Bluetooth is not available or to conserve battery.

1. Connect one end of the 3.5mm audio cable to the audio jack on the headphones.
2. Connect the other end to the 3.5mm audio output of your device.
3. The headphones will automatically switch to wired mode. Note that controls on the headphones may not function in wired mode, and audio will be controlled by your connected device.

## OPERATING INSTRUCTIONS

---

### Power On/Off

- **Power On:** Press and hold the Power/Multi-function button for approximately 3 seconds until the LED indicator flashes blue.
- **Power Off:** Press and hold the Power/Multi-function button for approximately 3 seconds until the LED indicator flashes red and then turns off.

## Music Playback

- **Play/Pause:** Short press the Power/Multi-function button.
- **Volume Up:** Short press the Volume Up (+) button.
- **Volume Down:** Short press the Volume Down (-) button.
- **Next Track:** Long press the Volume Up (+) button.
- **Previous Track:** Long press the Volume Down (-) button.

## Call Management

- **Answer/End Call:** Short press the Power/Multi-function button.
- **Reject Call:** Long press the Power/Multi-function button.
- **Redial Last Number:** Double press the Power/Multi-function button.

## Voice Assistant

- **Activate Voice Assistant (Siri/Google Assistant):** Triple press the Power/Multi-function button.

## MAINTENANCE

---

Proper care ensures the longevity of your headphones.

- **Cleaning:** Use a soft, dry, lint-free cloth to wipe the headphones. Do not use abrasive cleaners, alcohol, or chemical solvents.
- **Storage:** When not in use, store the headphones in a cool, dry place, away from direct sunlight and extreme temperatures. The foldable design allows for compact storage.
- **Battery Care:** To maintain battery health, charge the headphones regularly, even if not used frequently. Avoid fully discharging the battery for extended periods.

# FOLDABLE DESIGN



CERTIFIED GERMAN BRAND

**Image:** The Blaupunkt BH41 headphones shown in their folded configuration, demonstrating the compact and portable design for easy storage and transport.

## TROUBLESHOOTING

---

If you encounter issues with your headphones, refer to the following common problems and solutions:

Problem	Solution
Headphones do not power on.	Ensure the headphones are fully charged. Connect to a power source and try again.
Cannot pair with device.	<ul style="list-style-type: none"> <li>◦ Ensure headphones are in pairing mode (LED flashing blue/red).</li> <li>◦ Make sure Bluetooth is enabled on your device.</li> <li>◦ Move headphones closer to your device.</li> <li>◦ Forget "Blaupunkt BH41" from your device's Bluetooth list and try pairing again.</li> </ul>
No sound or low volume.	<ul style="list-style-type: none"> <li>◦ Check volume levels on both headphones and your connected device.</li> <li>◦ Ensure headphones are properly paired.</li> <li>◦ If using wired connection, ensure the 3.5mm cable is fully inserted.</li> </ul>
Poor sound quality.	<ul style="list-style-type: none"> <li>◦ Move closer to your device to avoid interference.</li> <li>◦ Ensure there are no obstructions between the headphones and your device.</li> <li>◦ Try playing different audio sources.</li> </ul>

## SPECIFICATIONS

---

Feature	Detail
Model	BH41
Connectivity Technology	Wireless (Bluetooth), Wired (3.5mm Aux)
Wireless Communication Technology	Bluetooth
Earpiece Shape	Over-the-Ear
Driver Size	40mm
Noise Control	Passive Noise Cancellation
Battery Life	Up to 24 Hours
Fast Charging	10 minutes charge = 3 hours playback
Built-in Microphone	Yes
Control Method	Buttons (Multi-function, Volume Up/Down)
Special Features	Adjustable Headband, Foldable Design
Material	Plastic
Item Weight	290 Grams
Product Dimensions	18.7 x 9.4 x 21 cm
Battery Type	Lithium Polymer



**Image:** The Blaupunkt BH41 headphones depicted alongside a feather, symbolizing their lightweight design for comfortable extended wear.

## WARRANTY AND SUPPORT

Blaupunkt products are designed and manufactured to the highest quality standards. For detailed warranty information, please refer to the warranty card included with your product or visit the official Blaupunkt website. For technical support or customer service, please contact your local Blaupunkt service center or authorized dealer. You can also visit the Blaupunkt Store on Amazon for more information and product updates.

