

EUREKA HD350

EUREKA HD350 Cordless Vacuum Cleaner User Manual

Model: HD350 | Brand: EUREKA

1. INTRODUCTION

Thank you for choosing the EUREKA HD350 Cordless Vacuum Cleaner. This manual provides essential information for the safe and efficient use of your new appliance. Please read it thoroughly before operation and retain it for future reference.

The EUREKA HD350 is a compact and lightweight cordless vacuum cleaner designed for versatile cleaning tasks. Weighing only 500g for the main unit, it offers 10,000Pa of strong suction power, effectively cleaning dust, food spills, and fine hair from various surfaces. Its 2-in-1 design allows for use as both a stick vacuum and a handheld unit, making it ideal for quick clean-ups in your home, car, or office.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Do not use the vacuum cleaner outdoors or on wet surfaces.
- Do not allow children to operate the vacuum cleaner. Close supervision is necessary when used near children.
- Do not pick up flammable or combustible materials, such as lighter fluid, gasoline, or kerosene, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Use only as described in this manual. Use only manufacturer's recommended attachments.

- If the suction port or metal filter becomes clogged, the motor may overheat. The built-in safety system will detect this and automatically stop operation to prevent damage. Clear any blockages before resuming use.
- Do not immerse the vacuum cleaner in water or other liquids.

3. PACKAGE CONTENTS

Carefully unpack your EUREKA HD350 and check that all items are present and in good condition. The package should include:

- Main Vacuum Unit
- Extension Wand (for stick mode)
- Floor Brush Head
- Brush Nozzle
- Crevice Nozzle
- USB Type-C Charging Cable
- Dedicated Storage Stand
- User Manual (this document)



Image: The EUREKA HD350 package contents, including the main unit, various nozzles, charging cable, and storage stand.

4. SETUP

The EUREKA HD350 can be used in two configurations: as a stick vacuum or as a handheld vacuum.

4.1. Assembling the Stick Vacuum

1. Insert the extension wand into the main vacuum unit until it clicks into place.

2. Attach the floor brush head to the other end of the extension wand until it clicks into place.

4.2. Assembling the Handheld Vacuum

For handheld use, simply attach the desired nozzle (brush nozzle or crevice nozzle) directly to the main vacuum unit until it clicks into place.



Image: Illustration showing the main unit, extension wand, and floor brush head for stick vacuum assembly, and the main unit with a nozzle for handheld use.

5. CHARGING THE DEVICE

The EUREKA HD350 features convenient USB Type-C charging.

1. Locate the Type-C charging port on the main vacuum unit.
2. Connect the provided USB Type-C charging cable to the vacuum cleaner and plug the other end into a compatible USB power source (e.g., wall adapter, car charger, power bank, laptop).
3. The LED screen will indicate the charging status.
4. A full charge typically takes 2 to 3 hours, providing up to 20 minutes of continuous use.

USB充電は便利で稼働も長時間

TYPE-C充電は、より便利。家、車内やオフィス、どこでも充電できます。2～3時間の充電で、最大連続20分使用できます。



ノートパソコン



モバイルバッテリー

Image: The EUREKA HD350 vacuum cleaner being charged via a USB Type-C cable plugged into a wall adapter, with additional images showing charging from a laptop and a mobile battery.

6. OPERATING INSTRUCTIONS

6.1. Power On/Off and Suction Modes

- To power on the vacuum cleaner, press the power button.
- The LED screen will display the current battery level and suction mode.
- Press the mode button to switch between standard and powerful suction modes.
- The screen also shows the estimated remaining usage time, helping you manage your cleaning tasks.
- To power off, press the power button again.



Image: Close-up of the EUREKA HD350's LED screen displaying battery level, suction mode, and remaining usage time.

6.2. Using Attachments for Various Surfaces

- **Floor Brush Head:** Use with the extension wand for general floor cleaning. Its design allows for effective cleaning under furniture.
- **Brush Nozzle:** Ideal for cleaning delicate surfaces, upholstery, and removing pet hair from sofas or car seats.
- **Crevice Nozzle:** Perfect for reaching tight spaces, corners, car interiors, and between keyboard keys.

軽量&コードレス設計

スティック状態でわずか0.8KG、且つコードレスなので持ち運びが
しやすく、高齢者や女性でも片手で簡単に操作できるため、肩や腕
への負担を最小限に抑えることができます。



Image: A person using the EUREKA HD350 in stick vacuum mode to clean a floor, demonstrating its lightweight design and suction power.

一台二役、隅々まできれいに

1台2役で、スティックとしてもハンディとしても使える。さまざまな付属のブラシヘッドを使用して、床だけではなく、ソファや車の隅々までキレイにします。



床



ソファ



デスク

Image: The EUREKA HD350's floor brush head cleaning dust and debris from under a wooden bed frame.

見て分かるスクリーンで安心使用

スクリーンを見れば吸引モードと電池残量が分かり、使用中も一層安心。また、吸引力は標準と強力二つのレベルが選択できます。



Image: Two separate images showing the EUREKA HD350 in handheld mode, one cleaning a sofa cushion and the other cleaning a desk surface.

6.3. Suction Demonstration Video

Your browser does not support the video tag.

Video: A short demonstration of the EUREKA HD350's suction power, picking up a small screw from a concrete surface.

7. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

7.1. Emptying the Dust Box

1. Ensure the vacuum cleaner is turned off.
2. Hold the main unit over a trash bin.
3. Press the one-push release button on the dust box to open it and empty the contents.



Image: A hand holding the EUREKA HD350 main unit over a trash bin, demonstrating the one-push dust disposal mechanism.

7.2. Washing the Dust Box and Filter

Both the dust box and the HEPA filter are washable for thorough cleaning.

1. After emptying the dust box, detach it from the main unit.
2. Remove the HEPA filter from the dust box.
3. Rinse the dust box and filter under running water until clean.
4. Allow both parts to air dry completely before reassembling and reattaching to the vacuum cleaner. Do not use the vacuum cleaner with wet components.

お手入れ簡単

ワンタッチゴミ捨てで、操作らくちん。ダストボックス、フィルター共水洗いOK。クリーナーや付属品を収納できる専用スタンドも付いています。メンテナンスや収納は簡単。



ゴミ捨て



水洗い



水洗い



収納

Image: A collage of four images showing the maintenance process: emptying the dust box, rinsing the dust box with water, rinsing the filter with water, and the vacuum cleaner stored on its dedicated stand.

8. STORAGE

The EUREKA HD350 comes with a dedicated storage stand for convenient and tidy storage of the cleaner and its accessories.

- After cleaning and ensuring all parts are dry, place the main vacuum unit onto the storage stand.
- The stand is designed to hold the vacuum upright and keep accessories organized.



Image: The EUREKA HD350 vacuum cleaner neatly placed on its white dedicated storage stand on a tabletop.

9. TROUBLESHOOTING

If you encounter issues with your EUREKA HD350, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is depleted.	Charge the vacuum cleaner fully.
Low suction power.	Dust box is full.	Empty the dust box.
Low suction power.	Filter is clogged.	Clean or replace the HEPA filter. Ensure it is completely dry before reinserting.
Low suction power.	Nozzle or extension wand is blocked.	Remove any blockages from the nozzle, extension wand, or suction inlet.
Vacuum stops unexpectedly.	Motor overheating due to blockage.	Check for and clear any blockages in the suction port or metal filter. Allow the unit to cool down before restarting.

10. SPECIFICATIONS

Feature	Detail
Brand	EUREKA
Model Number	HD350
Power Source	Battery Powered
Cordless	Yes
Suction Power	10,000 Pa
Main Unit Weight	500g (approx. 1.1 lbs)
Wattage	120 W
Voltage	3.7 Volts
Charging Time	2-3 hours
Max Runtime	Up to 20 minutes
Filter Type	HEPA Filter
Product Dimensions (L x W x H)	43.1 x 11.2 x 20.2 cm (17 x 4.4 x 8 inches)
Recommended Use	Interior (Home, Car, Office)
UPC	810040947254
ASIN	B0CGRFCHMW

11. WARRANTY AND SUPPORT

EUREKA is committed to providing high-quality products and excellent customer service.

- **1-Year Warranty:** Your EUREKA HD350 is covered by a 1-year warranty for free repair and replacement during the warranty period.
- **Professional Support:** Access to professional staff for any product-related inquiries or assistance.
- **30-Day Returns:** Enjoy a 30-day return or new product exchange policy.
- **Genuine Accessories:** Ensure optimal performance and longevity by using only genuine EUREKA accessories.

For further assistance, please visit the official EUREKA store or contact customer support.

eureka 公式ストア

ユーリカ公式ストアなら購入後も安心



1年間保証期間内
無償修理 & 交換



専門スタッフによる
サポート



純正アクセサリ
ーの販売



30日以内の返品や
新品交換対応

Image: An illustration representing EUREKA customer service, highlighting support, warranty, and genuine accessories.