Manuals+

Q & A | Deep Search | Upload

Y02

Y02 Wireless Arcade Stick User Manual

Model: Y02 | Brand: Generic

INTRODUCTION

Thank you for purchasing the Y02 Wireless Arcade Stick. This manual provides detailed instructions on how to set up, operate, and maintain your arcade stick. Please read this manual thoroughly before use to ensure optimal performance and longevity of the product.

PRODUCT OVERVIEW

Key Features

- Multi-platform compatibility: Supports PS4, Switch, PC, TV, Android, and iOS devices.
- Three connection modes: Wired, Bluetooth wireless, and 2.4G wireless.
- Integrated TURBO function with adjustable speeds.
- · Macro programming capability.
- Ergonomic design for comfortable gameplay.
- Includes a removable mobile phone holder.

Components



Figure 1: Front view of the Y02 Wireless Arcade Stick, showcasing the joystick, action buttons, and control buttons (SELECT, START, TURBO, HOME).



SETUP AND CONNECTION

The Y02 Arcade Stick supports three primary connection methods: Wired, Bluetooth Wireless, and 2.4G Wireless. Choose the method most suitable for your device.



Figure 3: Visual representation of the three available connection modes for the Y02 Arcade Stick.

1. Wired Connection

- 1. Connect one end of the USB cable to the Y02 Arcade Stick.
- 2. Connect the other end of the USB cable to an available USB port on your PC, console (PS4, Switch in docked mode), or TV box.
- 3. The device should automatically recognize the arcade stick.

2. Bluetooth Wireless Connection (for Android, iOS, Switch, PS4)

- 1. Ensure the Y02 Arcade Stick is powered on.
- 2. On your device (phone, tablet, Switch, PS4), navigate to the Bluetooth settings.
- 3. Search for new devices. The arcade stick should appear as "Y02" or similar.
- 4. Select the arcade stick to pair. Once paired, the indicator light on the stick will confirm connection.

3. 2.4G Wireless Connection (for PC, TV Box)

1. Insert the 2.4G USB receiver (if included) into an available USB port on your PC or TV box.

- 2. Ensure the Y02 Arcade Stick is powered on and in 2.4G mode (refer to specific mode switch if available, otherwise it might auto-detect).
- 3. The connection should be established automatically.

OPERATING INSTRUCTIONS

Basic Controls

- Joystick: Directional control for movement and menu navigation.
- Action Buttons (A, B, X, Y, R, L, R2, L2, M1, M2):Perform in-game actions such as attacks, jumps, and special
 moves.
- **SELECT/BACK Button:** Typically used for selecting options or going back in menus.
- START/MENU Button: Used to pause games, open in-game menus, or confirm selections.
- HOME Button: Returns to the system's home screen or main menu.

TURBO Function

The TURBO function allows for continuous rapid input of a button press, useful for certain game mechanics.



Figure 4: Illustration of the TURBO function and its three adjustable speed settings.

- 1. **To activate TURBO:** Press and hold the desired action button, then press the **TURBO** button once. The button will now continuously send input.
- To adjust TURBO speed: While holding the TURBO button, move the joystick UP for faster speed or DOWN for slower speed. There are typically three speeds: Low (approx. 8 times/sec), Mid (approx. 15 times/sec), and High (approx. 25 times/sec).
- 3. **To deactivate TURBO:** Press and hold the action button that has TURBO enabled, then press the **TURBO** button again.

Macro Programming

The Y02 Arcade Stick supports macro programming, allowing you to record a sequence of button presses and assign them to a single button (e.g., M1 or M2).

(Specific instructions for macro programming are not detailed in the provided product information. Please refer to the manufacturer's official website or contact support for detailed steps if needed.)

COMPATIBILITY

The Y02 Wireless Arcade Stick is designed for broad compatibility across various gaming platforms.



Figure 5: The Y02 Arcade Stick's wide range of compatible platforms.

- Consoles: PlayStation 4 (PS4), Nintendo Switch.
- Computers: PC (Windows operating systems).
- Mobile Devices: Android phones and tablets, iOS (MFI certified) phones and tablets.
- Other: TV Set-top boxes.

MAINTENANCE

- Keep the arcade stick clean by wiping it with a soft, dry cloth.
- Avoid exposing the device to extreme temperatures, direct sunlight, or high humidity.
- Do not use abrasive cleaners or solvents, as they may damage the surface.
- Store the arcade stick in a cool, dry place when not in use.
- Avoid dropping or subjecting the device to strong impacts.

TROUBLESHOOTING

Common Issues and Solutions

Problem	Possible Cause	Solution
Arcade stick does not power on.	Low battery or no power.	Ensure the device is charged or connected via USB.
Cannot connect wirelessly.	Incorrect pairing mode, interference, or out of range.	Ensure correct pairing procedure is followed. Move closer to the device. Check for other wireless devices causing interference.
Buttons or joystick unresponsive.	Connection issue or software glitch.	Reconnect the arcade stick. Restart the game or device. Check for firmware updates if available.
TURBO function not working.	Incorrect activation.	Ensure you are pressing the desired action button and then the TURBO button correctly.

If you encounter issues not listed here, please refer to the manufacturer's support resources or contact customer service.

SPECIFICATIONS

• Model: Y02

• Connectivity: Wired (USB), Bluetooth Wireless, 2.4G Wireless

• Compatibility: PS4, Switch, PC, TV Box, Android, iOS (MFI)

• Features: TURBO function, Macro programming, Removable mobile phone holder

• ASIN: B0CGRKSH2L

• Date First Available: August 7, 2024

SAFETY INFORMATION AND COMPLIANCE



Figure 6: Safety warnings and compliance markings for the product.

- Warning: Not for children under 3 years due to small parts that may pose a choking hazard.
- This product complies with CE, UKCA, and RoHS directives.
- · Manufactured in China.
- Dispose of electronic waste responsibly. Do not dispose of with household waste.

WARRANTY AND SUPPORT

Specific warranty information is not provided in the product details. Please retain your proof of purchase for any warranty claims.

For technical support, troubleshooting assistance, or further inquiries, please contact the seller or refer to the official product support channels provided at the point of purchase.

© 2024 Generic. All rights reserved.



<u>User Manual for Y02 Bluetooth Headphones</u>

This user manual provides detailed information on the Y02 Bluetooth headphones, including product parameters, pairing and connection instructions, and FCC compliance information.

Y02



Y02 ANC Foldable Bluetooth Headphones: User Manual & Specifications

Discover the Y02 Active Noise Canceling Foldable Bluetooth Headphones. This user manual provides comprehensive details on product features, technical specifications, Bluetooth pairing, charging, key functions, and FCC compliance.

User Manual for Anti-Lost Smart GPS Tracker / Key Finder with Bluetooth 5.0 Y02



User Manual: Anti-Lost Smart GPS Tracker Y02 with Bluetooth 5.0

User manual for the Y02 Anti-Lost Smart GPS Tracker and Key Finder with Bluetooth 5.0. Details specifications and how to use the iSearching app for pairing, tracking, and device control.



TF-Y02 Transformers User Manual and FCC Compliance

Official user manual and FCC compliance information for the TF-Y02 Transformers electronic device, manufactured by Shenzhen Qishun Innovation Technology Development Co., LTD.



Convector Heater CH-Y02 User Instructions and Safety Guide

Detailed user instructions, safety guidelines, and technical specifications for the Convector Heater Model CH-Y02. Learn how to assemble, operate, clean, and store your heater safely.