

DREAMIZER QP37005

DREAMIZER 16-inch Hubcaps Wheel Covers

Model: QP37005 - Installation and Care Guide

For optimal performance and safety, please read this manual thoroughly before installation.

1. INTRODUCTION

Thank you for choosing DREAMIZER 16-inch Hubcaps Wheel Covers. These hubcaps are designed to enhance the appearance of your vehicle while providing protection to your steel wheels. Made from high-quality PP material, they offer durability and resistance to various weather conditions. This guide will walk you through the proper installation and maintenance procedures.

2. SAFETY INFORMATION

- Always ensure your vehicle is parked on a level surface with the parking brake engaged before attempting installation.
- Wear appropriate safety gear, such as gloves, to protect your hands during installation.
- Do not force the hubcaps into place if they do not fit correctly. Refer to the compatibility section.
- Regularly check the hubcaps for secure attachment to prevent detachment during driving.

3. PACKAGE CONTENTS

Your DREAMIZER 16-inch Hubcaps Wheel Covers package should contain the following items:

- 4 x 16-inch Hubcaps Wheel Covers
- 4 x Retention Rings (pre-installed or separate)
- Instruction Manual (this document)

4. COMPATIBILITY

These hubcaps are designed for 16-inch iron hubs only. They are **NOT** compatible with aluminum alloy hubs.

Please verify your tire/wheel size before installation. The size is typically indicated on your tire sidewall (e.g., R16 for 16-inch rims).



Image: How to determine your hubcap size from tire markings.



Image: Examples of compatible iron hubs and incompatible aluminum alloy hubs.

5. INSTALLATION INSTRUCTIONS

Follow these steps for proper installation of your DREAMIZER Hubcaps:

1. Prepare the Hubcap:

If the retention rings are not pre-installed, insert the metal retention ring into the back of the hubcap. Ensure the notched part of the ring aligns with the valve stem opening on the hubcap. The ring should sit securely in the tabs on the back of the hubcap.

2. Remove Existing Wheel Cover (if applicable):

If your wheel has an existing hubcap, carefully remove it. You may need a flathead screwdriver or a hubcap removal tool to gently pry it off.

3. Align the Hubcap:

Locate the valve stem on your wheel. Align the valve stem opening on the hubcap with the valve stem on your wheel. This ensures correct positioning.

4. Snap into Place:

Starting from the valve stem side, firmly press the hubcap onto the wheel. Work your way around the hubcap, applying even pressure until all clips snap securely into place. You should hear a distinct 'snap'

sound as each clip engages.

5. Verify Secure Fit:

Once installed, gently pull on the edges of the hubcap to ensure it is firmly attached and does not wobble. If it feels loose, re-adjust the retention ring to a tighter setting (if applicable, some rings have multiple slots for tension adjustment) and re-install.



Image: Detailed installation steps.

Video: Visual guide on how to install and remove hubcaps.

Video: General wheel cover installation process.

6. MAINTENANCE

To keep your DREAMIZER Hubcaps looking their best and ensure longevity:

- Clean regularly with mild soap and water. Avoid harsh chemicals or abrasive cleaners that could damage the finish.
- Periodically check the hubcaps for any signs of loosening or damage. Re-secure or replace as needed.
- The high-quality PP material is designed for durability and high temperature resistance, ensuring the finish does not fall off easily.

7. TROUBLESHOOTING

• Hubcap feels loose after installation:

Ensure the retention ring is correctly seated in all tabs on the back of the hubcap. If your retention ring has multiple slots, try moving the ends of the ring into a deeper slot to increase tension. Re-install the hubcap, applying firm, even pressure until all clips snap into place.

• Hubcap does not fit:

Double-check your wheel size to ensure it is 16 inches. Confirm that your wheels are iron hubs, not aluminum alloy. These hubcaps are specifically designed for 16-inch iron wheels.

• Difficulty snapping into place:

Ensure the hubcap is correctly aligned with the valve stem. Apply firm, even pressure around the perimeter, starting from the valve stem, to engage all clips. Avoid hitting the hubcap with excessive force, which could cause damage.

8. SPECIFICATIONS

Feature	Detail
Brand	DREAMIZER
Size	16 inches
Color	Black (14 Spokes)
Installation Type	Snap-On
Material	Polypropylene (PP)
Model Number	QP37005
Item Weight	7.04 pounds (for the set of 4)
Number of Items	4

9. WARRANTY AND SUPPORT

DREAMIZER products are manufactured to high-quality standards. For any warranty claims, product support, or inquiries, please refer to your purchase documentation or contact the seller directly. Keep your proof of purchase for warranty purposes.