

Akitas U10

Akitas U10 3-in-1 Cordless Vacuum Cleaner

USER MANUAL

Model: U10 | Brand: Akitas

Important Safety Information

Please read all instructions carefully before using the Akitas U10 Cordless Vacuum Cleaner. Retain this manual for future reference.

- This appliance is for indoor household use only. Do not use outdoors or on wet surfaces.
- Do not allow children to operate the vacuum cleaner. Close supervision is necessary when used near children.
- Do not pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with a damaged cord or plug. If the appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Keep cord away from heated surfaces.
- Unplug from outlet when not in use and before servicing.
- Exercise extra care when cleaning on stairs.
- Do not use without dust cup and/or filters in place.
- Battery safety: The Akitas U10 uses a 22.2V Li-ion battery. Do not expose the battery to high temperatures or direct sunlight. Do not attempt to disassemble or modify the battery pack. Use only the charger specified by the manufacturer.

Product Overview and Components

The Akitas U10 is a versatile 3-in-1 cordless vacuum cleaner designed for efficient cleaning of various surfaces. It can be used as an upright stick vacuum, a compact handheld vacuum, or with specialized attachments.



Figure 1: Overview of the Akitas U10 in its various configurations, including the main stick vacuum, detachable handheld unit, and accessory tools.

Key Components:

- **Main Unit:** Contains the motor, dustbin, and battery.
- **Extension Tube:** Connects the main unit to the floor head for upright use.
- **Motorized Floor Head:** Equipped with an anti-tangle roller and LED headlights for effective cleaning on various floor types.
- **2-in-1 Crevice Tool:** A versatile attachment for cleaning tight spaces, corners, and upholstery.
- **Charging Base:** For convenient storage and automatic recharging of the vacuum.

Auto Recharge Station

Auto Recharge - Leave the stickvac on the charging base after each use, it will automatically recharge, and stop when fully charged.



Figure 2: Detailed view of the control buttons on the Akitas U10, including the main power switch, fold button for compact storage, and switches for handheld mode operation.

Setup and Initial Use

1. Assembly:

1. Unpack all components from the packaging.

2. Attach the extension tube to the main unit by aligning the connectors and pushing until it clicks into place.
3. Connect the motorized floor head to the other end of the extension tube, ensuring a secure connection.
4. For handheld use, detach the main unit from the extension tube and attach desired accessories directly.

2. Initial Charging:

Before first use, fully charge the vacuum cleaner. The Akitas U10 features an auto-recharge station.

1. Place the vacuum cleaner onto the charging base. Ensure the contacts align correctly.
2. Connect the charging base to a power outlet.
3. The charging indicator lights will illuminate, indicating that charging has begun.
4. Allow approximately 4-5 hours for a full charge. The vacuum will automatically stop charging when the battery is full.

Akitas

MODEL NO: U10

STICKVAC

Cordless convenience to give you the freedom to clean your home quickly and easily.



FOLDABLE HANDLE

For convenient & compact storage.



CHARGING STATION

Convenient charging stand & accessory storage





Figure 3: The Akitas U10 docked on its charging station, illustrating the auto-recharge feature.

Operating Instructions

1. Powering On/Off:

- To turn on the vacuum, press the "Machine Switch" button located on the handle (refer to Figure 2).
- Press the button again to turn off the vacuum.

2. Switching Modes (Upright/Handheld):

- **Upright Mode:** Use the vacuum fully assembled with the extension tube and motorized floor head for general floor cleaning.
- **Handheld Mode:** Press the "Handheld Mode Switch Button" (refer to Figure 2) to detach the main unit. This allows for portable cleaning.

Suitable for Various Situations

2-in-1 Crevice Tool - Use it to clean your car, sofa, and difficult to reach areas such as staircase corners.



Figure 4: The Akitas U10 in handheld configuration, demonstrating its use for cleaning car interiors, sofa crevices, and staircase corners with the 2-in-1 crevice tool.

3. Using Attachments:

- The 2-in-1 crevice tool can be attached directly to the handheld unit for cleaning narrow gaps, upholstery, and delicate surfaces.

4. Suction Modes:

The Akitas U10 offers two speed options for varying cleaning needs.

- **Standard Mode:** Suitable for everyday cleaning and hard floors.
- **Turbo Mode:** Provides extra suction power for deep cleaning carpets, pet hair, and stubborn debris.

Powerful Suction

Turbo Mode - Extra suction power for use on cars, pets, floors and carpets, picking up pet hairs, cat litters, and etc.



Figure 5: The Akitas U10 operating on a carpet, highlighting its powerful suction capability and the illuminated LED headlights on the floor head.

5. Storage:

The Akitas U10 features a foldable design for convenient storage.

- Press the "Fold Button" (refer to Figure 2) to fold the handle down from the upright position. This allows for compact storage in closets or smaller spaces.
- The vacuum is also freestanding, allowing it to stand upright on its own for temporary storage during cleaning breaks.

Foldable Design

Storage - Fold down from upright position, so you can put it away in your closet easily.



Figure 6: A user demonstrating the foldable design of the Akitas U10, allowing the handle to collapse for compact storage.

Maintenance

Regular maintenance ensures optimal performance and extends the lifespan of your Akitas U10 vacuum cleaner.

1. Emptying the Dustbin:

- The Akitas U10 features a large 0.8L dustbin. Empty the dustbin regularly, ideally after each use or when the MAX fill line is reached.
- To empty, detach the dustbin from the main unit. Open the dustbin lid and dispose of collected debris.

2. Cleaning Filters:

The vacuum uses a HEPA filter system. Filters should be cleaned regularly to maintain suction power.

- Remove the filter assembly from the dustbin.
- Tap the filters gently over a trash can to remove loose dust.
- The filters are washable. Rinse them under cold running water until the water runs clear.
- Allow filters to air dry completely for at least 24 hours before reinserting them into the vacuum. Do not use a dryer or other heating device.

3. Cleaning the Brush Roller:

The motorized floor head features an anti-tangle roller designed to minimize hair wrapping.

- Periodically check the brush roller for tangled hair or debris.
- To access the roller, unlock the brush bar cover on the floor head.
- Remove any tangled hair or fibers using scissors if necessary.
- Reinsert the brush roller and secure the cover.

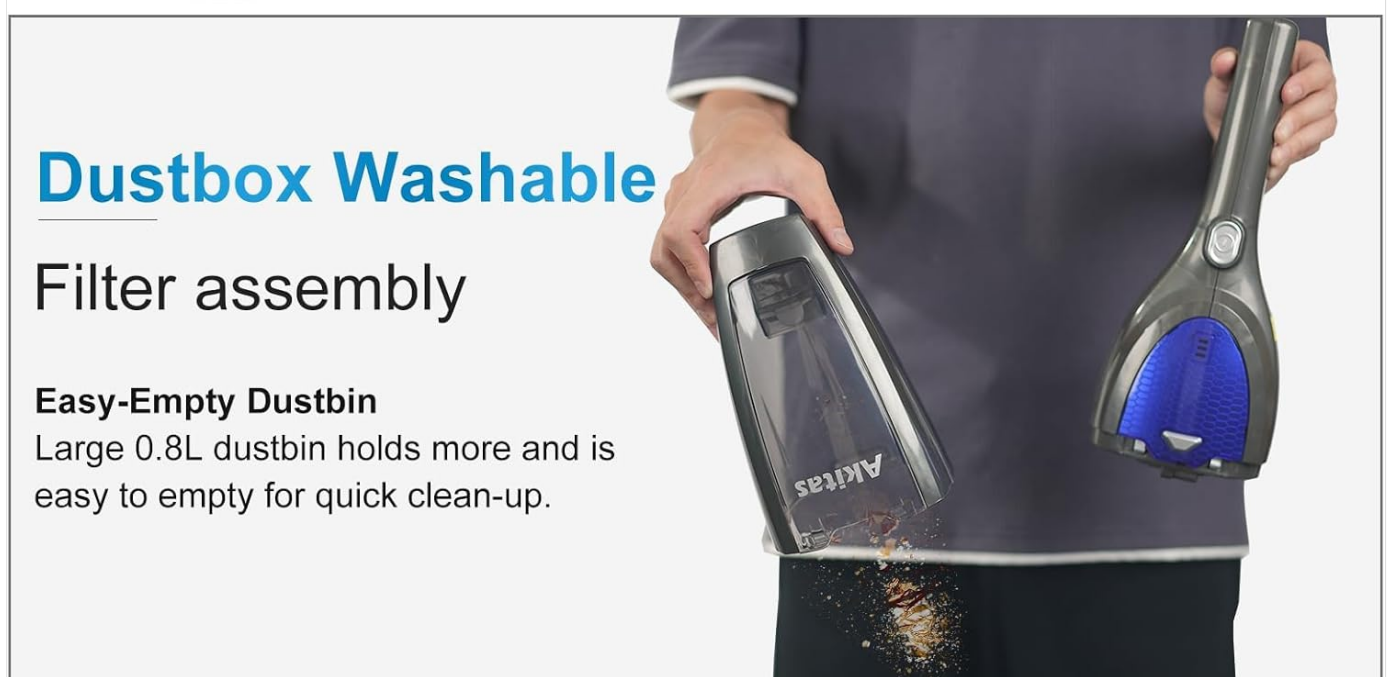


Figure 7: Illustration of the 6th generation anti-tangle roller design and the washable dustbin with its filter assembly, emphasizing ease of maintenance.

Troubleshooting

If you encounter issues with your Akitas U10, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is not charged. Power button not pressed correctly.	Ensure the vacuum is fully charged. Press the power button firmly.
Reduced suction power.	Dustbin is full. Filters are clogged. Blockage in the nozzle, tube, or brush head.	Empty the dustbin. Clean or replace filters. Check for and remove any blockages.
Brush roller stops spinning or LED lights on floor head flicker.	Hair or debris tangled in brush roller. Electrical contacts to brush head are faulty or dirty.	Clean the brush roller and remove any obstructions. Check the electrical contacts between the extension tube and the floor head, and between the main unit and the extension tube. Ensure they are clean and free of debris. If the issue persists, contact customer support.
Short battery runtime.	Battery not fully charged. Battery life degrading over time. Using Turbo Mode excessively.	Ensure the vacuum is fully charged before use. For older batteries, runtime may naturally decrease. Consider battery replacement if available. Use Turbo Mode only when necessary.

Specifications

Technical specifications for the Akitas U10 Cordless Vacuum Cleaner.

Feature	Detail
Brand	Akitas
Model Number	AKU10
Power/Wattage	150W

Feature	Detail
Voltage	22.2 Volts
Battery Type	Lithium-Ion
Runtime	Up to 40 minutes
Dustbin Capacity	0.8 Litres
Noise Level	80 dB
Number of Speeds	2
Filter Type	HEPA
Product Dimensions	28 x 15 x 68 cm
Item Weight	2.15 kg
Special Features	Cordless, 3-in-1 (Upright, Handheld, Stick), Foldable Design, LED Headlights, Anti-tangle roller

Warranty and Support

For warranty information and customer support, please refer to the documentation provided with your purchase or contact the retailer/manufacturer directly.

Keep your proof of purchase for any warranty claims.

For specific inquiries regarding the Akitas U10, please reach out to Akitas customer service.

© 2024 Akitas. All rights reserved.
This manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question