



Manuals.plus /

› maxylead /

› User Manual for maxylead Replacement Head for Philips Beauty Lady Shaver Satinshave

## maxylead BRL136

# User Manual

maxylead Replacement Head for Philips Beauty Lady Shaver Satinshave

## PRODUCT OVERVIEW

---

This manual provides instructions for the maxylead Replacement Shaver Foil Head, designed for compatibility with Philips Beauty Lady Shaver Series BRL136 and BRL146. These replacement heads are engineered to provide a close and comfortable shaving experience for legs and body, suitable for both wet and dry use.



Image: The maxylead replacement head shown attached to a Philips Beauty Lady Shaver, highlighting its integrated design.



Image: A pair of maxylead replacement shaver foil heads, displaying their front and back components.

### Key Features:

- **Compatibility:** Designed for Philips Beauty Lady Shaver Series BRL136 and BRL146.
- **Floating Foil:** Provides a closer, more even shave by gliding seamlessly along body contours.



Floating foil  
provides a closer  
more even shave

The floating foil glides  
seamlessly along your  
body's curves and contours,  
maintaining close contact  
with the skin for an even shave.

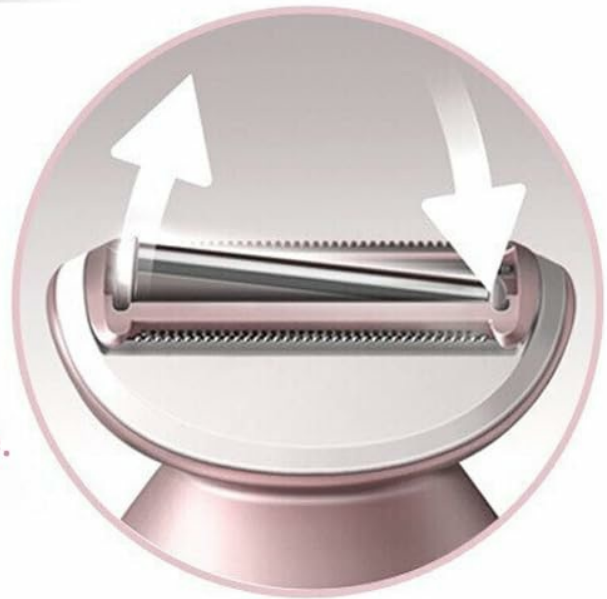


Image: A visual representation of the floating foil technology, showing how it adapts to body curves for consistent contact.

- **Pearl-tip Trimmers:** Rounded tips in front of and behind the shaving foil help protect skin from irritation.

## Pearl-tip trimmers protect your skin from irritation

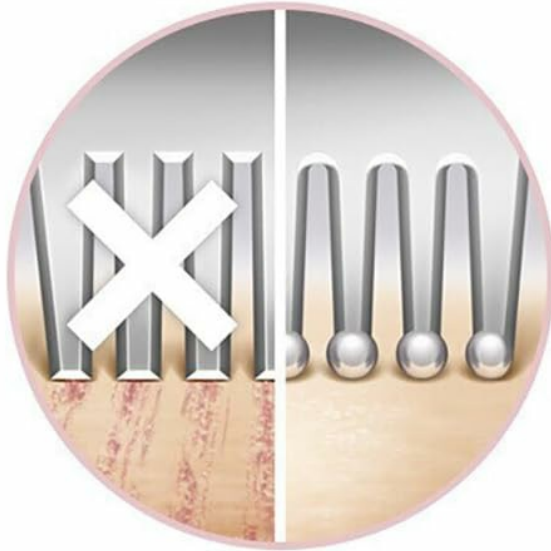


Image: A close-up diagram highlighting the pearl-tip trimmers, designed to prevent nicks and irritation during shaving.

- **Wet & Dry Use:** Suitable for use in the shower or bath for maximum convenience, featuring an anti-slip grip.



Image: A person demonstrating the use of the shaver on their leg, indicating its suitability for various environments.

- **Ergonomic Design:** Allows for comfortable shaving of legs, knees, ankles, underarms, and bikini area.

## SAFETY INFORMATION

---

**Warning:**

Keep away from naked flame or direct heat sources.

## SETUP AND INSTALLATION

---

The maxylead replacement head is designed for easy installation on compatible Philips Beauty Lady Shavers.

1. **Preparation:** Ensure your Philips Beauty Lady Shaver is turned off and unplugged (if applicable) before attempting to replace the head.
2. **Removing the Old Head:** Gently press the release buttons or mechanism on your shaver to detach the existing shaving head. Refer to your original shaver's manual for specific instructions if needed.
3. **Attaching the New Head:** Align the maxylead replacement head with the shaver body. Press firmly until you hear a click, indicating it is securely locked into place. Ensure the head is flush with the shaver body and does

not wobble.

4. **Verification:** Lightly tug on the installed head to confirm it is firmly attached before use.

## OPERATING INSTRUCTIONS

Once the replacement head is installed, operate your shaver as per its original instructions. The maxylead replacement head maintains the shaver's wet and dry capabilities.

- **Wet Shaving:** For a more comfortable shave, use with water, foam, or gel. The anti-slip grip ensures secure handling even when wet.
- **Dry Shaving:** Can be used on dry skin for quick touch-ups.
- **Shaving Technique:** Glide the shaver gently over the skin, moving against the direction of hair growth. The floating foil will adapt to your body's contours.
- **Sensitive Areas:** Use extra care on sensitive areas. The pearl-tip trimmers are designed to minimize irritation.

## MAINTENANCE

Regular cleaning of the replacement head is crucial for optimal performance and hygiene.

1. **Daily Cleaning:** After each use, rinse the shaving head under running water to remove hair clippings and residue.
2. **Thorough Cleaning:** Periodically, detach the shaving head and clean it more thoroughly. You may use a small brush (often included with shavers) to remove stubborn hair or debris from the foil and trimmers.
3. **Drying:** Allow the shaving head to air dry completely before reattaching it to the shaver or storing it. Do not wipe the foil with a towel as this can damage it.
4. **Replacement:** Shaving heads wear down over time. Replace your maxylead head when you notice a decrease in shaving performance, increased irritation, or visible damage to the foil or trimmers. The lifespan of a shaving head depends on usage frequency and hair type.

## TROUBLESHOOTING

If you encounter issues with your maxylead replacement head, consider the following common solutions:

Problem	Possible Cause	Solution
Poor shaving performance / Not cutting hair effectively	Head is clogged with hair or debris; Head is worn out; Incorrect shaving angle.	Clean the head thoroughly; Replace the head if it's old or damaged; Ensure you are gliding the shaver against hair growth.
Skin irritation / Nicks or cuts	Head is worn or damaged; Applying too much pressure; Skin not prepared properly (e.g., dry shaving on sensitive skin).	Inspect the head for damage and replace if necessary; Use light pressure; Consider wet shaving with foam/gel for sensitive skin.
Head does not attach securely	Incorrect alignment; Debris in the attachment mechanism.	Ensure correct alignment with the shaver body; Clean the attachment area on both the head and shaver.

## SPECIFICATIONS

---

- **Model Compatibility:** Philips Beauty Lady Shaver Series BRL136, BRL146
- **Product Dimensions:** 2.17 x 1.57 x 0.75 inches
- **Item Weight:** 0.32 ounces
- **Manufacturer:** maxylead
- **UPC:** 786194169081
- **ASIN:** B0CGRPNZ2T

## WARRANTY AND SUPPORT

---

For information regarding warranty coverage or product support, please refer to the original purchase documentation or contact maxylead customer service. Contact details may be available on the product packaging or the retailer's website where the product was purchased.

Please note that this replacement head is a third-party accessory and its warranty may differ from the original shaver's warranty.

